




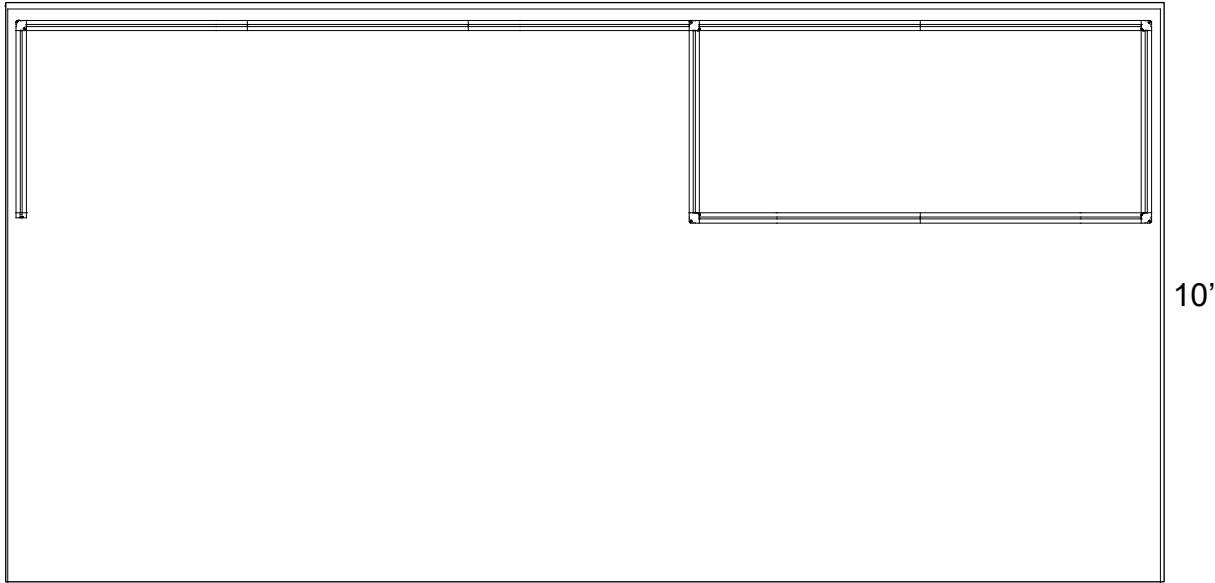

Plan View

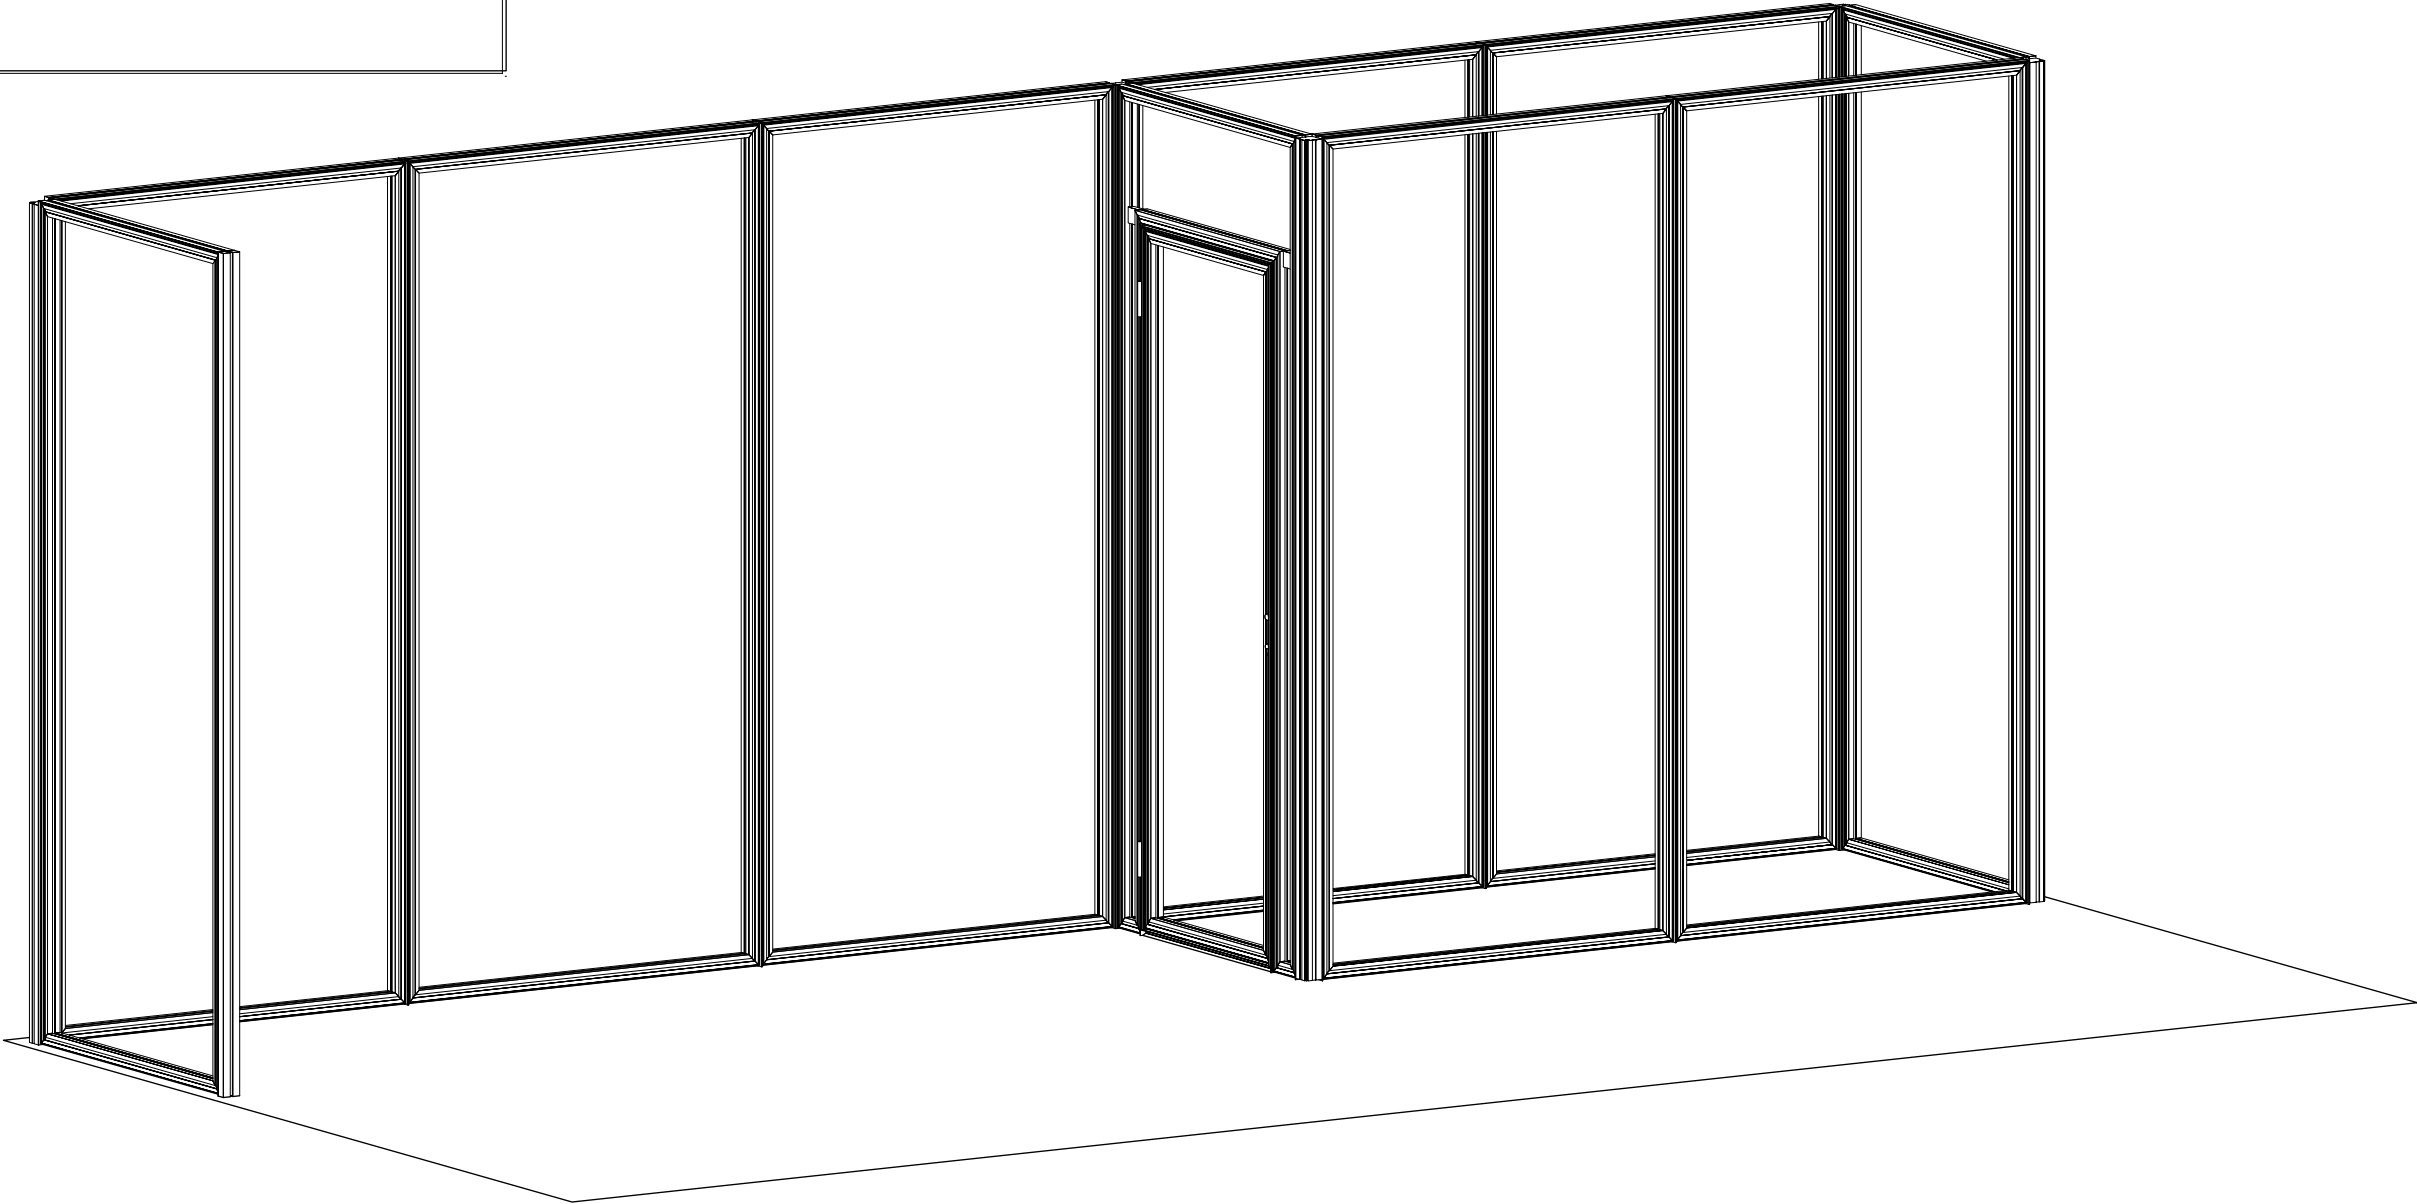

SETUP INSTRUCTIONS

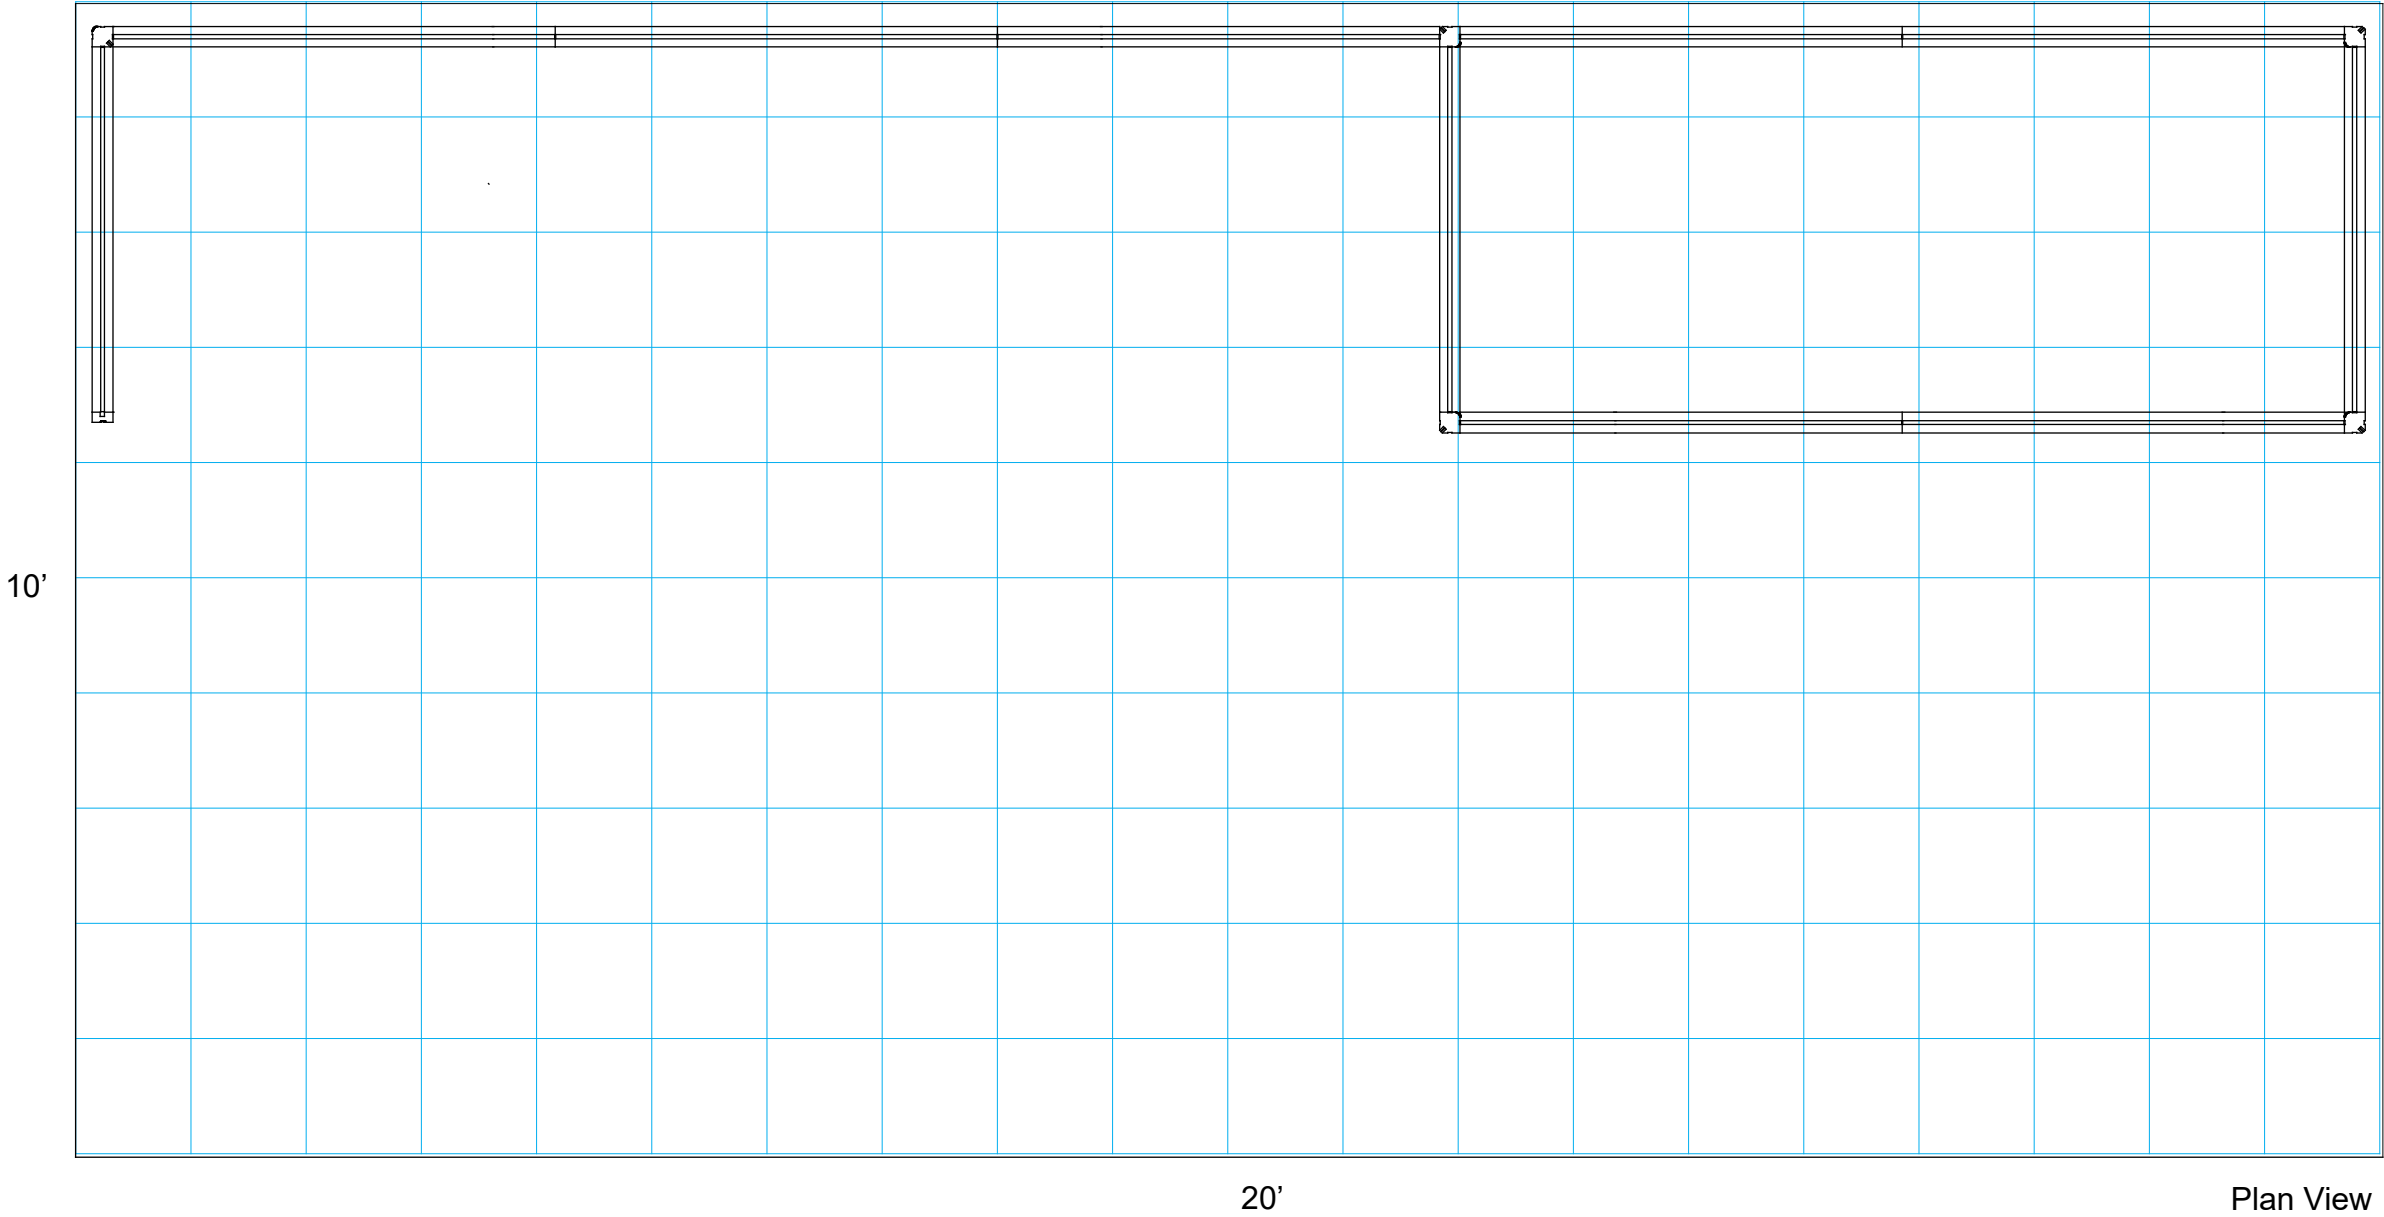

General Setup Instructions


- Read entire setup instruction manual prior to unpacking parts and pieces.
- The setup instructions are created specifically for this configuration.
- Setup instructions are laid out sequentially in steps, including exploded views with detailed explanation for assembly.

Cleaning & Packing


- For Cleaning Metal, Plex, & Laminate Parts: Use a **MILD NON-ABRASIVE** cleanser and soft cloth/paper towel to clean all surfaces.
- Keep exhibit components away from heat and prolonged sun exposure.
- **Heat and UV exposure will warp and fade components.**
- Retain all provided Packing Materials. All provided packing materials are for ease of repacking & component protection.

Disassembly


- For loss prevention, tighten all set screws and locks during disassembly.

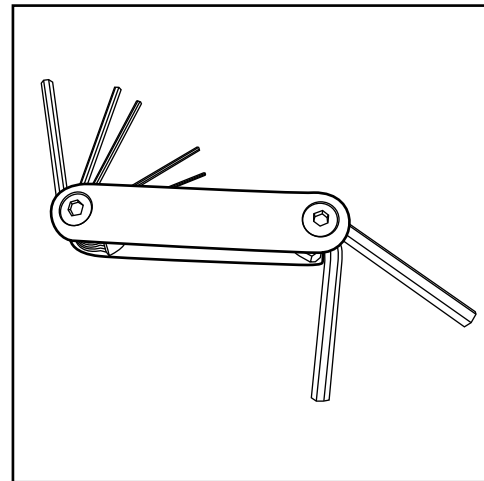


Hex Tool - Essential for Assembly

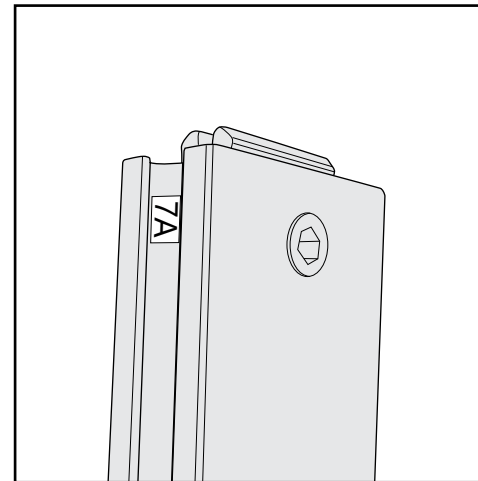


Part Identification - Numbering

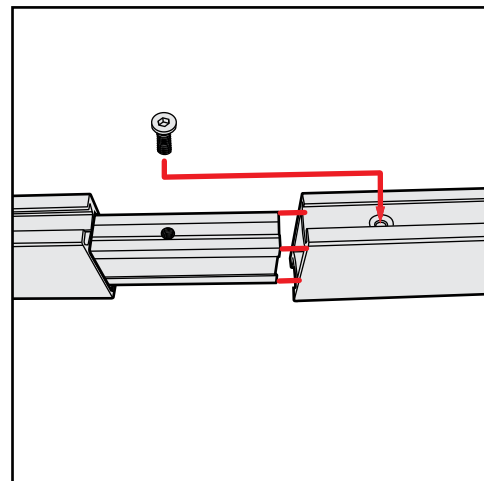


Spline Connection

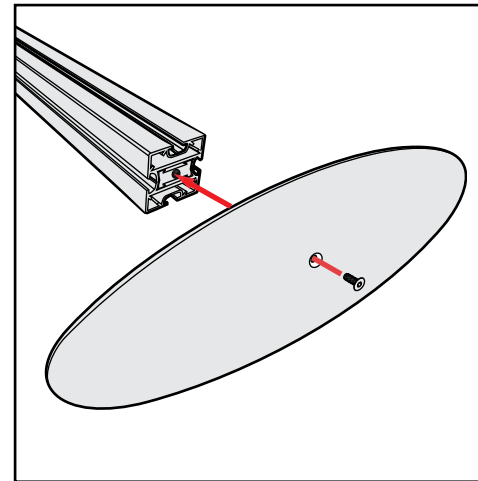

Base Plate & Extrusion Connection

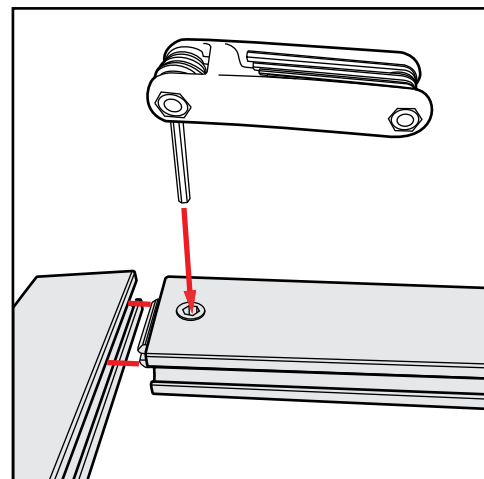

Extrusion & Lock Connection

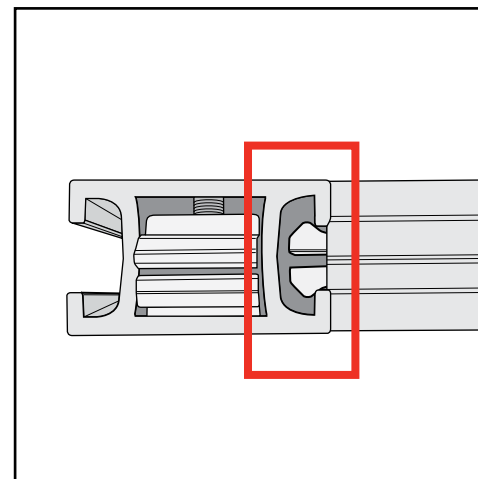


Engaged Lock



WARNING

DO NOT USE POWER TOOLS

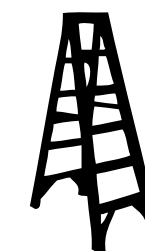

LADDERS OR LIFTS
MAY BE REQUIRED

ALL CONNECTIONS MUST
BE TIGHTLY SECURED




Side-by-Side Assembly

- 1) Frames: Place frames side-by-side with one higher than the other, then slide panel down to lock panels securely together.
- 2) Corner Connectors: Repeat Step 1 for installing corner connectors to frames.

Side-by-Side Disassembly


- 1) Pull pin lock outwards to disengage.
- 2) Pull frames upward and apart at the same time to detach.

Assembly

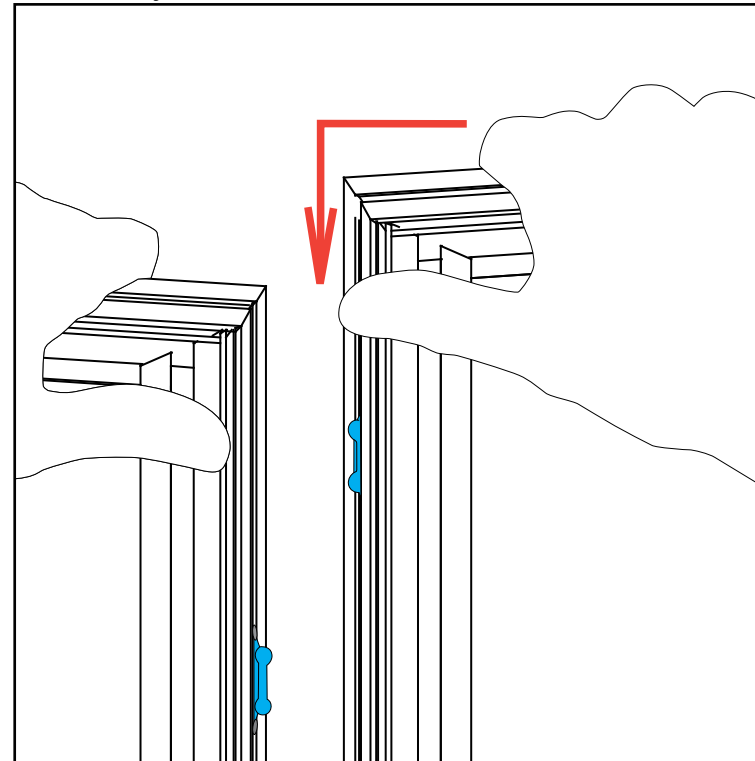


Assembly Cont'd

Push pin lock into hole of connecting frame.
Note: Block of pin lock will secure in groove.

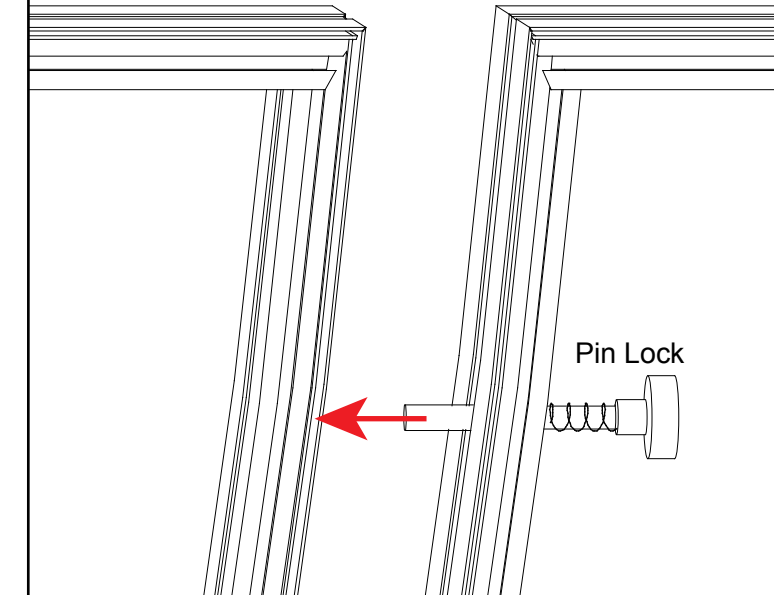

Corner Connector

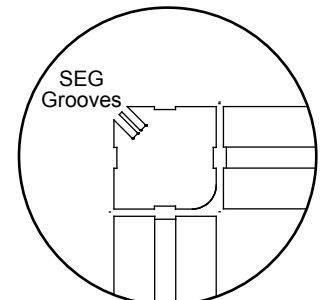

Top View

Note: Orientation of Corner Connector may change.


Stacking Assembly

- 1) Place one horizontal frame on top of the other, lining up the center grooves.
- 2) Turn stacking lock clockwise to tighten into place. Repeat for each lock.


Stacking Disassembly

- 1) Turn the stacking lock counter-clockwise to loosen.
- 2) The whole spring on the stacking lock should be in view to release each frame. The disengaged spring should release the stacking lock. If not, keep turning the stacking lock until it disengages.

Stacking

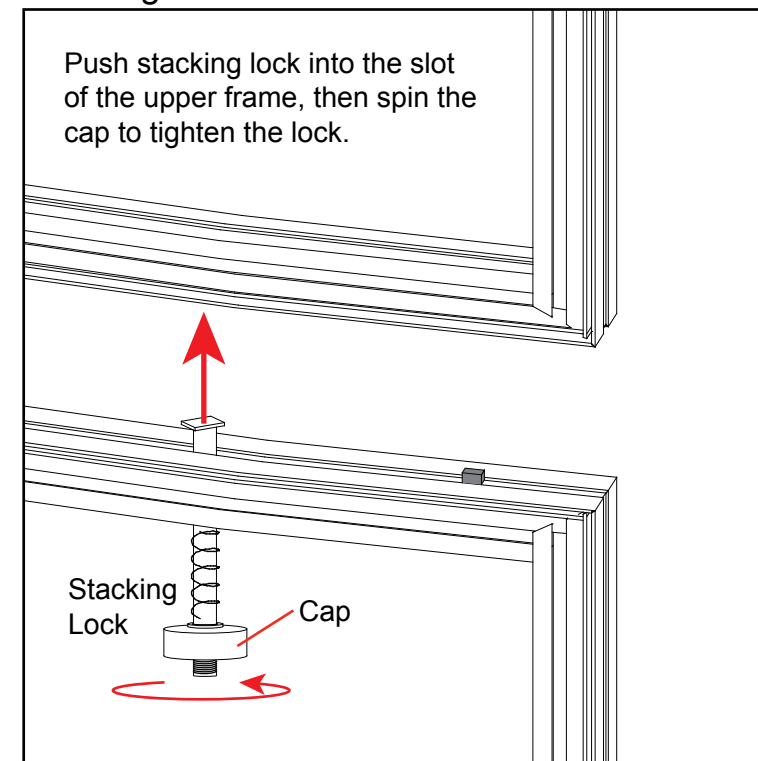


Unstacking

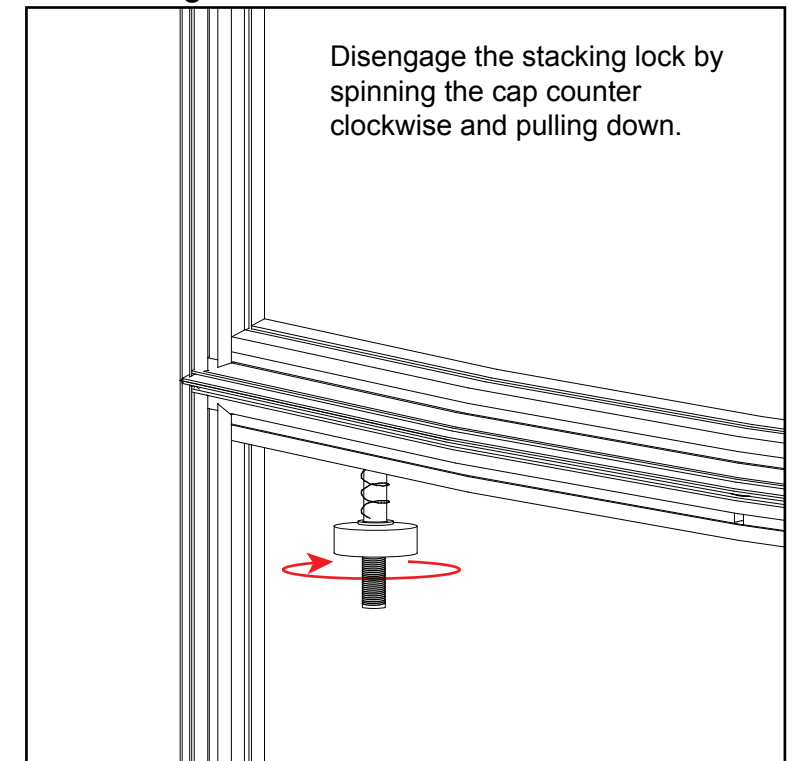


SEG Graphic Installation *in 3 Steps*

The Perfect Fit


STEP 1: Attach Corners

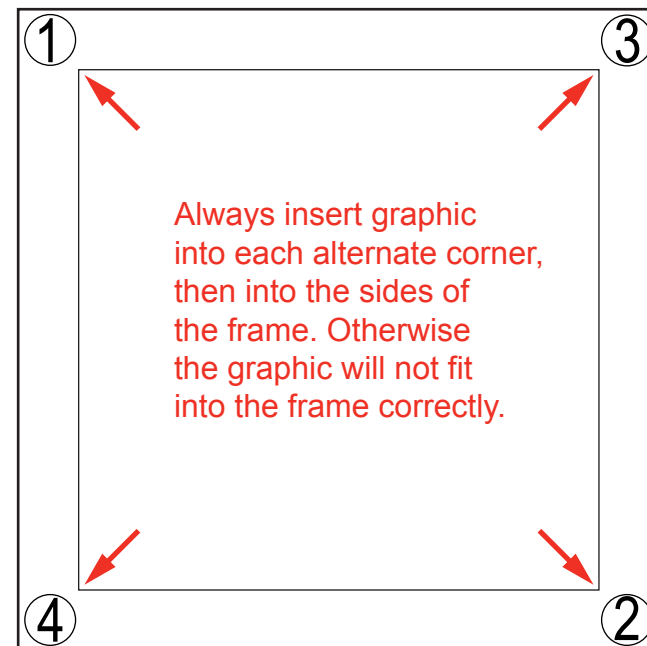

STEP 2: Attach Middle

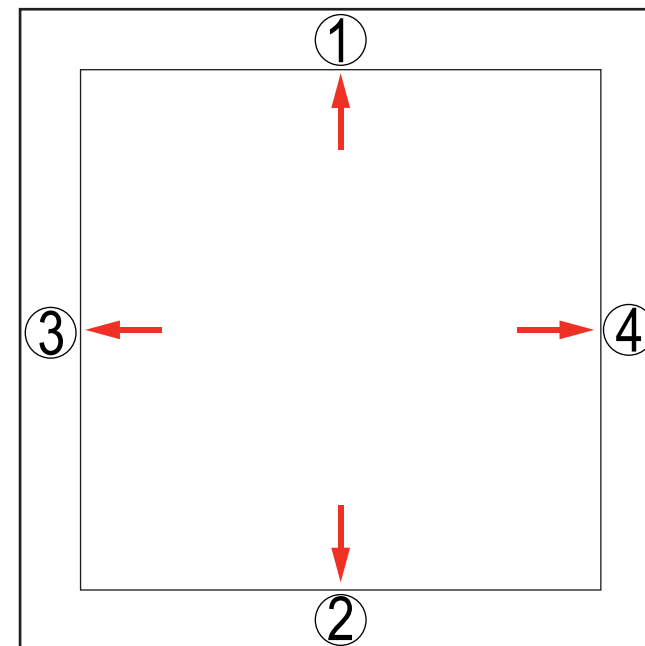

STEP 3: Attach Sides

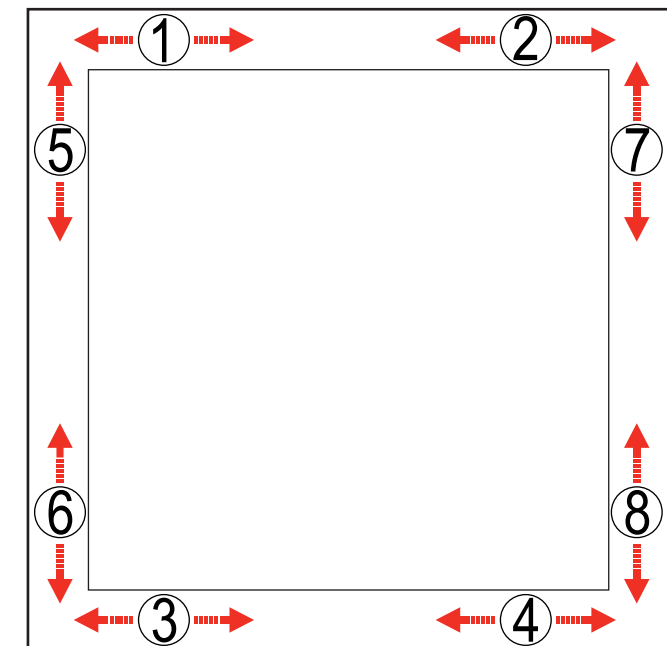

Insert narrow side of silicone welt into the channel at corner **1**, with fabric to the outside.

Repeat for opposite corner **2**, then corner **3**, then corner **4**.

Once corners are attached, press the middle of edge **1** into the channel. Then press middle of edge **2** into the channel on opposite side.

Repeat with edge **3** & **4**.

Once the middle of sides are attached, fully press the silicone welt into the channel, between center and corner at location **1**. Repeat the process between center and corner at location **2**.

Do the same for welt on opposite side, at locations **3** & **4**. Then repeat for locations **5** & **6** and **7** & **8**.

Once the welt is fully inserted on all sides, smooth out edges as needed for a perfect fit.



To remove the graphic from the frame, locate the fabric **pull tab**. Gently pull on the tab to remove the graphic.

Install video:




*Retain all packing materials.
DO NOT DISCARD.*


CRATE PACKING

Item	Qty.	Description
1	1	46"w x 95"h Gravitee Panel
1A	1	95"h Gravitee EndCap
2	1	46"w x 95"h Gravitee Panel
3	1	94.5"h Gravitee Corner Post w/ caps
4	1	38"w x 95"h Gravitee Panel
5	1	94.5"h Gravitee Corner Post w/ caps
6	1	46"w x 95"h Gravitee Panel
7	1	46"w x 95"h Gravitee Panel
8	1	94.5"h Gravitee Corner Post w/ caps
9	1	38"w x 95"h Gravitee Panel w/ Door
10	1	94.5"h Gravitee Corner Post w/ caps
11	1	46"w x 95"h Gravitee Panel
12	1	46"w x 95"h Gravitee Panel
13	1	46"w x 95"h Gravitee Panel
14	1	95"h Gravitee Corner Post
15	1	38"w x 95"h Gravitee Panel

Steps:
1) Assemble Gravitee Panels & Posts [1 through 15] together in numerical order as shown, then attach EndCap [1A] to Panel [15].
See Gravitee Side-by-Side Assembly instructions in the General Information pages.

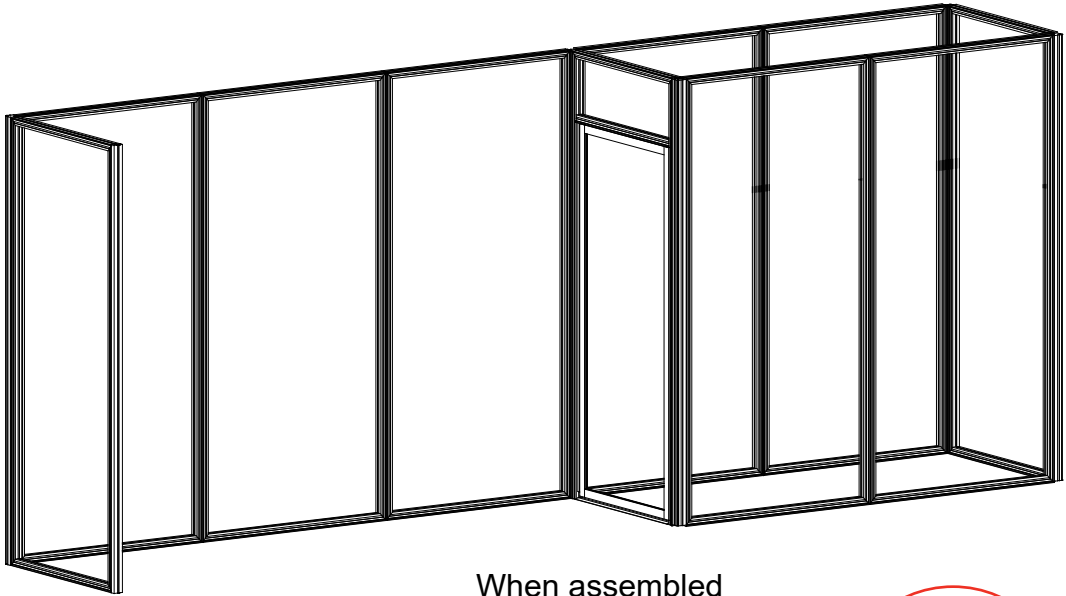

When assembled

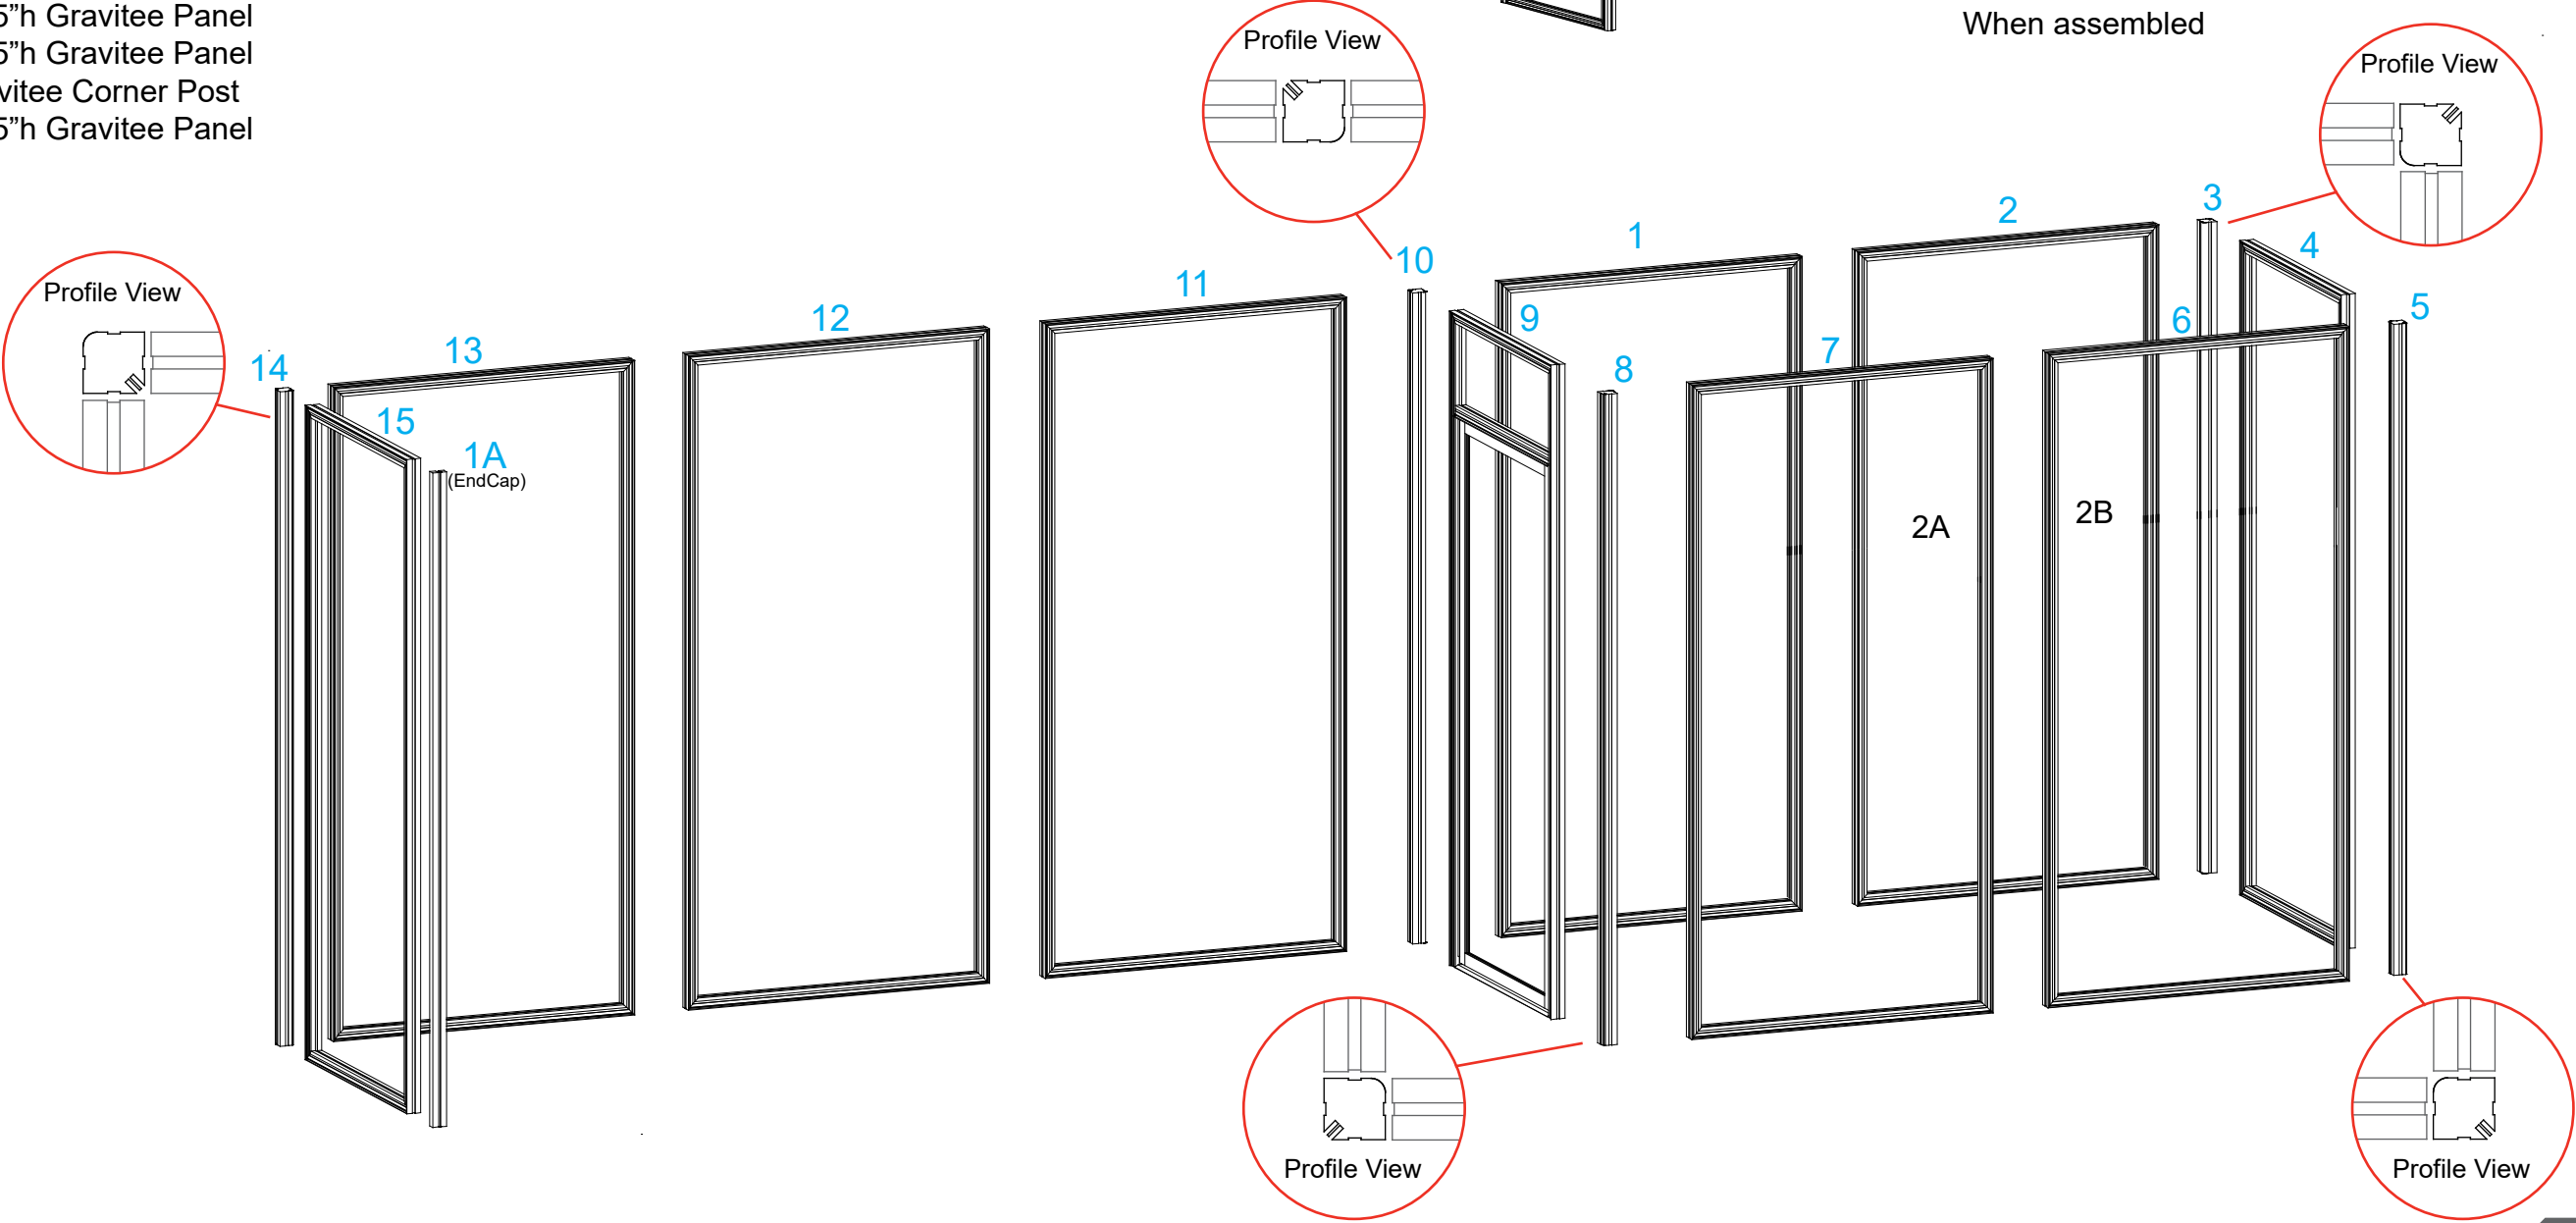

Steps:

- 1) Install Door onto Panel [9]. See [Door Attachment](#) detail.
- 2) Apply SEG Graphics to back of Panels [1/2], front of door shroud and closet panels [9,6/7], front of Panels [11/12/13], front of end panel [4], and front & back of Panel [15]. See SEG Graphic Installation in 3-Steps, The Perfect Fit page.

