

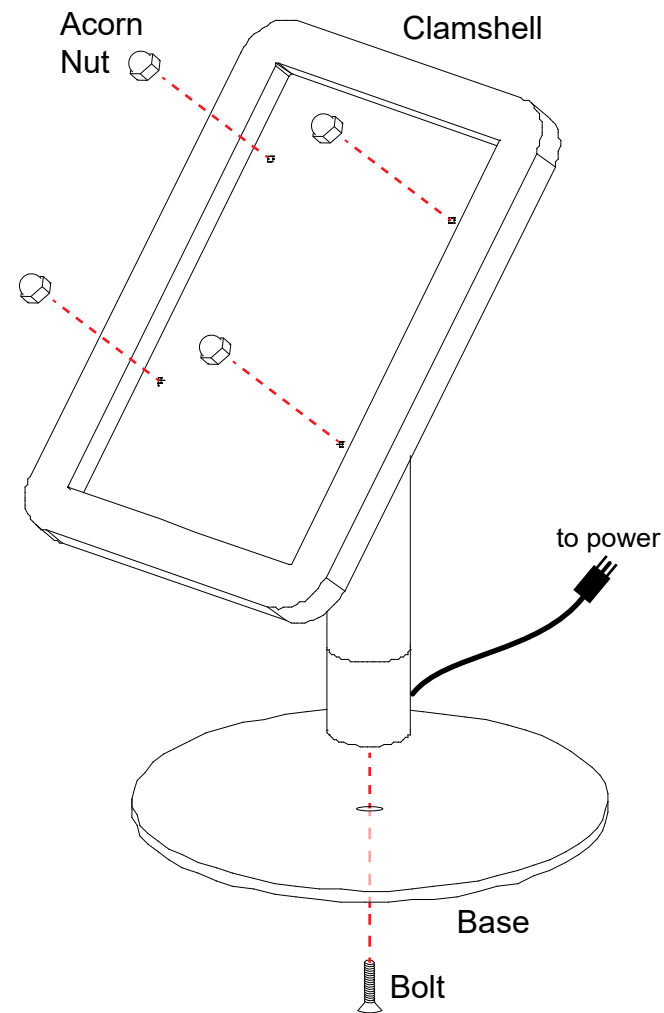


Steps:

- 1) Attach mount plate to post, using set screw.  
**NOTE: Mount Plate must rotate to left and right before installing clamshell.**
- 2) Attach base to post assembly, using bolt.
- 3) Attach clamshell to mount plate, using acorn nuts.
- 4) Insert iPad in clamshell, then route cords. See [Cord Management for iPad](#) detail.

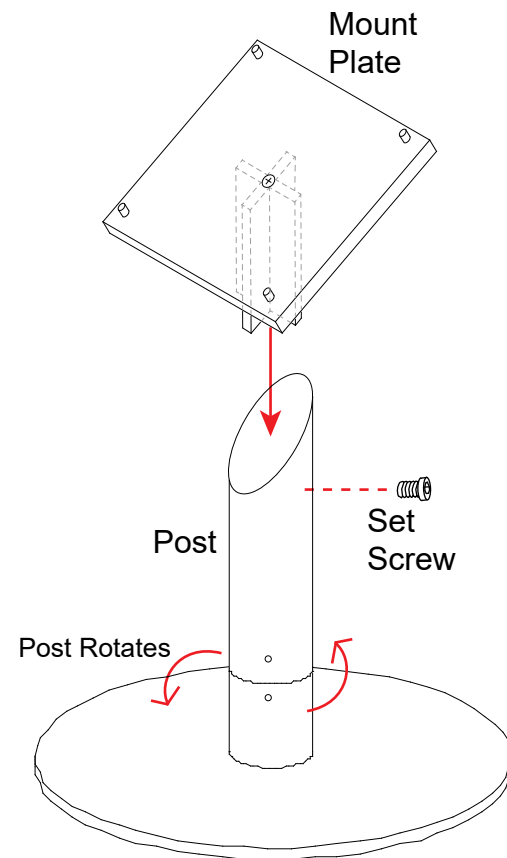


Rotate clamshell to turn iPad from portrait to landscape orientation.

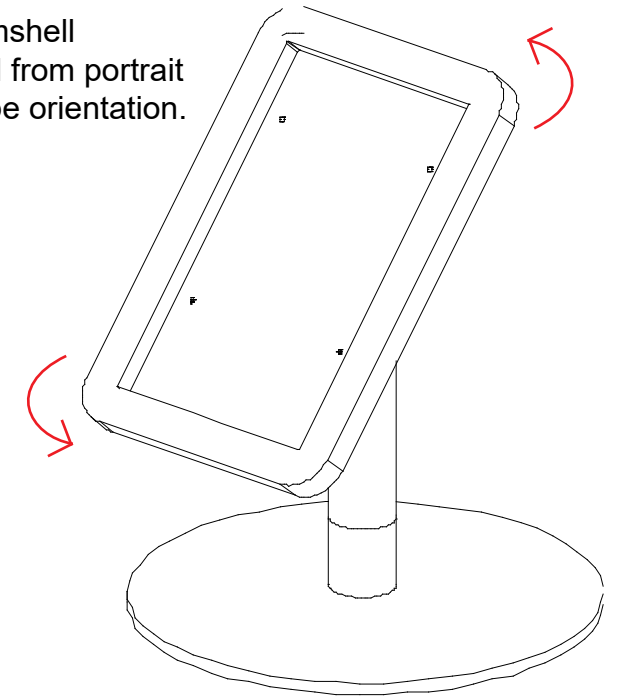

Completed Assembly

Cord Management for iPad

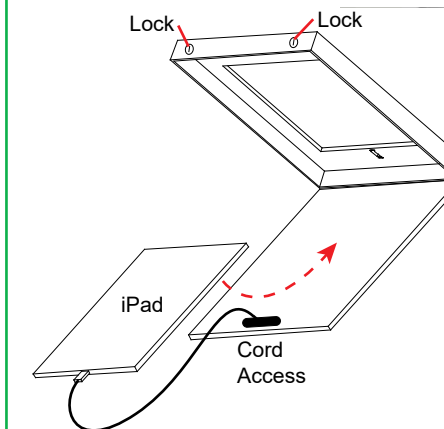

Feed iPad cord through top hole of post, then out bottom hole of post. Connect to power.

# SETUP INSTRUCTIONS