


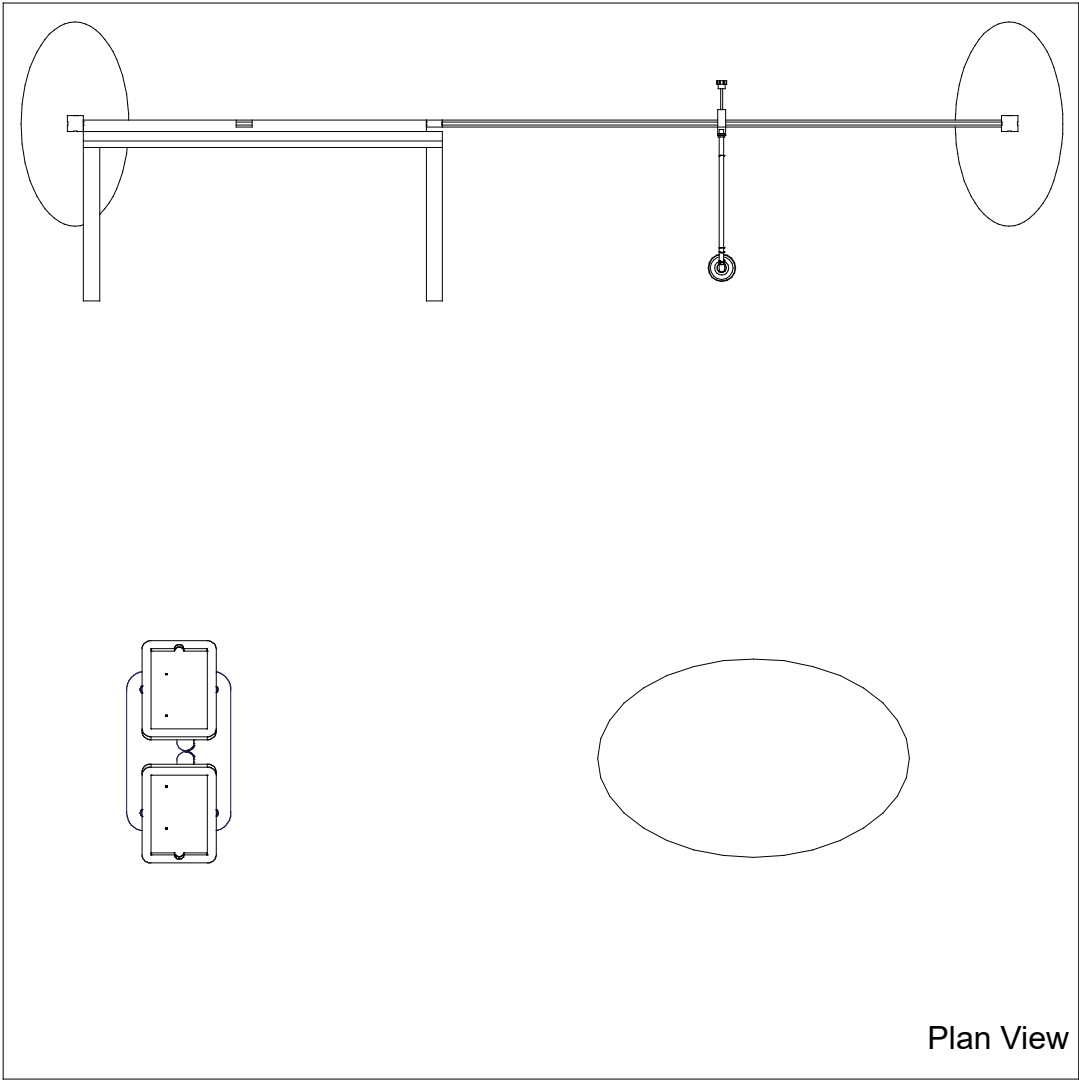


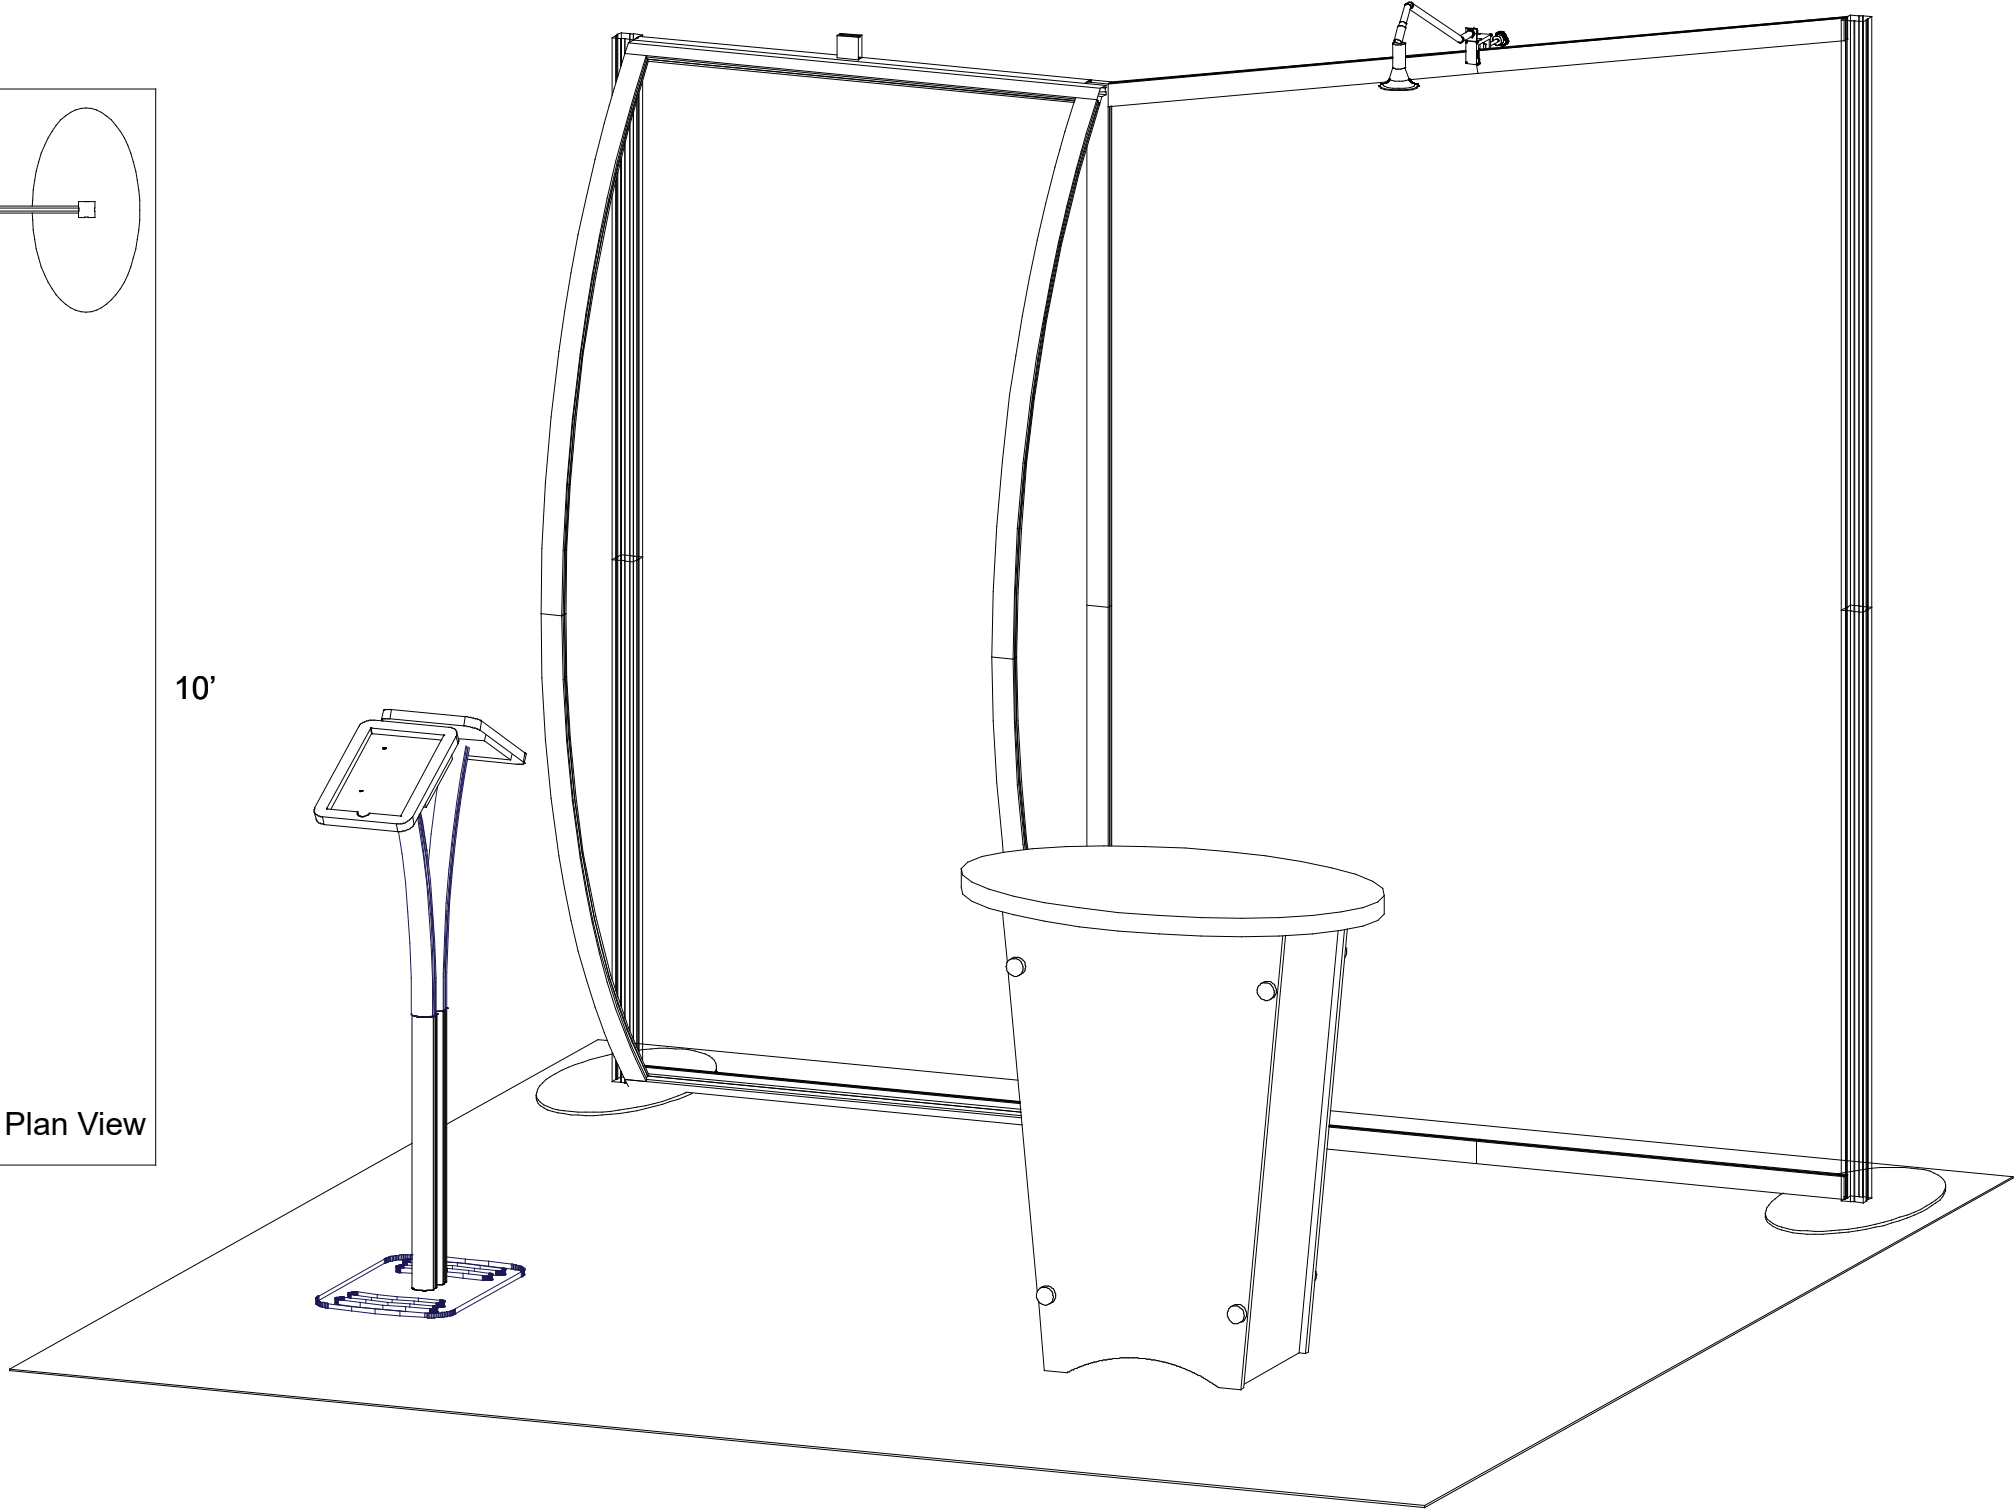

Plan View



SETUP INSTRUCTIONS

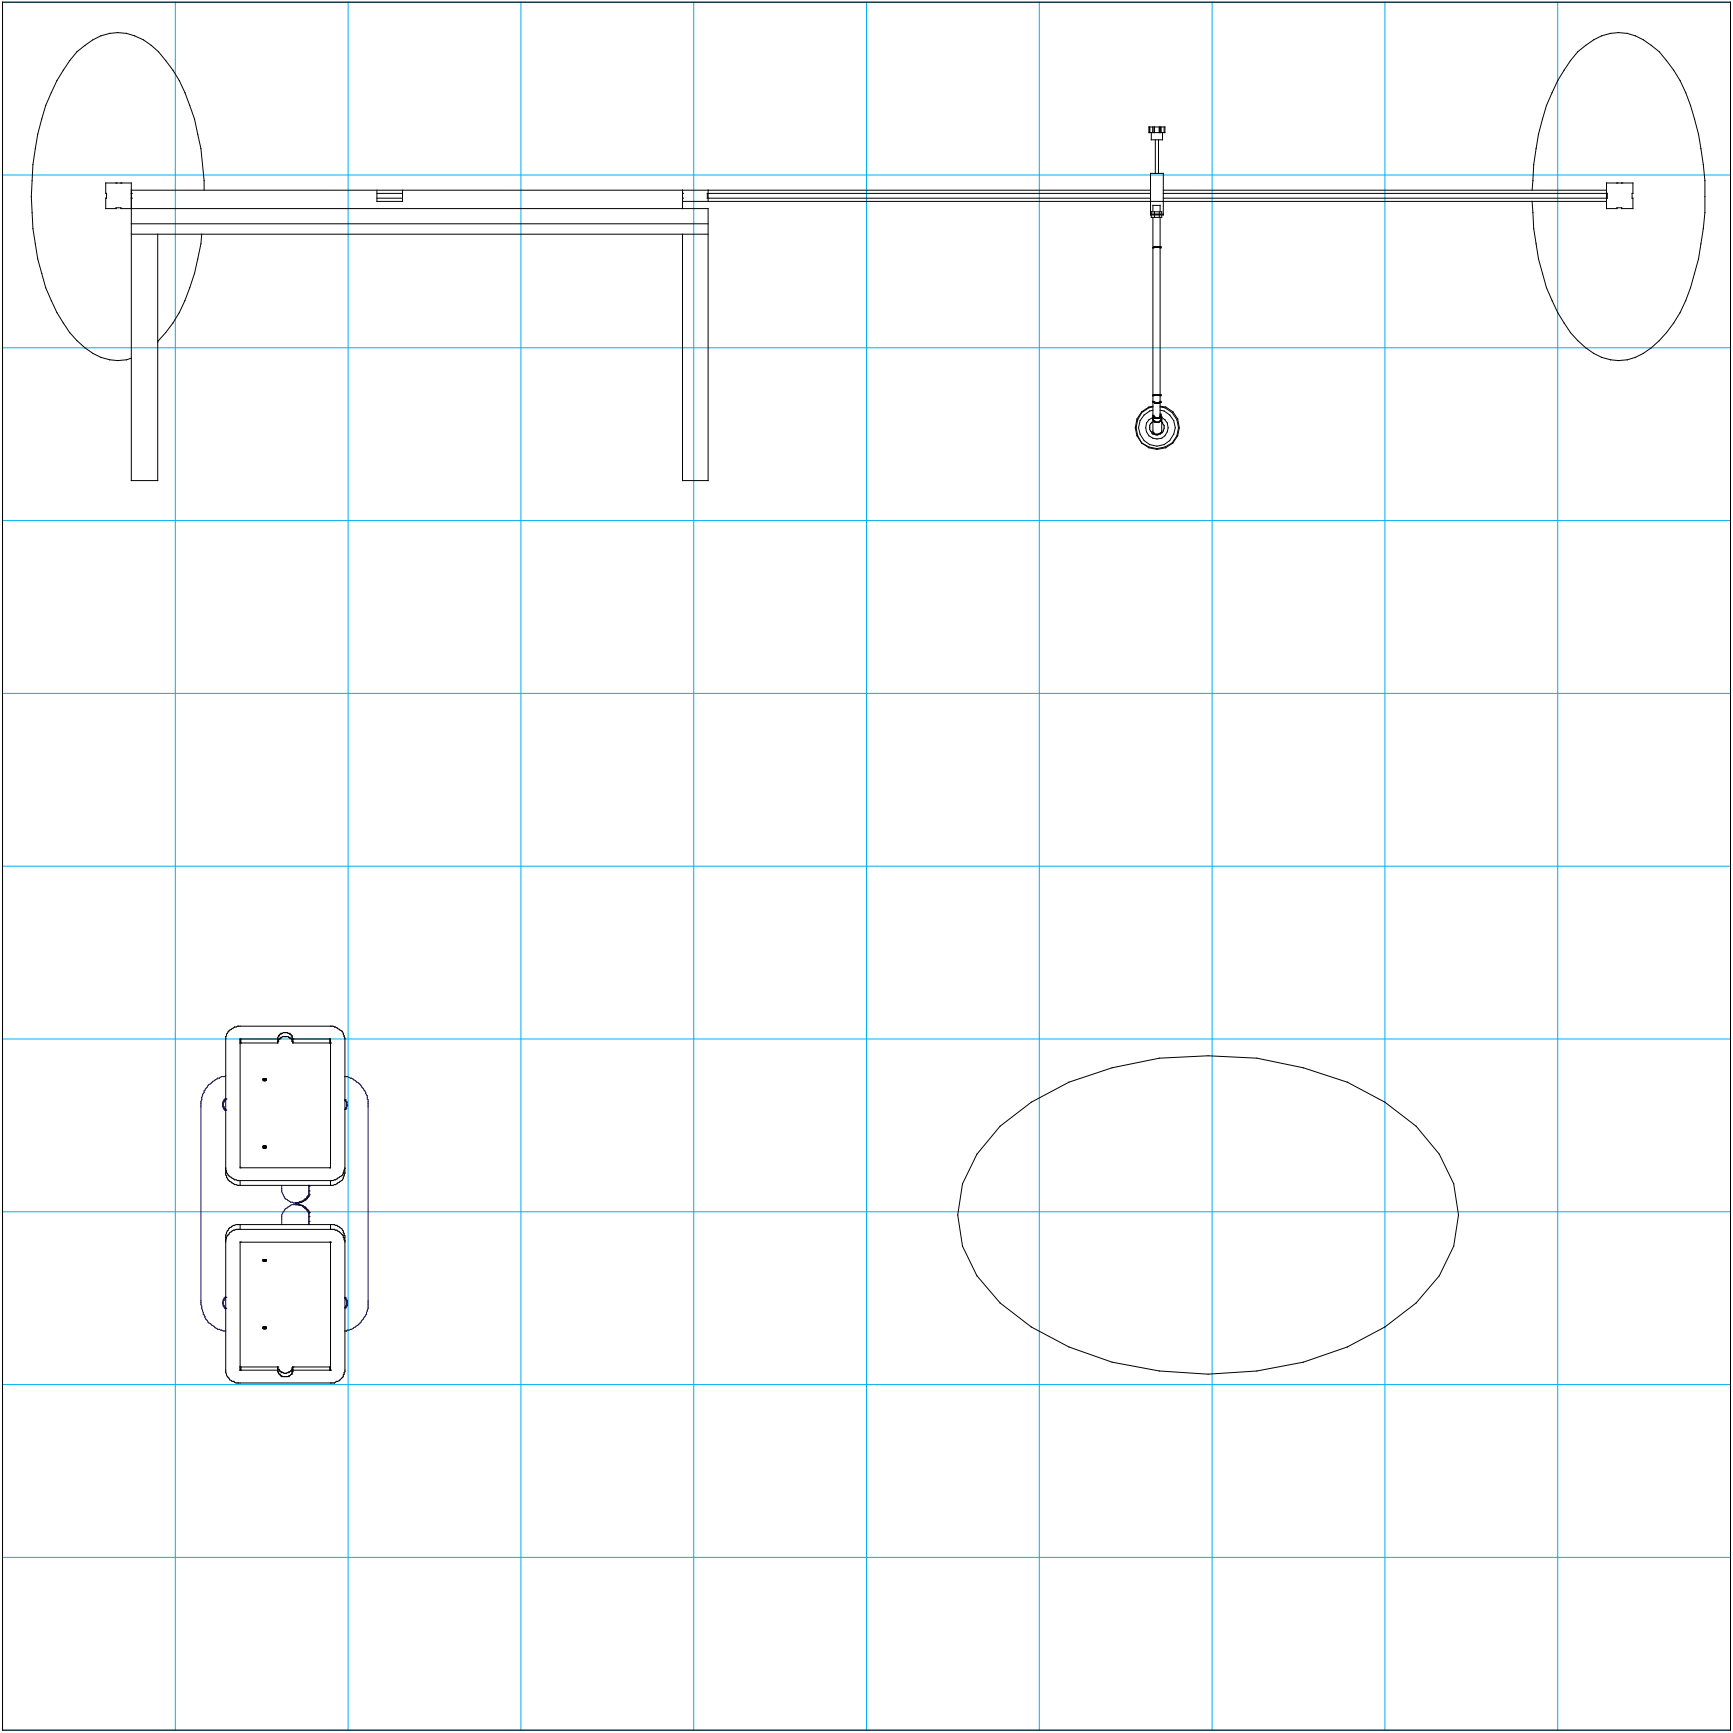

= 1 sq foot

General Setup Instructions


- Read entire setup instruction manual prior to unpacking parts and pieces.
- The setup instructions are created specifically for this configuration.
- Setup instructions are laid out sequentially in steps, including exploded views with detailed explanation for assembly.

Cleaning & Packing


- For Cleaning Metal, Plex, & Laminate Parts: Use a **MILD NON-ABRASIVE** cleanser and soft cloth/paper towel to clean all surfaces.
- Keep exhibit components away from heat and prolonged sun exposure.
Heat and UV exposure will warp and fade components.
- Retain all provided Packing Materials. All provided packing materials are for ease of repacking & component protection.

Disassembly


- For loss prevention, tighten all set screws and locks during disassembly.

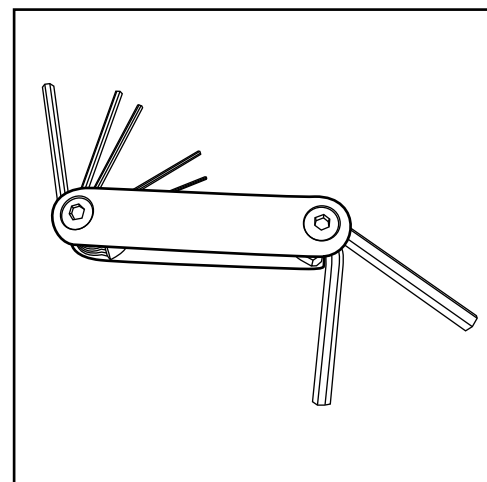


Hex Tool - Essential for Assembly

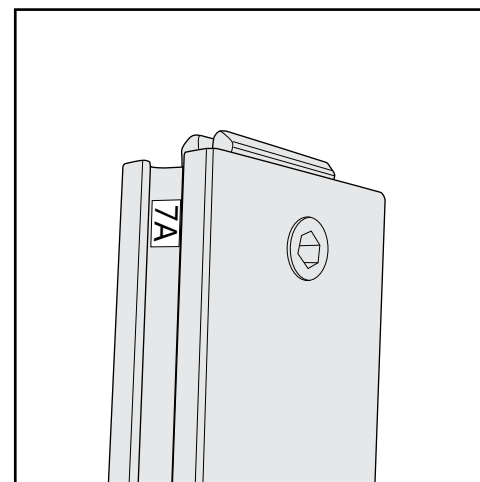


Part Identification - Numbering

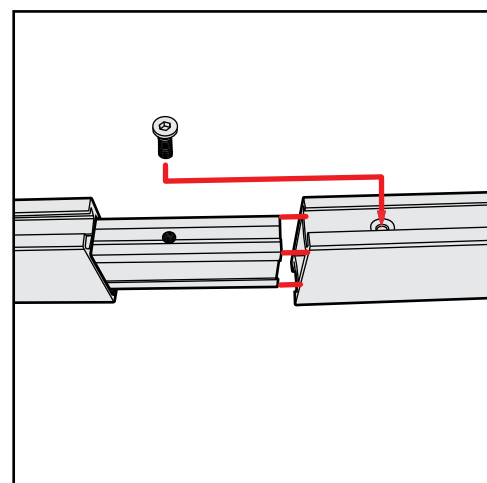


Spline Connection

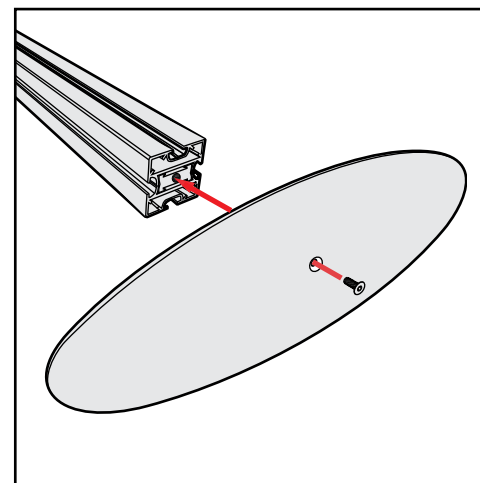

Base Plate & Extrusion Connection

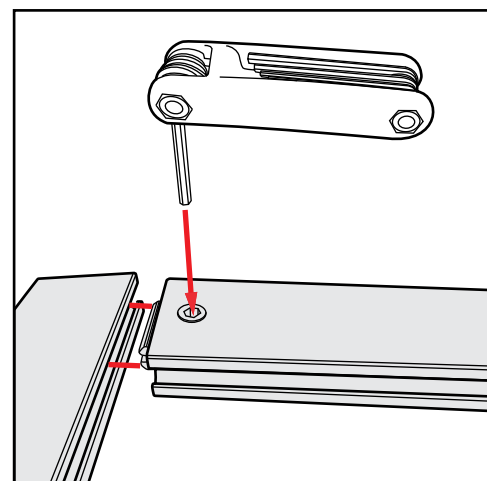


Extrusion & Lock Connection

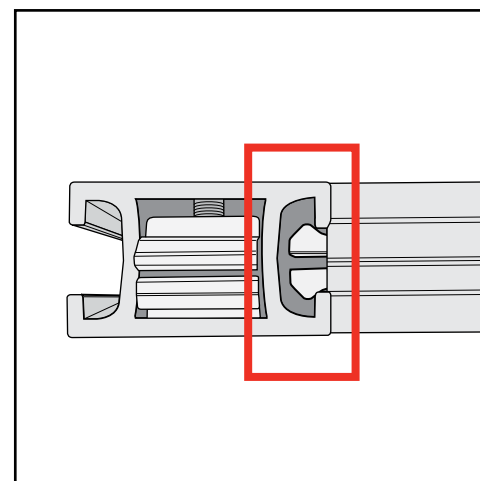

Engaged Lock



WARNING

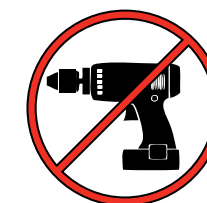

DO NOT USE POWER TOOLS



LADDERS OR LIFTS
MAY BE REQUIRED



ALL CONNECTIONS MUST
BE TIGHTLY SECURED



© 2026


Order #XXXXX Crate Packing

CRATE PACKING

Item	Quantity	Description
1	2	Base Plate
2	1	42" h Vertical Extrusion
2A	1	47.5" h Vertical Extrusion
3	1	42" h Vertical Extrusion
3A	1	47.5" h Vertical Extrusion
4	1	42.125" h Vertical Extrusion
5	1	42.125" h Vertical Extrusion
6	1	38.242" h 90° Horizontal Extrusion
7	1	40.033" h 135° Horizontal Extrusion
8	1	38.242" h 90° Horizontal Extrusion
9	1	40.033" h 135° Horizontal Extrusion
10a/10b	1/1	31.192" h Horizontal Extrusion
11a/11b	1/1	31.831" h 10° Angle Cut One End Horizontal Extrusion

Steps:



- 1) Attach lower vertical extrusions 2 and 2A to base plates 1.
- 2) Connect upper vertical extrusions 3 and 3A to lower vertical extrusions 2 and 2A.
- 3) Attach horizontal extrusion 7 to horizontal extrusion 6 and horizontal extrusion 9 to horizontal extrusion 8 by using V10 Pressure Lock.
- 4) Connect upper vertical extrusion 5 to lower vertical extrusion 4.
- 5) Connect horizontal extrusions 6/7 between vertical extrusions 2 and 4, then connect horizontal extrusions 8/9 between vertical extrusions 3 and 5.
- 6) Connect horizontal extrusions 10a to 10b together and connect horizontal extrusions 11a to 11b together.
- 7) Connect horizontal extrusions 10a/10b between vertical extrusions 4 and 2A, then connect horizontal extrusions 11a/11b between vertical extrusions 5 and 3A.

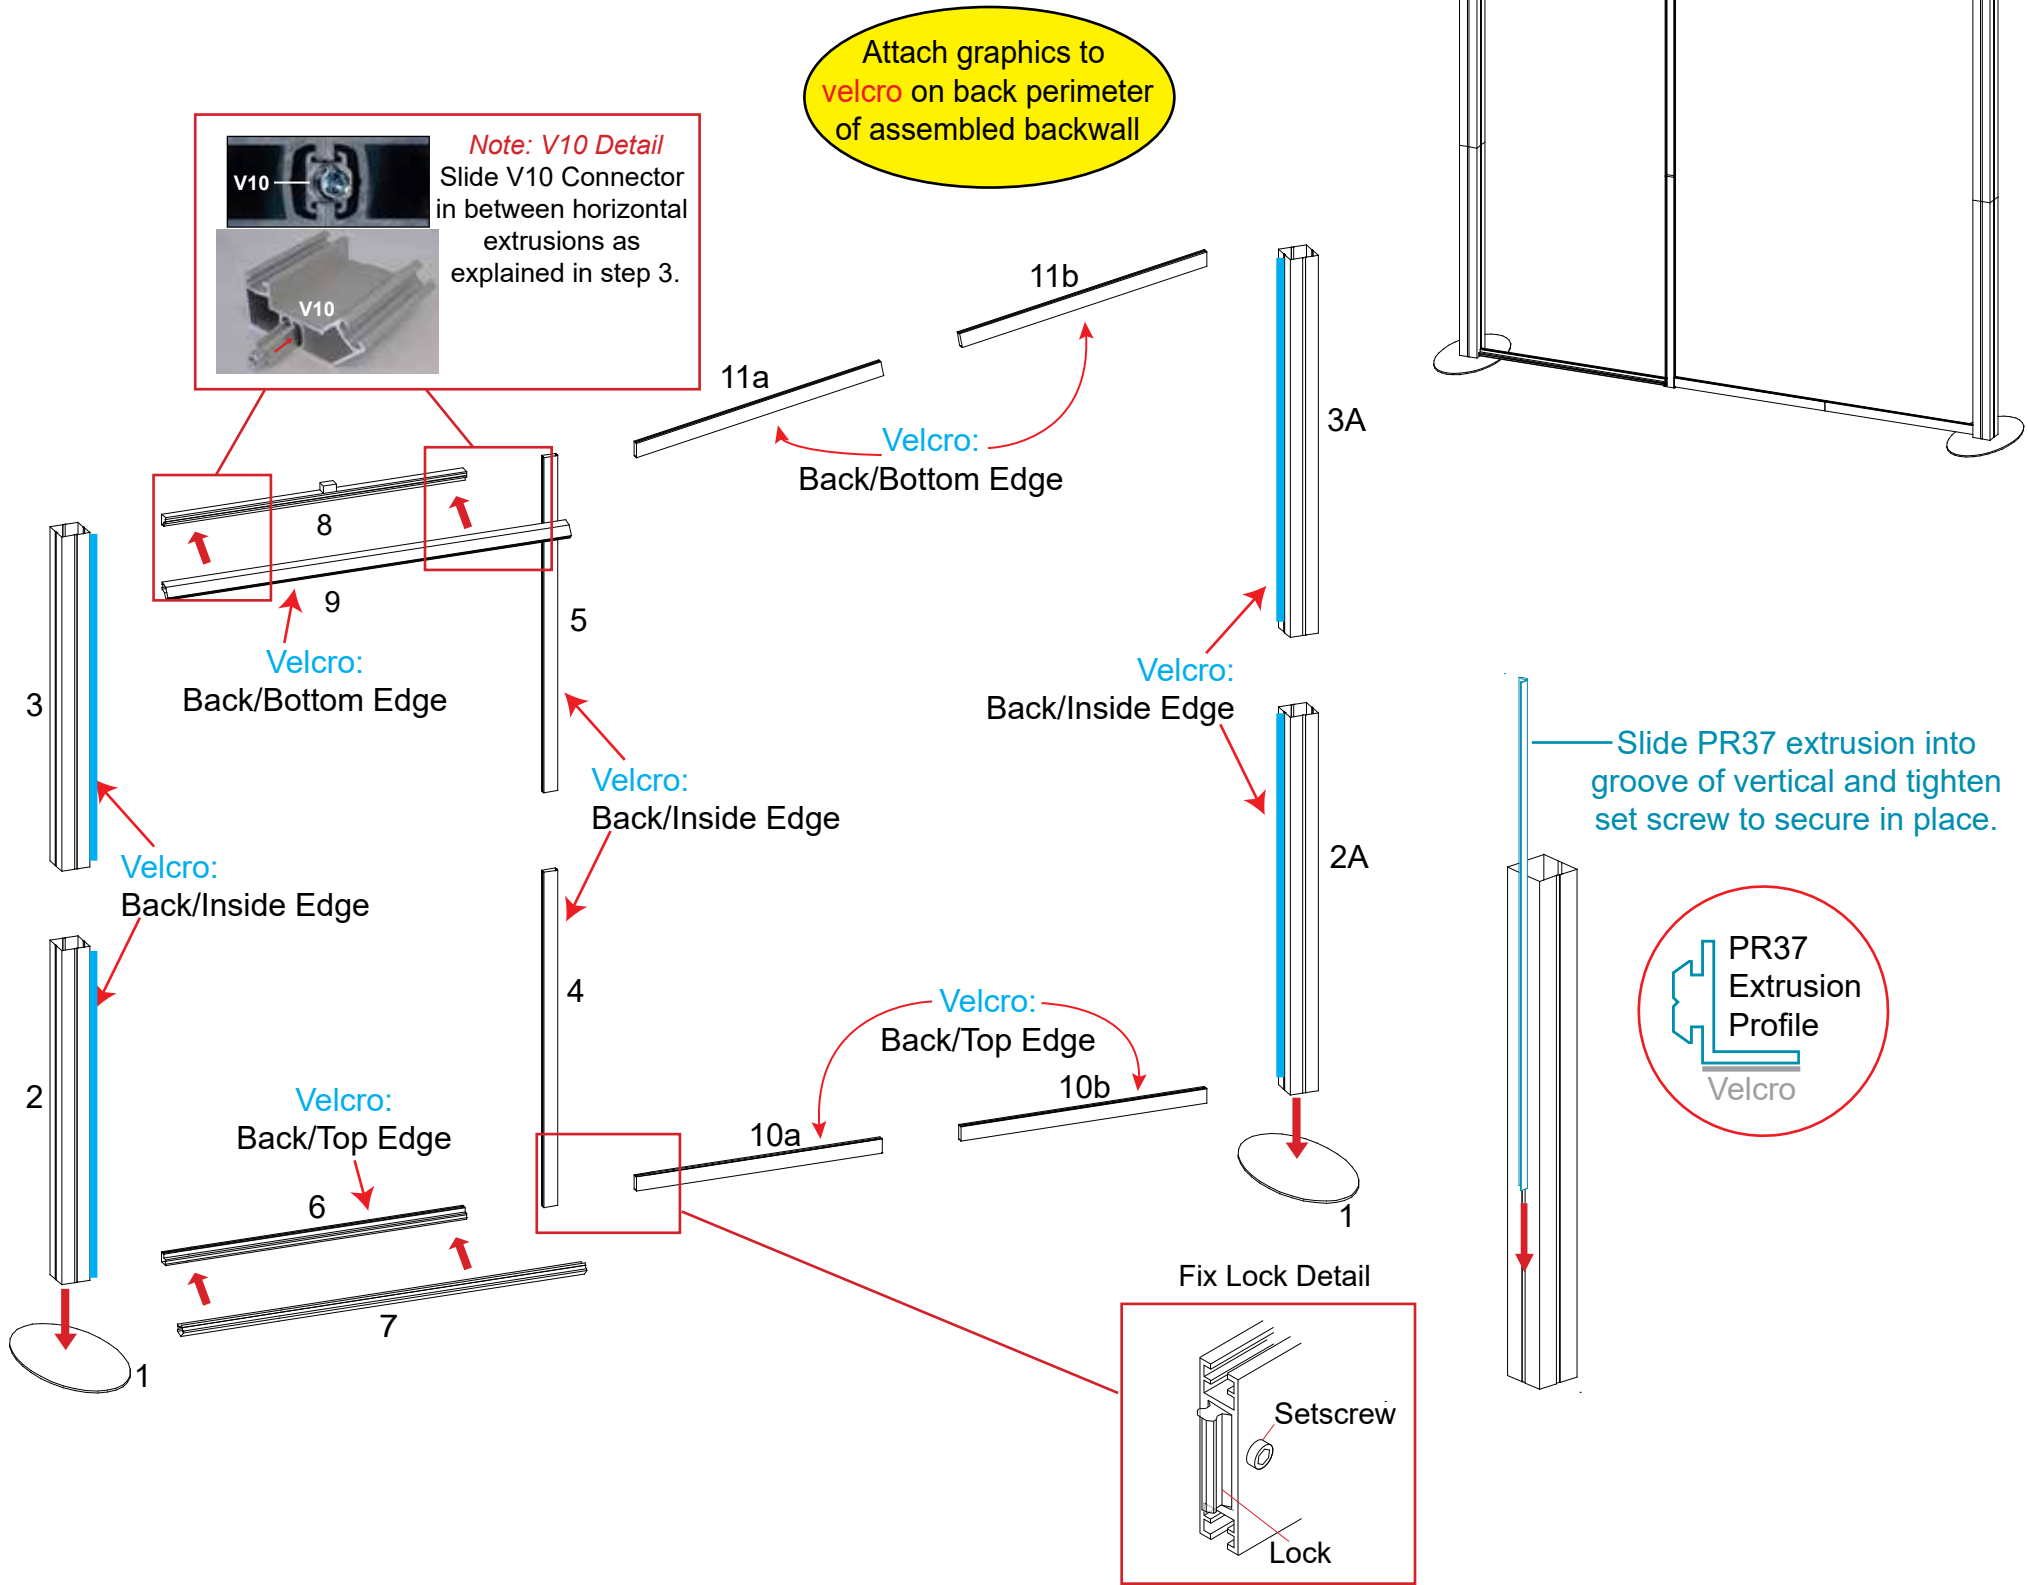

Item	Quantity	Description
12	1	Curved Vertical Extrusion
13	1	Curved Vertical Extrusion
14	1	Curved Vertical Extrusion
15	1	Curved Vertical Extrusion


- Steps:
- 1) Connect vertical extrusion 12 to vertical extrusion 13 and
Connect vertical extrusion 14 to vertical extrusion 15.
 - 2) Attach assembled vertical extrusions 12/13 and 14/15 to
horizontal extrusions 7 and 11 as shown.
 - 3) Attach lights to horizontal extrusions as shown.
 - 4) Attach graphics to Velcro on back of horizontals where indicated.

Attach graphics
to **velcro** on back of
assembled backwall

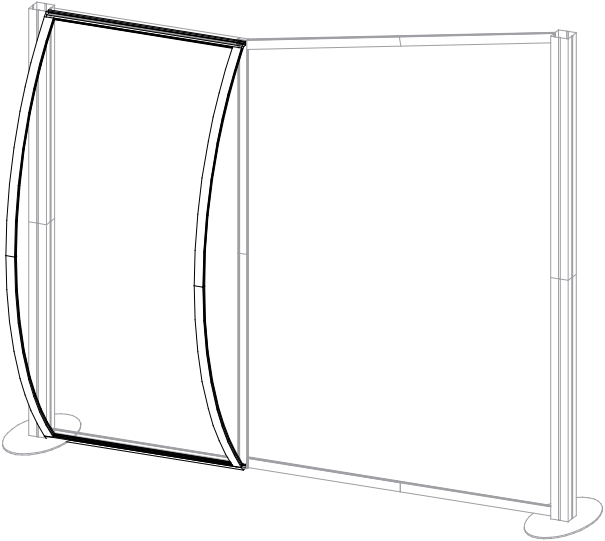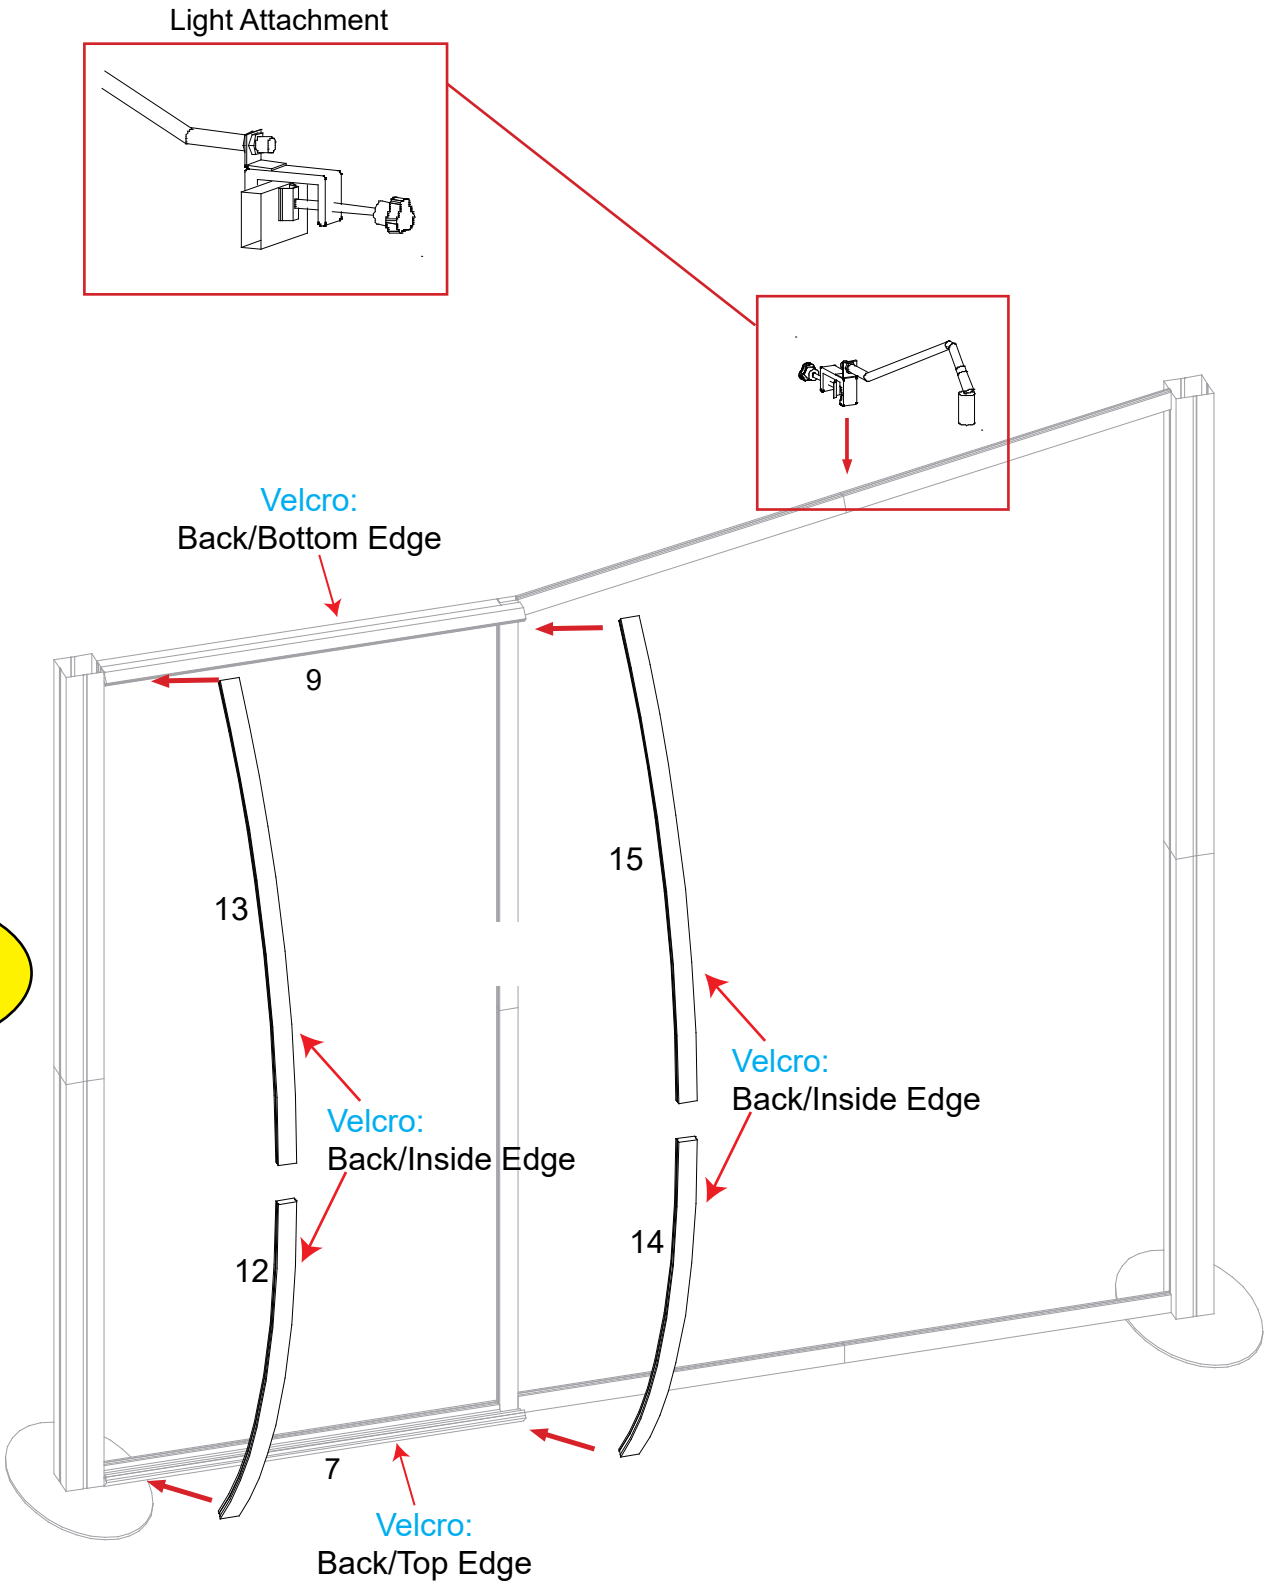


Setup Instructions:


- 1) Attach pins at bottom interior of side panels. *Note: Pins are designed to be slightly angled.*
- 2) Use screw caps to secure the side panels to front panel and back panels, making sure Velcro is facing inward.
- 3) Slide floor into the bottom of assembled pedestal base. The floor will sit on pins of the side panels.
- 4) Connect **shelf supports** to Velcro on panels, then place shelf on top of supports.
- 5) Attach pedestal top to assembled pedestal base. See [Pedestal Top Attachment](#) detail.

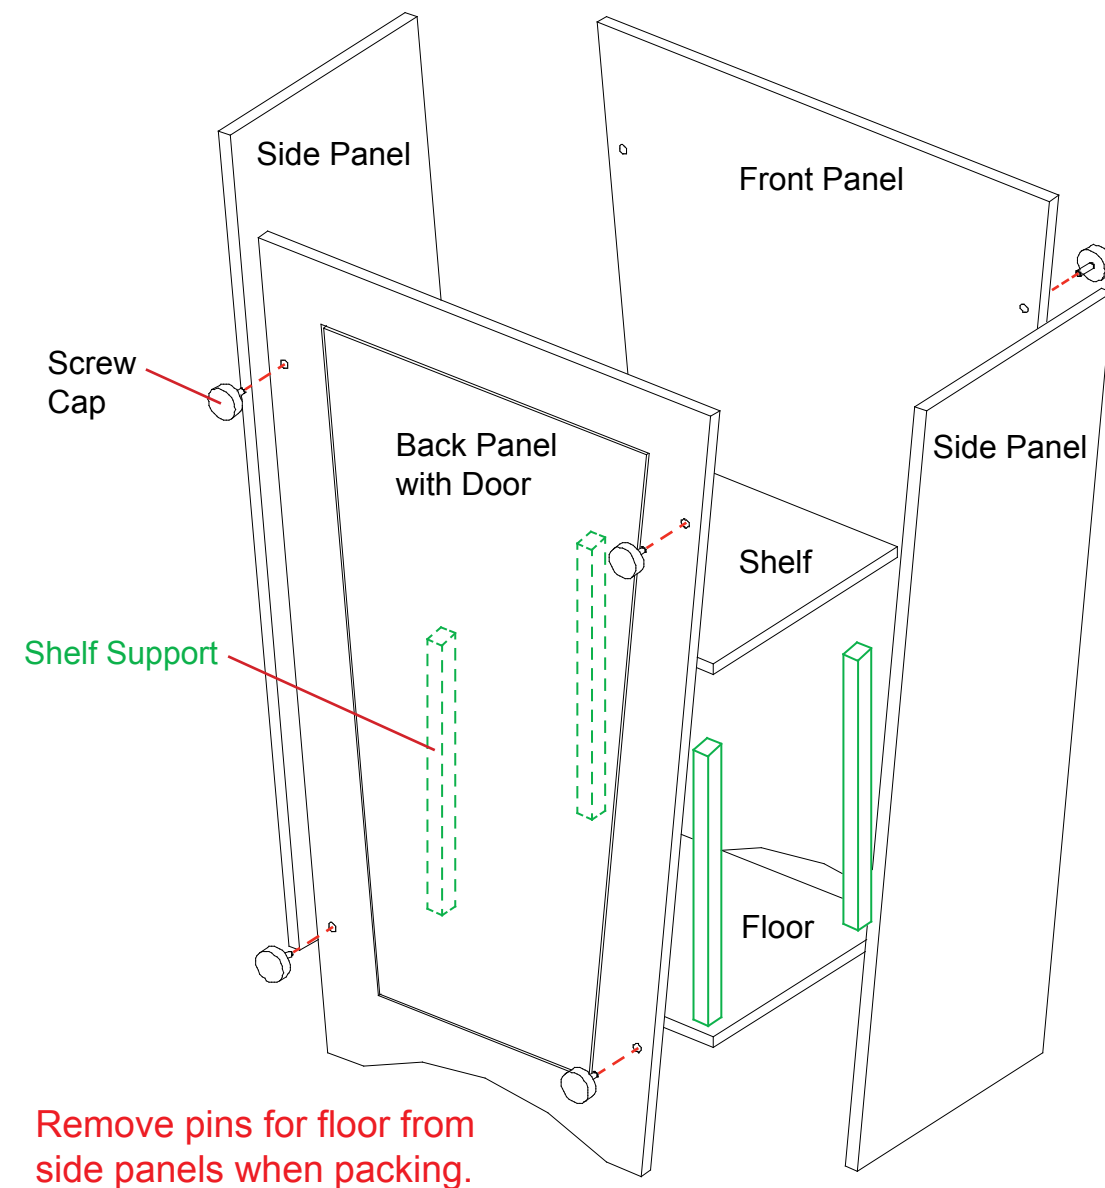

Pedestal Base Assembly

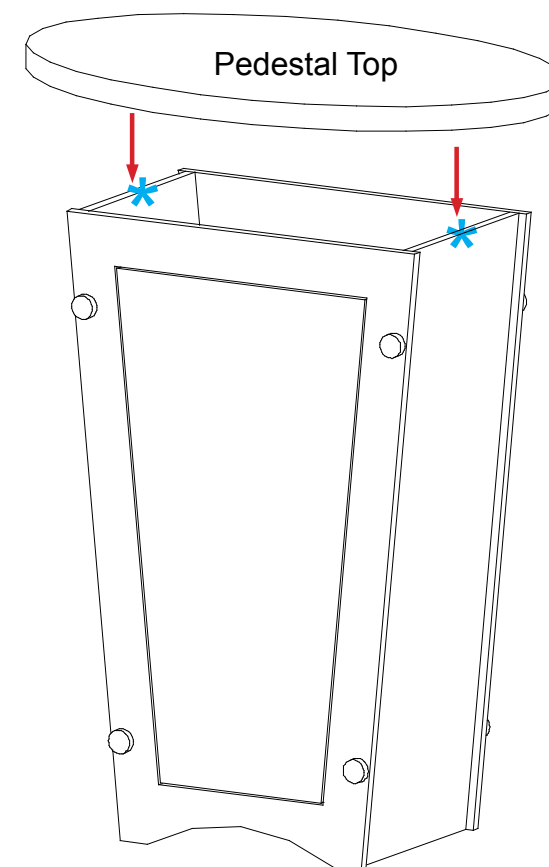



Pedestal Top Attachment

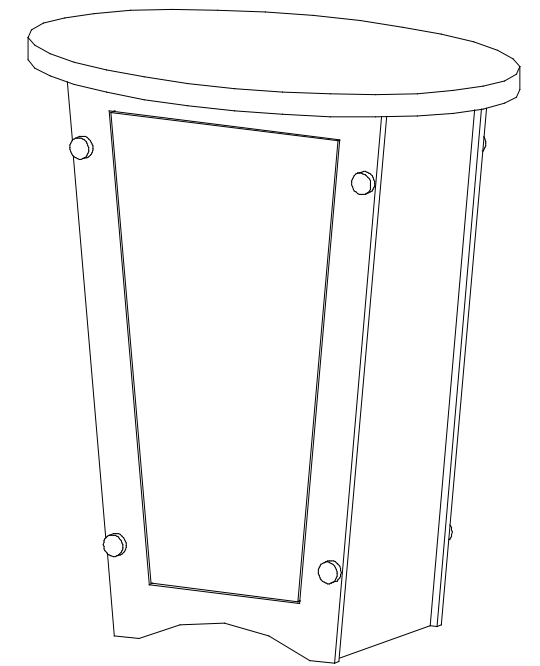

Completed Pedestal Assembly

* Pedestal Top Attachment

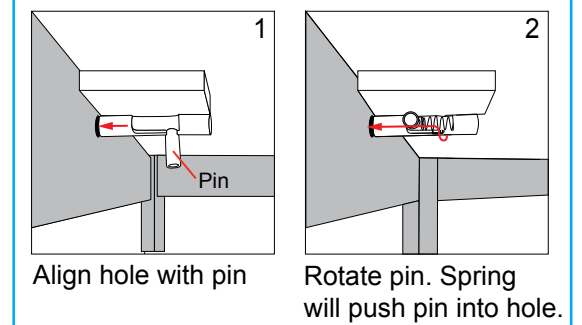


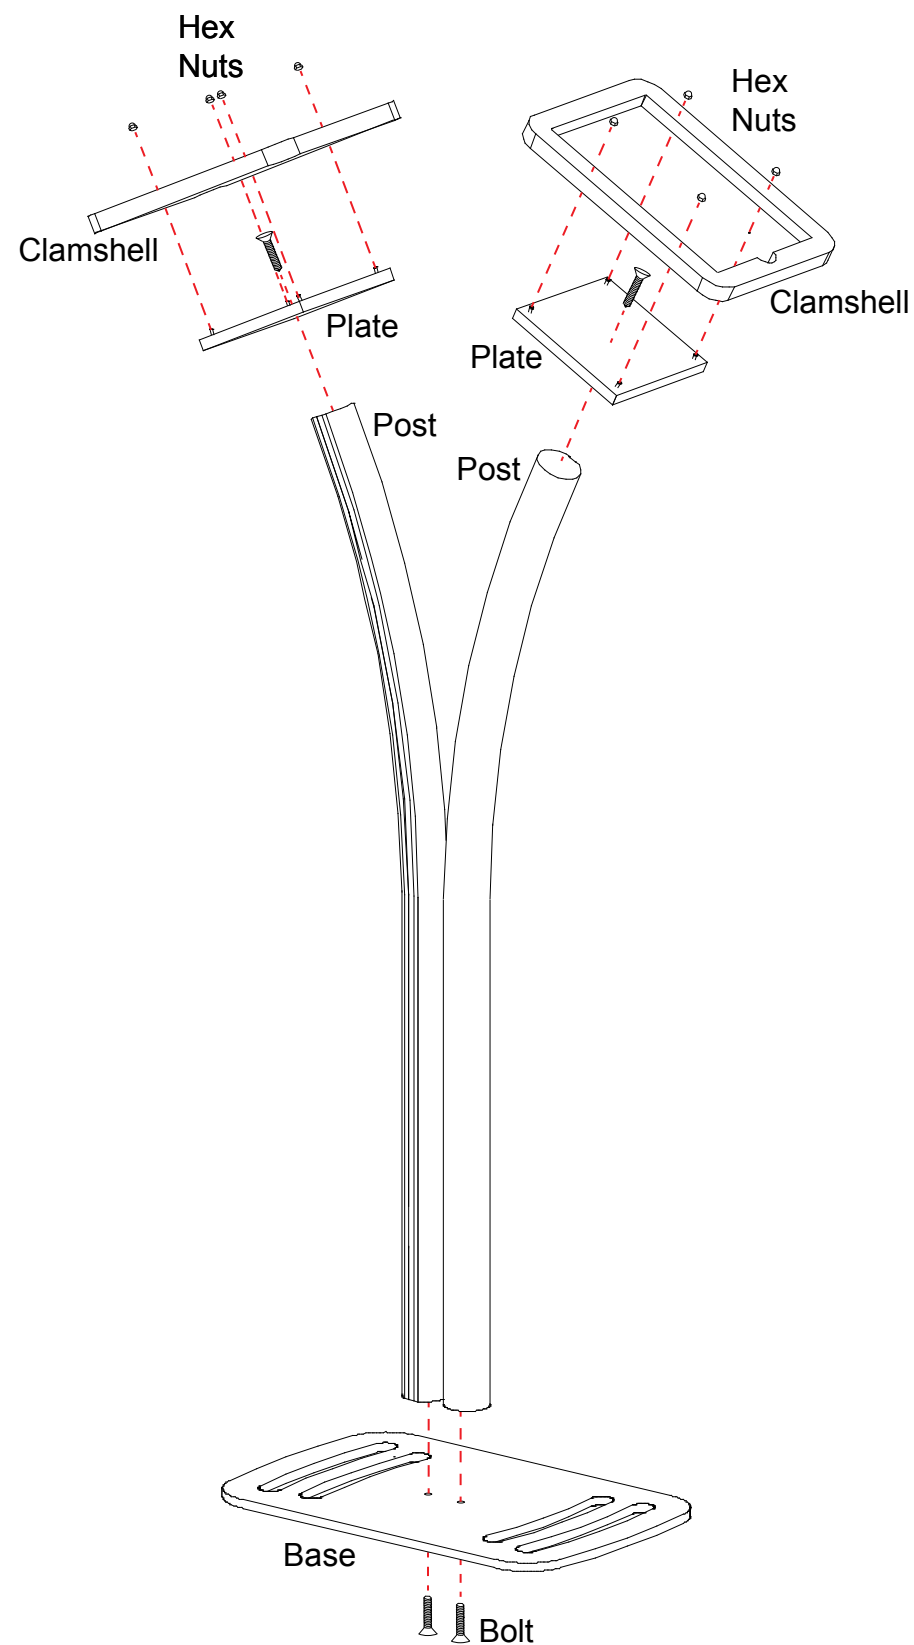

Steps:

- 1) Attach Base to curved Posts, using bolts.
- 2) Attach Plate to each Post, using bolts.
NOTE: Plate must rotate left and right, before installing Clamshell.
- 3) Attach Clamshells to each Plate, using hex nuts.
- 4) Insert iPads in Clamshells and feed cords through holes in Posts.
See [Cord Management For iPad](#) detail.


Optional Cover for Home Button

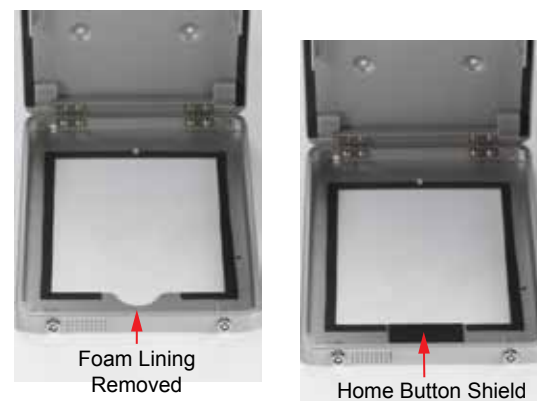

- 1) Remove foam lining from inside bottom of Clamshell as shown.
- 2) Attach Home Button Shield with double-sided tape to inside of Clamshell, keeping top of shield flush with Clamshell opening.


NOTE: This is a permanent fix and can't be easily removed.

Cord Management for iPad

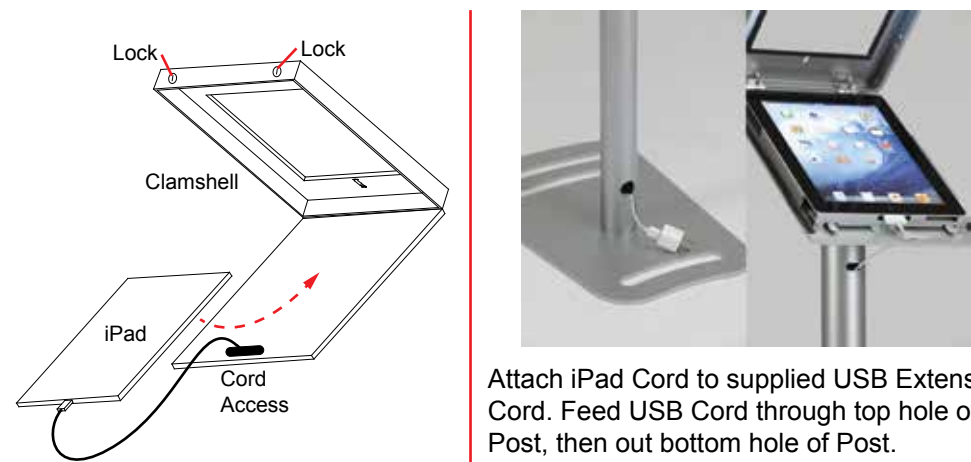

Attach iPad Cord to supplied USB Extension Cord. Feed USB Cord through top hole of Post, then out bottom hole of Post. Connect to Power.

Rotate Clamshell to turn iPad from portrait to landscape orientation.

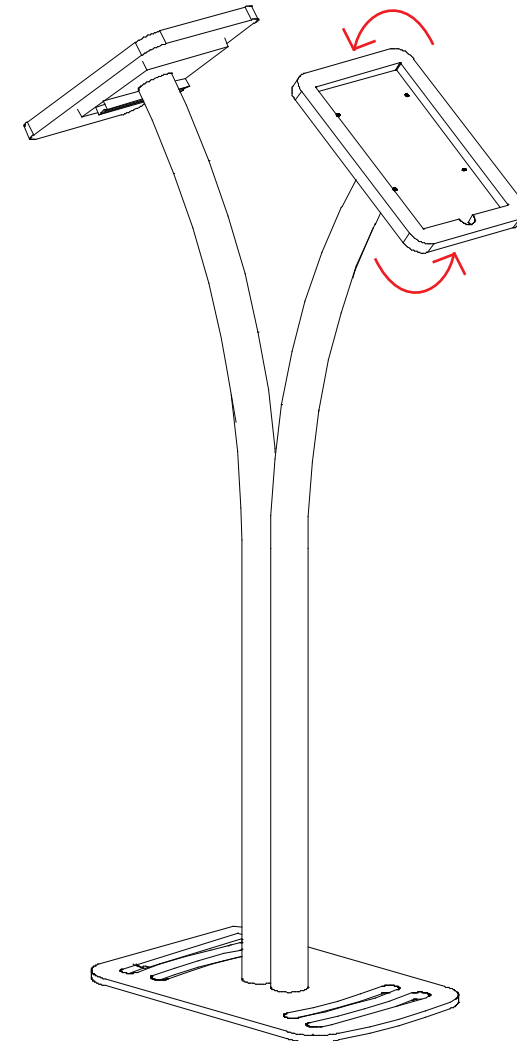

Completed Assembly