

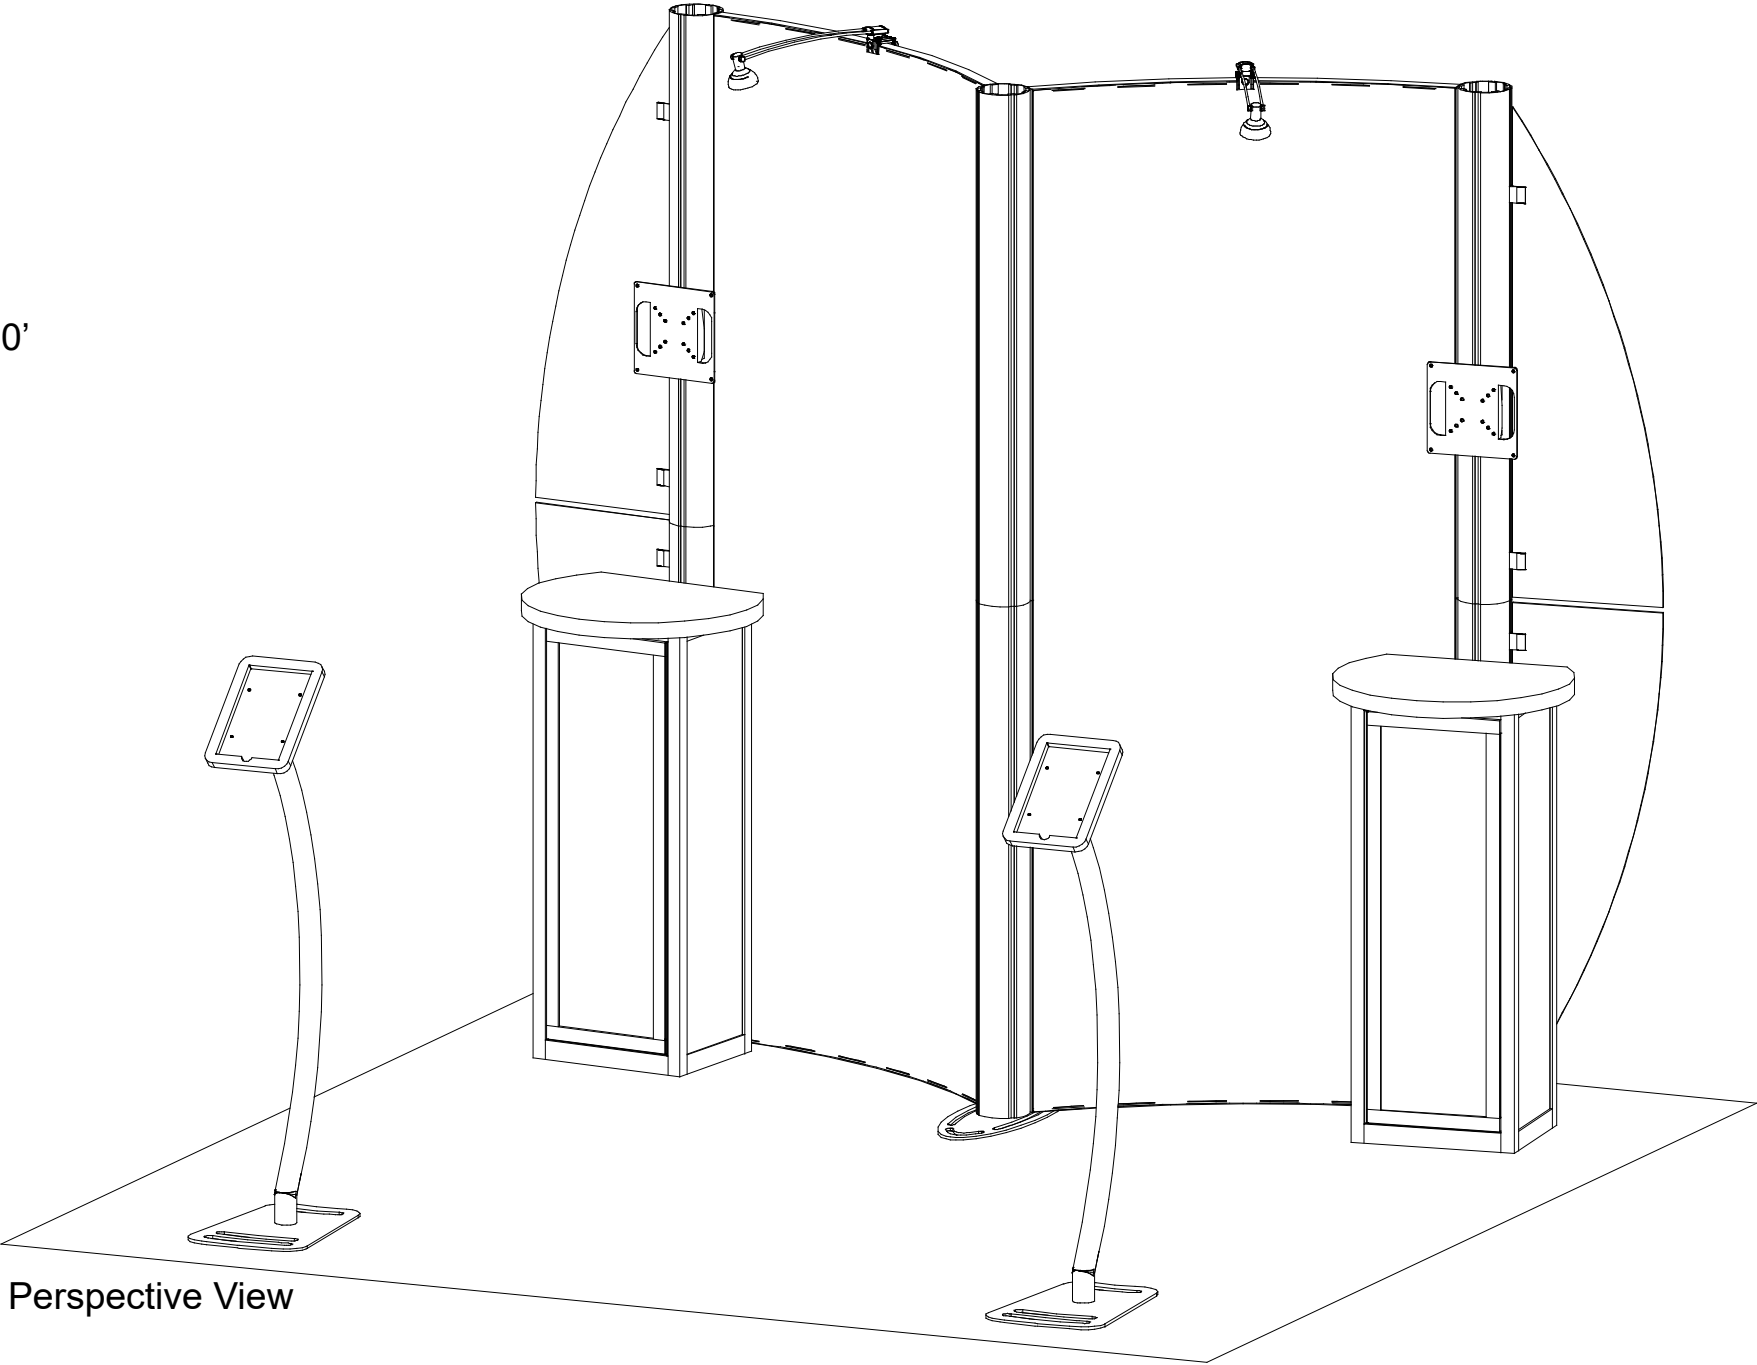


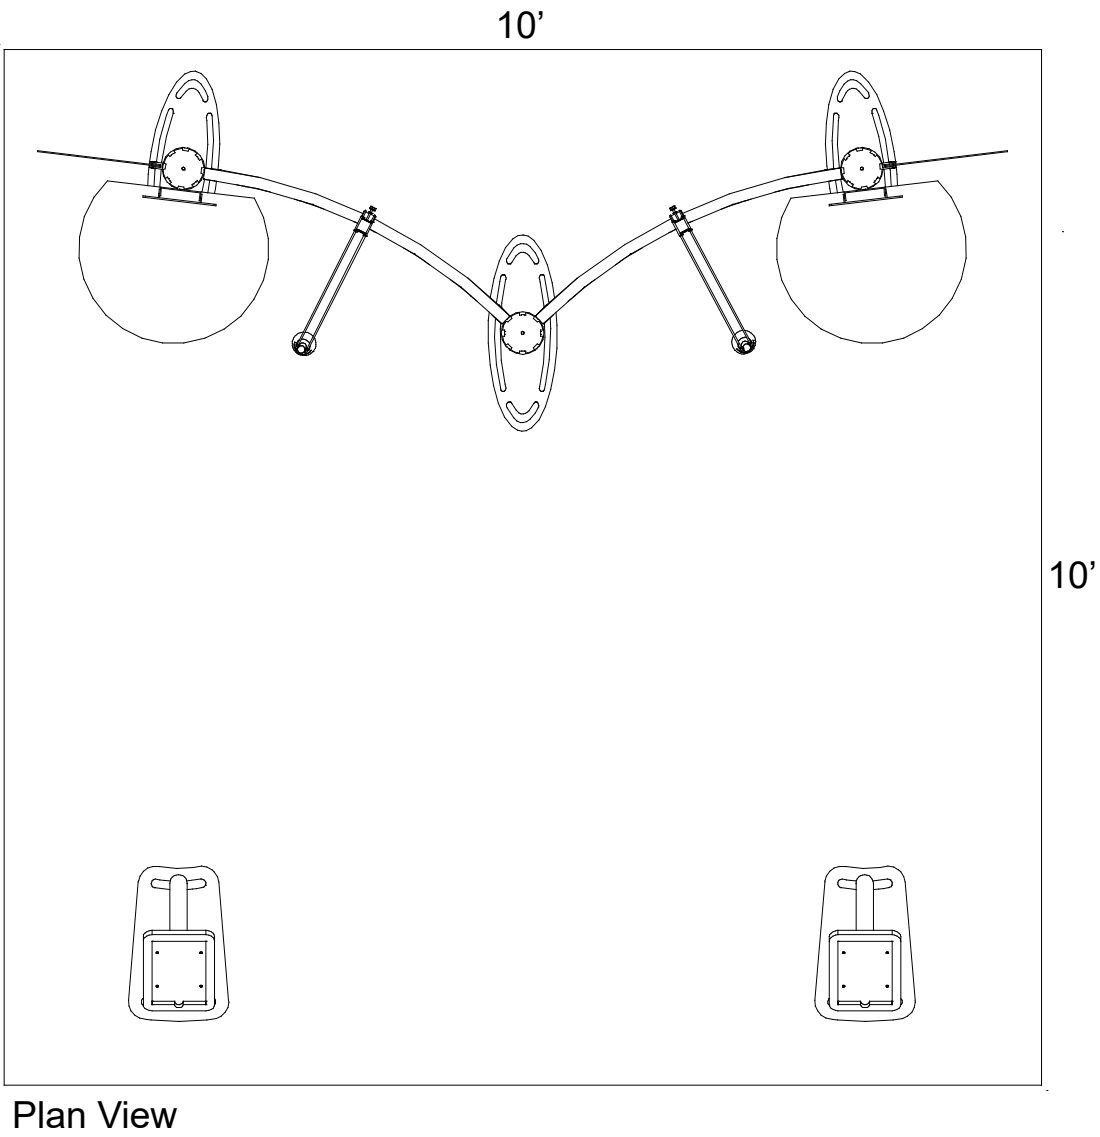

SETUP INSTRUCTIONS

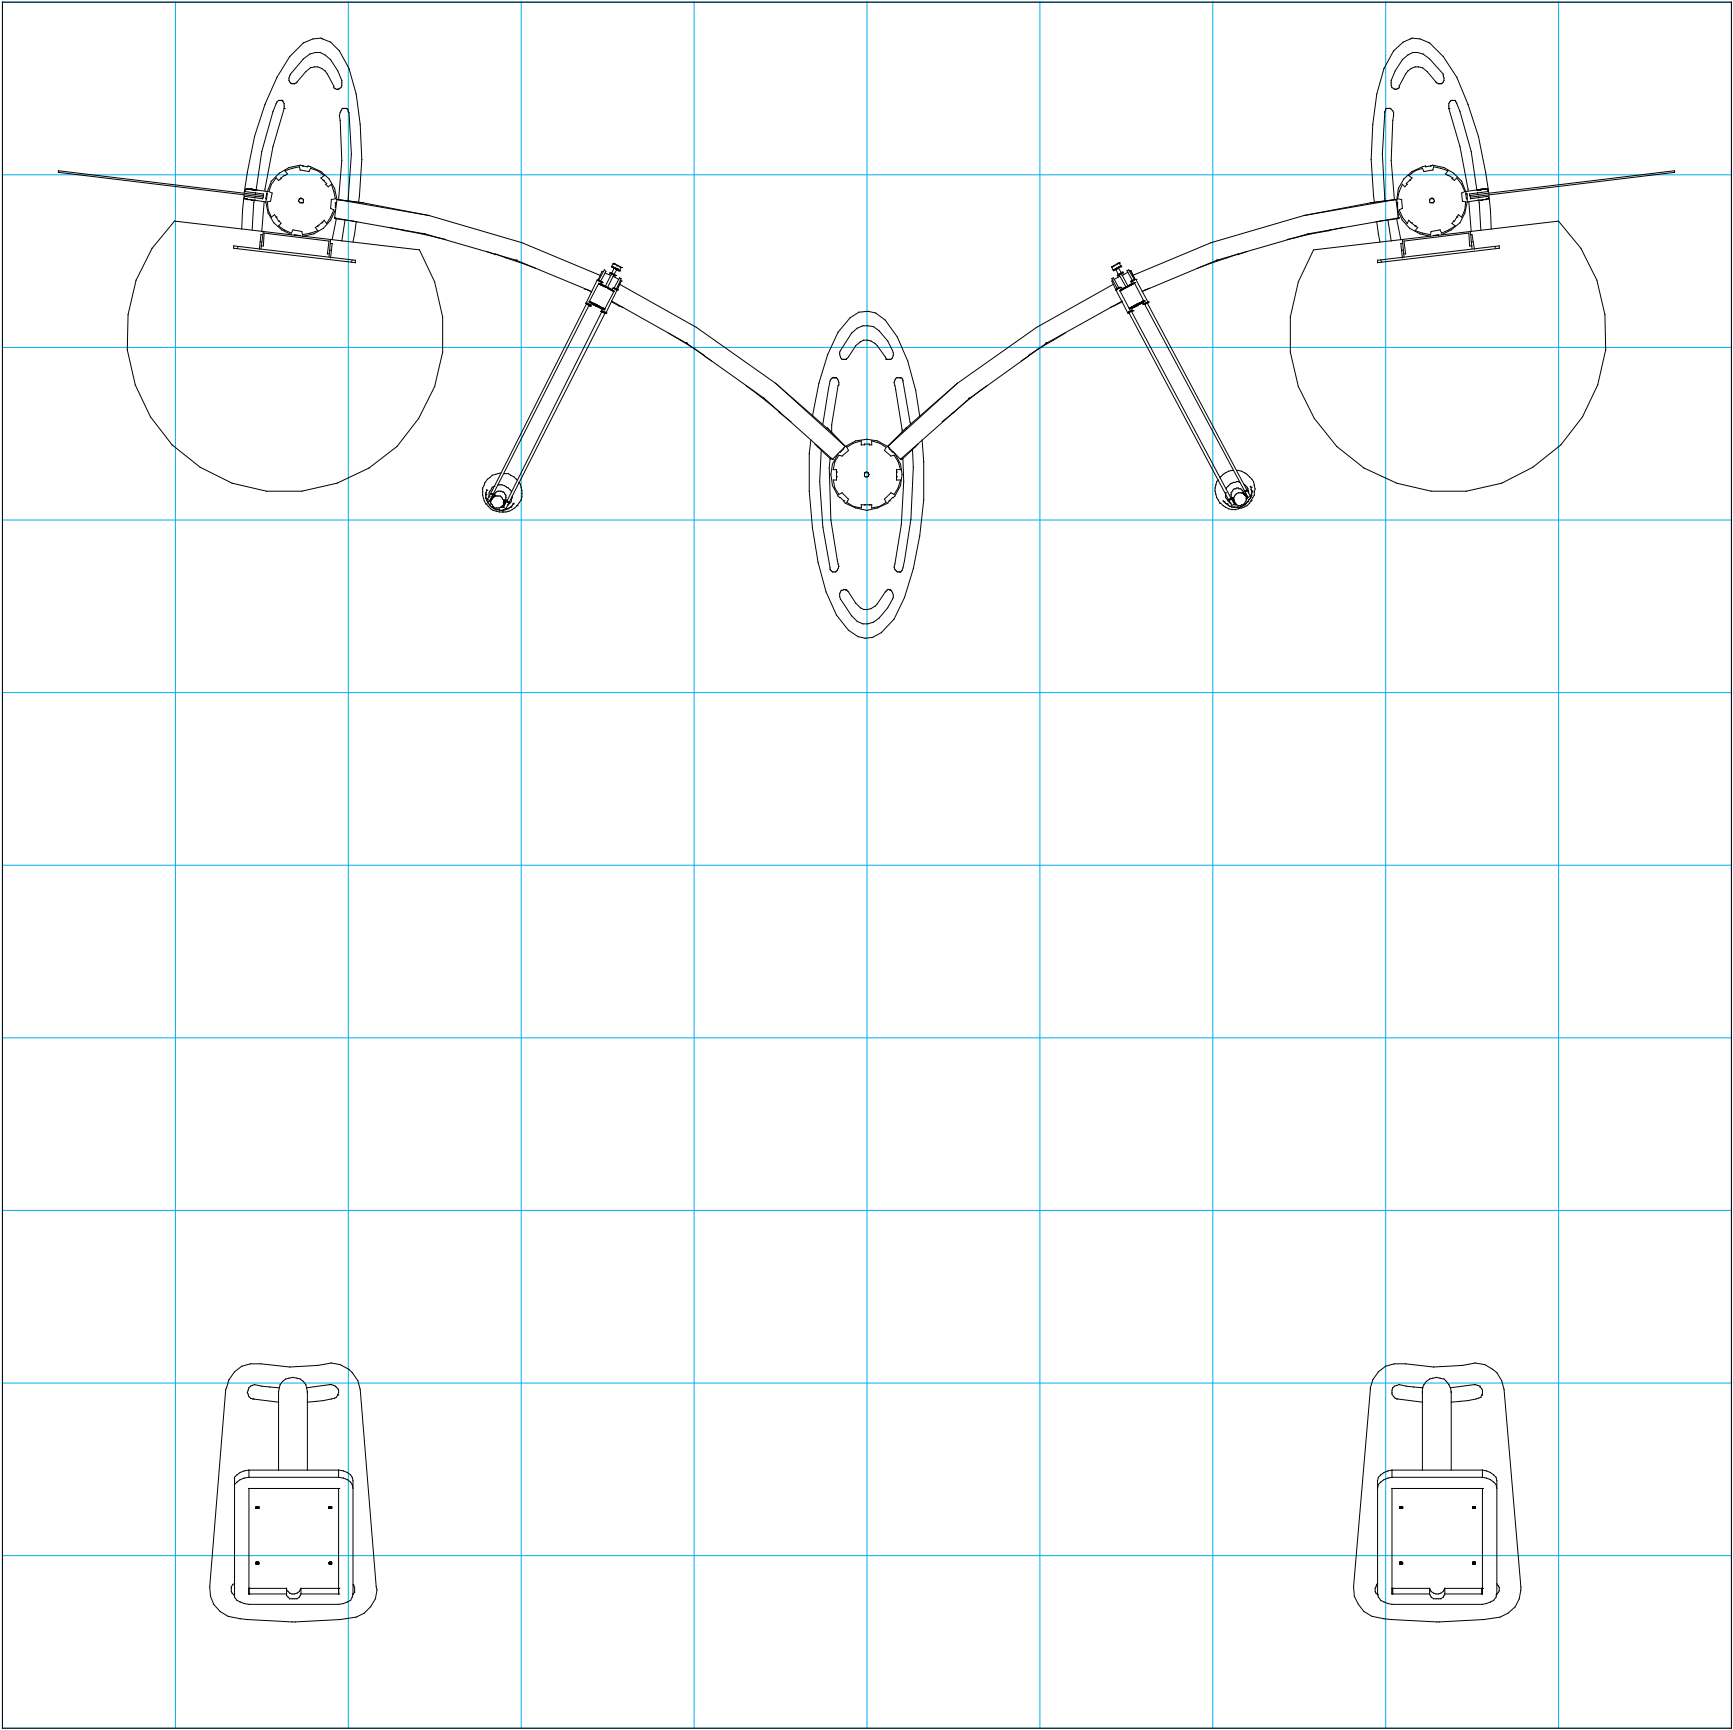

= 1 sq foot

General Setup Instructions


- Read entire setup instruction manual prior to unpacking parts and pieces.
- The setup instructions are created specifically for this configuration.
- Setup instructions are laid out sequentially in steps, including exploded views with detailed explanation for assembly.

Cleaning & Packing


- For Cleaning Metal, Plex, & Laminate Parts: Use a **MILD NON-ABRASIVE** cleanser and soft cloth/paper towel to clean all surfaces.
- Keep exhibit components away from heat and prolonged sun exposure.
Heat and UV exposure will warp and fade components.
- Retain all provided Packing Materials. All provided packing materials are for ease of repacking & component protection.

Disassembly


- For loss prevention, tighten all set screws and locks during disassembly.

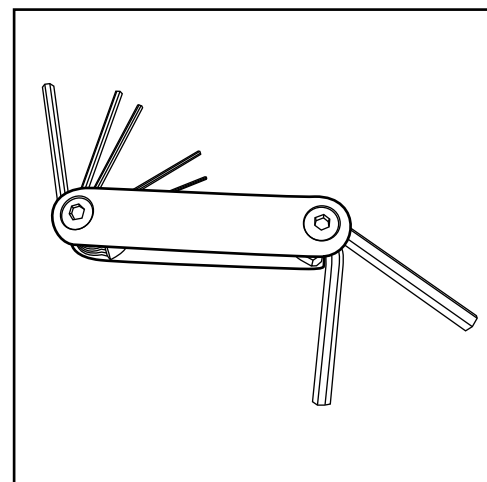


Hex Tool - Essential for Assembly

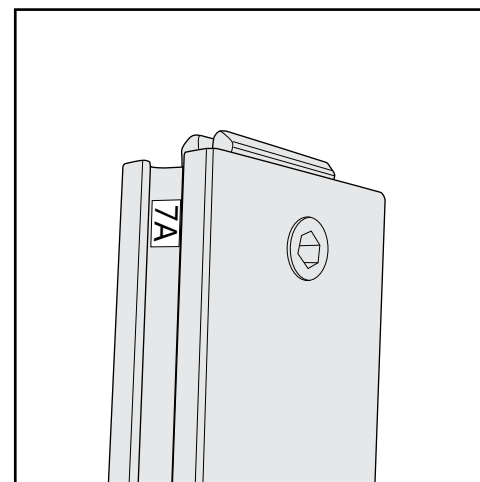


Part Identification - Numbering

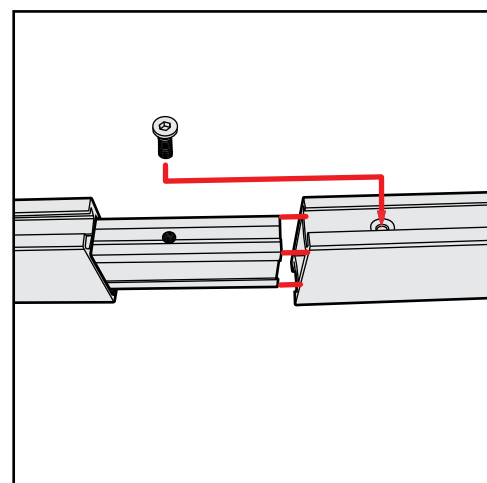


Spline Connection

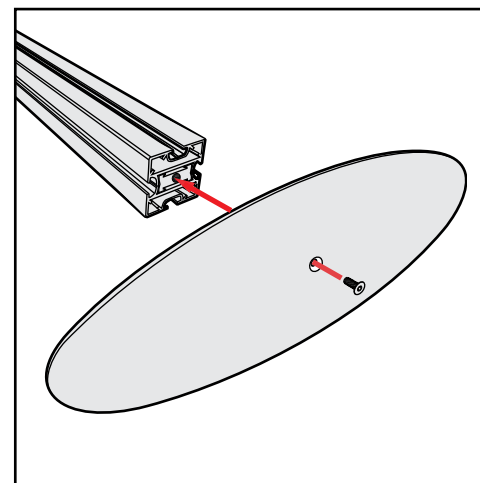

Base Plate & Extrusion Connection

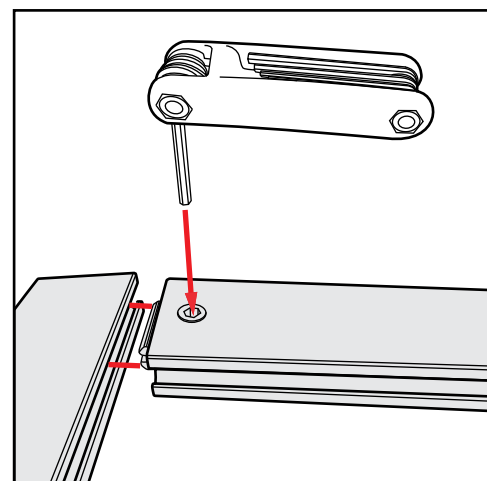


Extrusion & Lock Connection

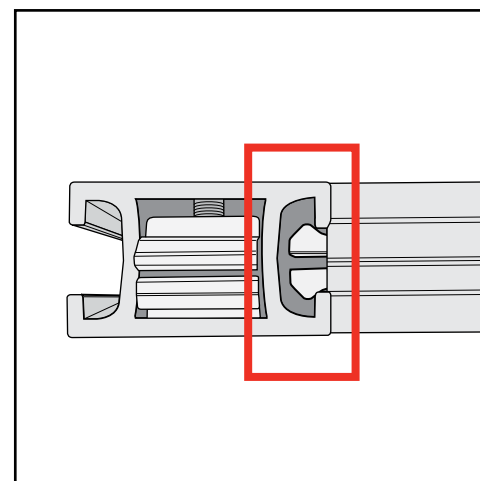

Engaged Lock



WARNING

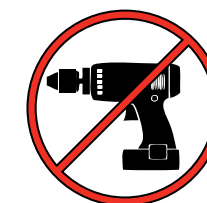

DO NOT USE POWER TOOLS



LADDERS OR LIFTS
MAY BE REQUIRED




ALL CONNECTIONS MUST
BE TIGHTLY SECURED


SEG Graphic Installation *in 3 Steps*

The Perfect Fit


STEP 1: Attach Corners

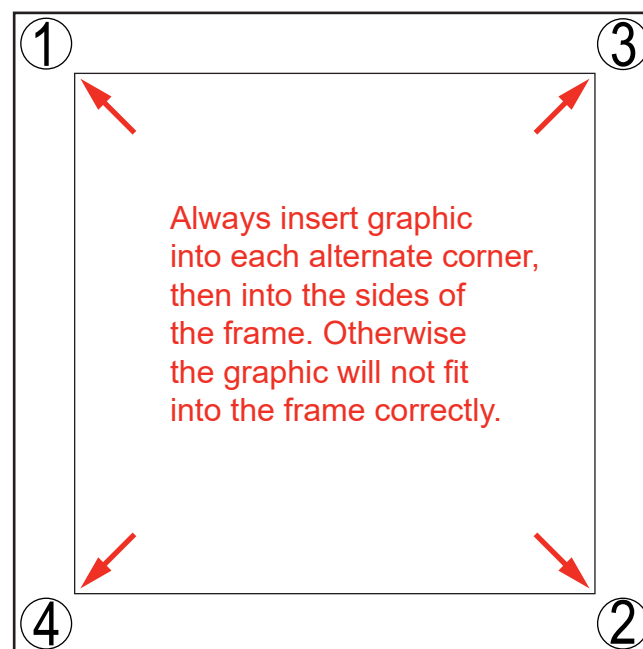

STEP 2: Attach Middle

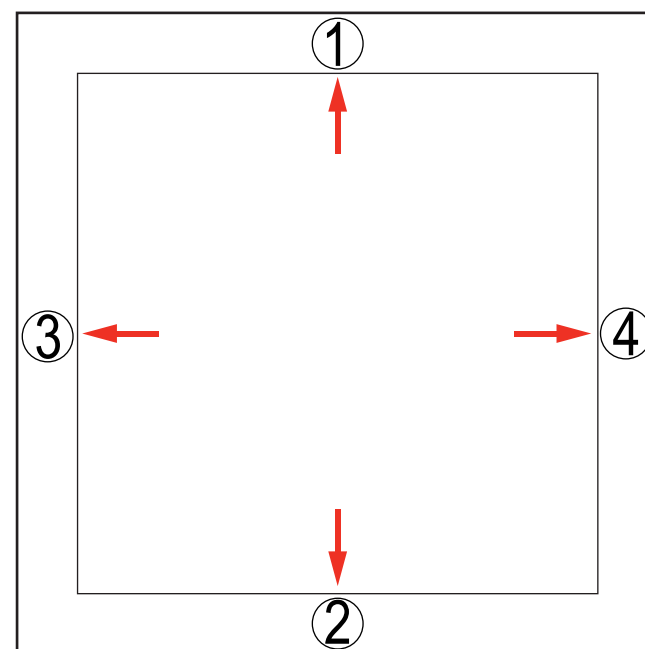

STEP 3: Attach Sides

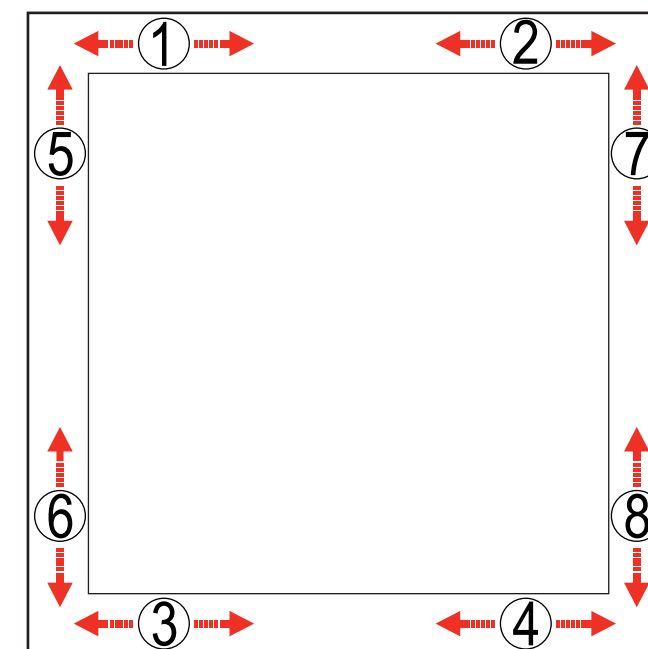

Insert narrow side of silicone welt into the channel at corner 1, with fabric to the outside.

Repeat for opposite corner 2, then corner 3, then corner 4.

Once corners are attached, press the middle of edge 1 into the channel. Then press middle of edge 2 into the channel on opposite side.

Repeat with edge 3 & 4.

Once the middle of sides are attached, fully press the silicone welt into the channel, between center and corner at location 1. Repeat the process between center and corner at location 2.

Do the same for welt on opposite side, at locations 3 & 4. Then repeat for locations 5 & 6 and 7 & 8.

Once the welt is fully inserted on all sides, smooth out edges as needed for a perfect fit.







To remove the graphic from the frame, locate the fabric **pull tab**. Gently pull on the tab to remove the graphic.


Install video:




Item	Qty.	Description
1	3	Base Plate
2,2A	1,1	47.5" RR1252 Vertical Extrusion w/ A10 Clamps
3,3A	1,1	47.5" RR1252 Vertical Extrusion
4,4A	1,1	47.5" RR1252 Vertical Extrusion w/ A10 Clamps
5,5A	1,1	47.5" TSP46 Curved Horizontal Extrusion
6,6A	1,1	47.5" TSP46 Curved Horizontal Extrusion
7,7A	2,2	47.5" TSP46 Vertical Extrusion
8,8A	2,2	47.5" TSP46 Vertical Extrusion

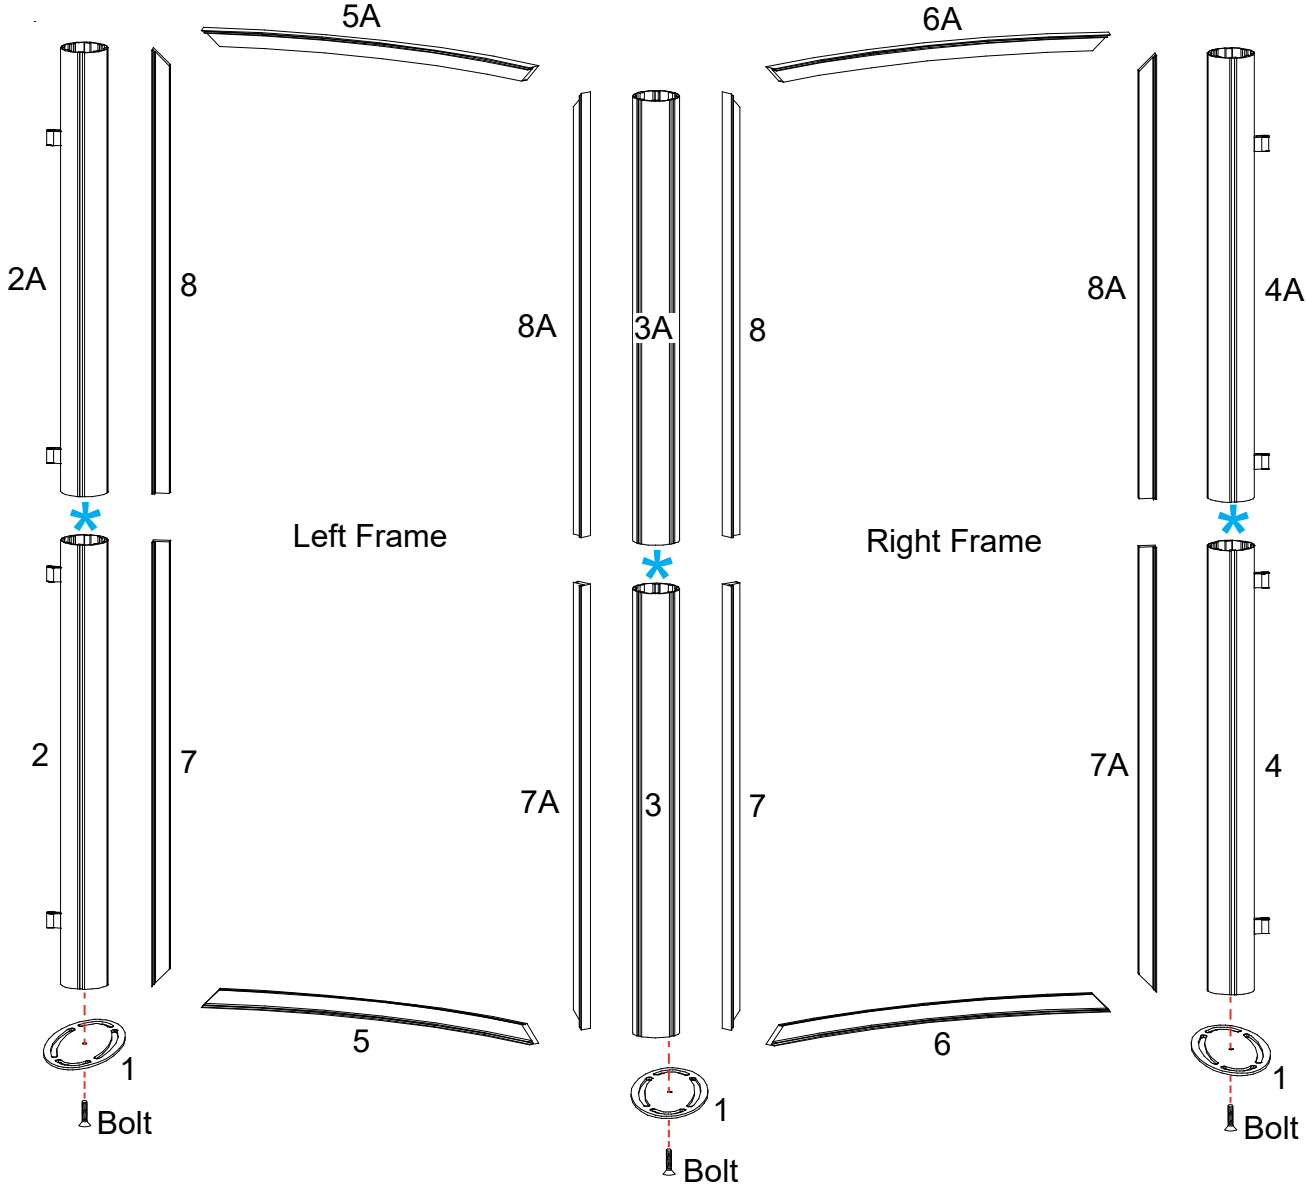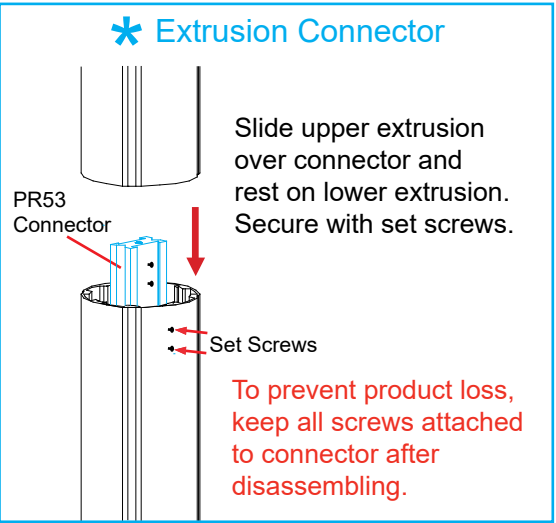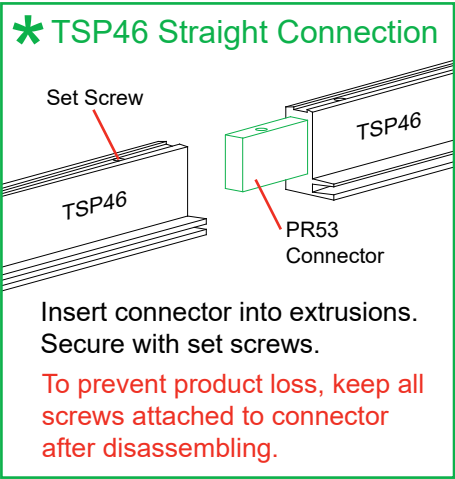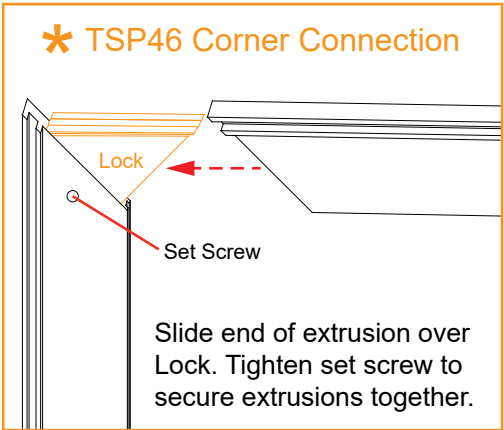

- Steps:
- 1) Attach base plates to verticals [2] [3] and [4], using bolts.
 - 2) Attach extrusions [2 to 2A] [3 to 3A] and [4 to 4A], using connectors. See [Extrusion Connector](#) detail.
- See TSP46 Corner Connection and TSP46 Straight Connection details for steps 3 and 4:
- 3) Assemble left frame extrusions [5] [5A] [7] [7A] [8] [8A].
 - 4) Assemble right frame extrusions [6] [6A] [7] [7A] [8] [8A].
 - 5) Attach left and right assembled frames between assembled verticals [2/2A] [3/3A] and [4/4A]. Tighten set screws to secure.
 - 6) Install [SEG graphics](#) to front of assembled frames. See SEG Graphic Installation sheet for instruction.

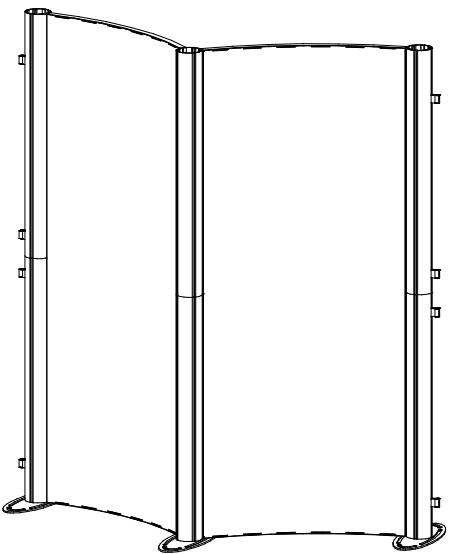


Completed Assembly




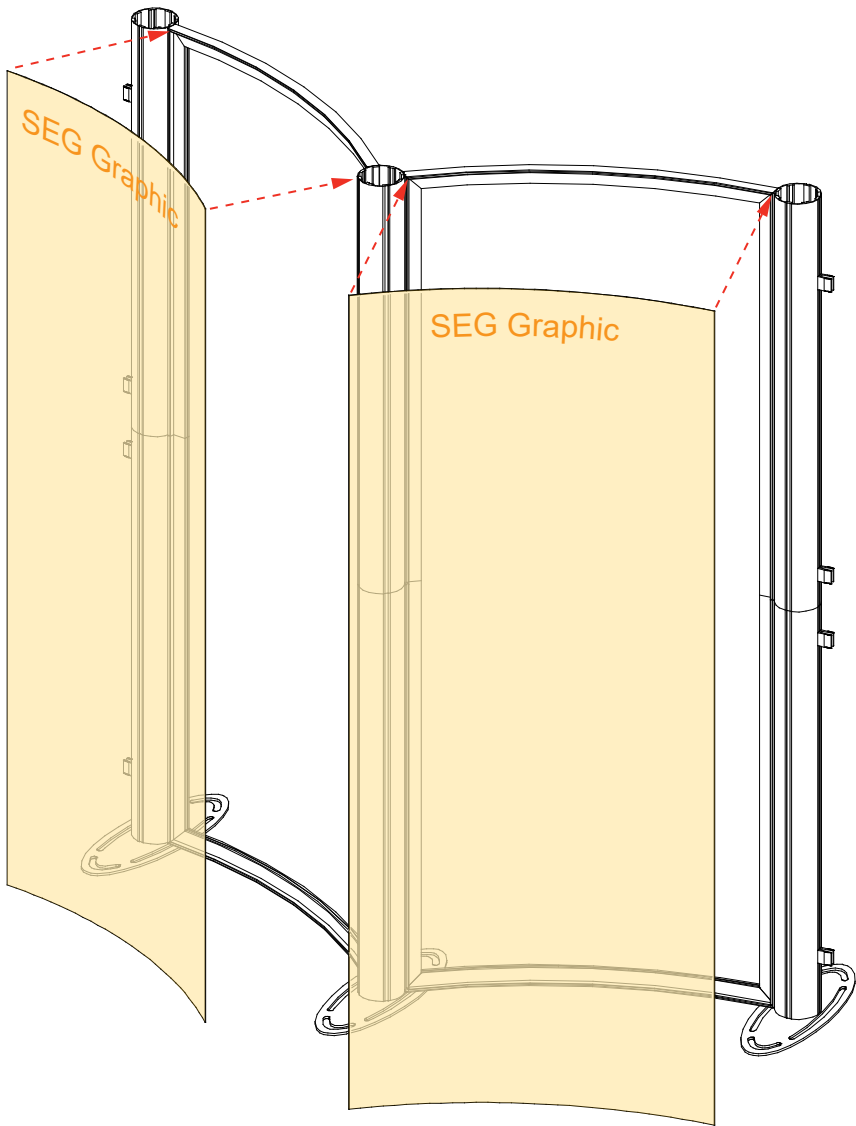


Steps:

- 1) Attach monitor mounts to verticals [2A and 4A]. See [Monitor Mount](#) detail.
- 2) Attach wings to clamps on each side of assembled backwall.
See [A10 Clamp](#) detail.
- 3) Connect lights to top of assembled backwall. See [Light Connection](#) detail.

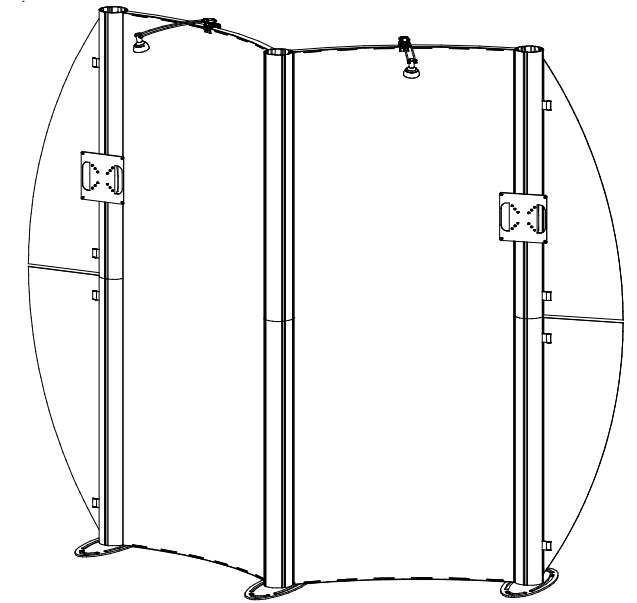


Completed Assembly

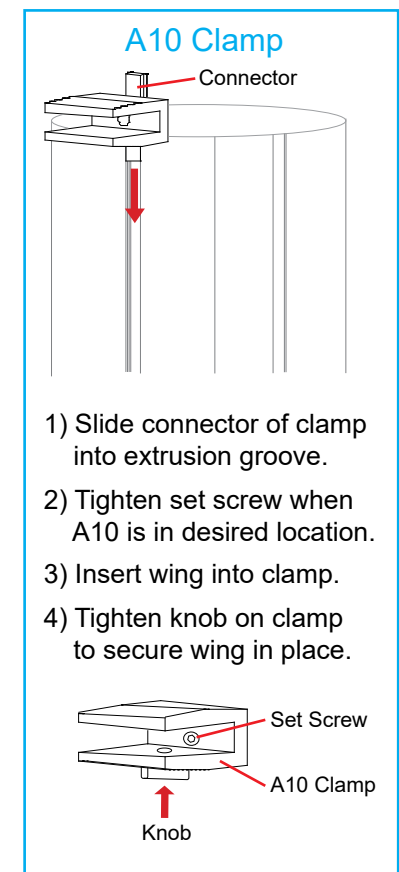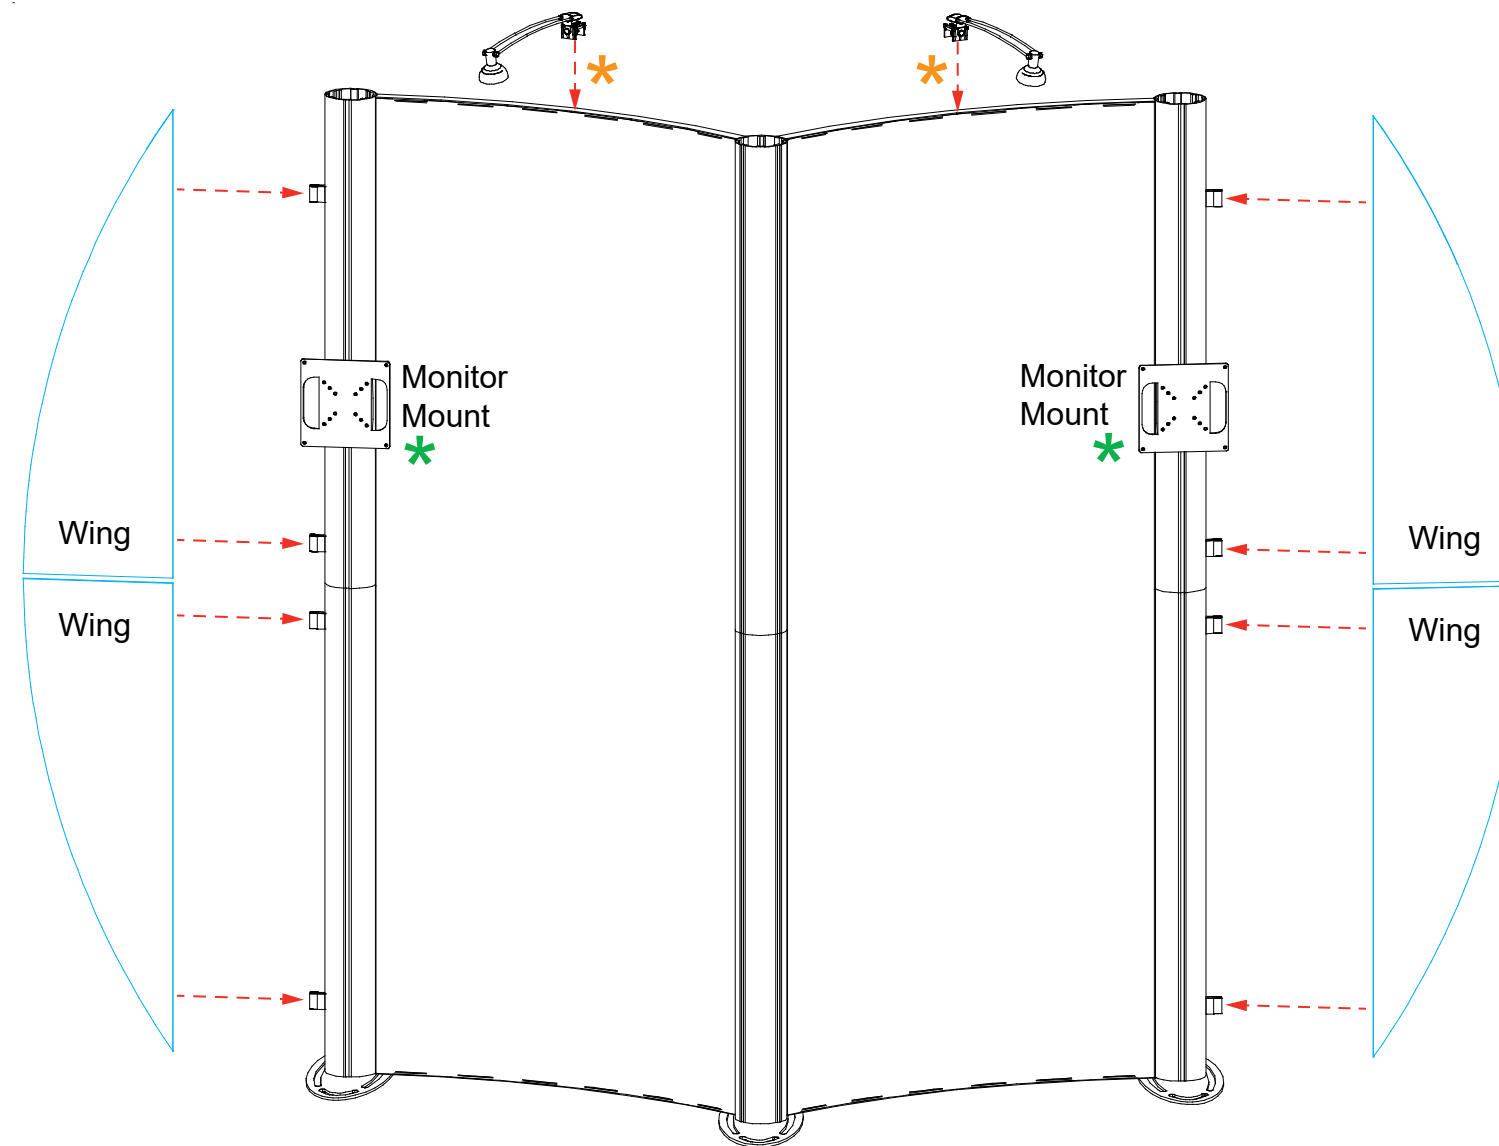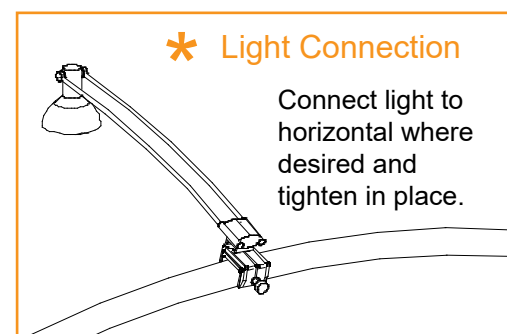
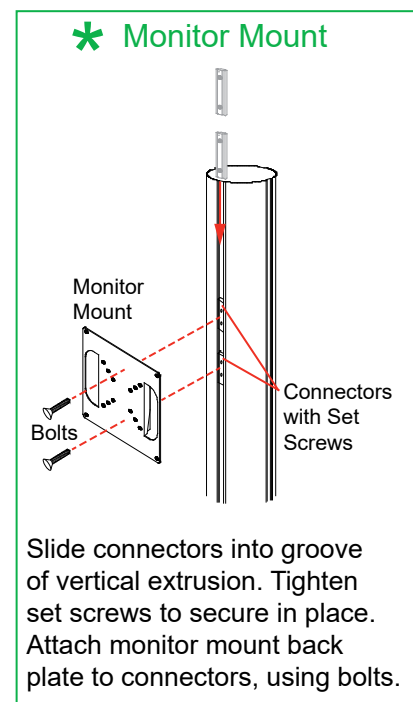


Item	Qty.	Description
7,7A	1,1	42" GS220 Vertical Extrusion w/ Door Stop
8	2	42" GS220 Vertical Extrusion
9	2	42" GS220 Vertical Extrusion
10,10A	1,1	42" GS220 Vertical Extrusion w/ Door Hinge
11,11A	4,4	13" Z45 Horizontal Extrusion
12,12A	4,4	10" Z41 Horizontal Extrusion


- Steps:
- 1) Assemble horizontal extrusions between vertical extrusions, inserting **infills**.
 - 2) Connect doors to verticals [10] and [10A]. See **Door Connection** detail.
 - 3) Attach assembled workstations to backwall verticals [2] and [4], using standoff barrels & screw caps. See **Workstation Attachment** detail.
 - 4) Connect shelf supports to Velcro on inside of assembled workstation.
 - 5) Place shelf onto shelf supports.
 - 6) Place workstation top onto verticals [11A] and [12A]. See **Workstation Top Lock** detail.

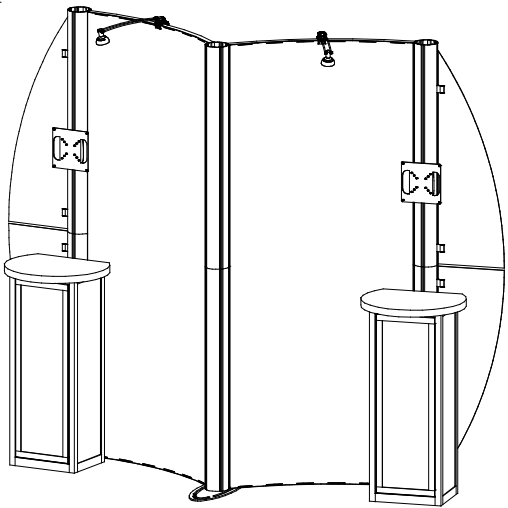




Completed Assembly

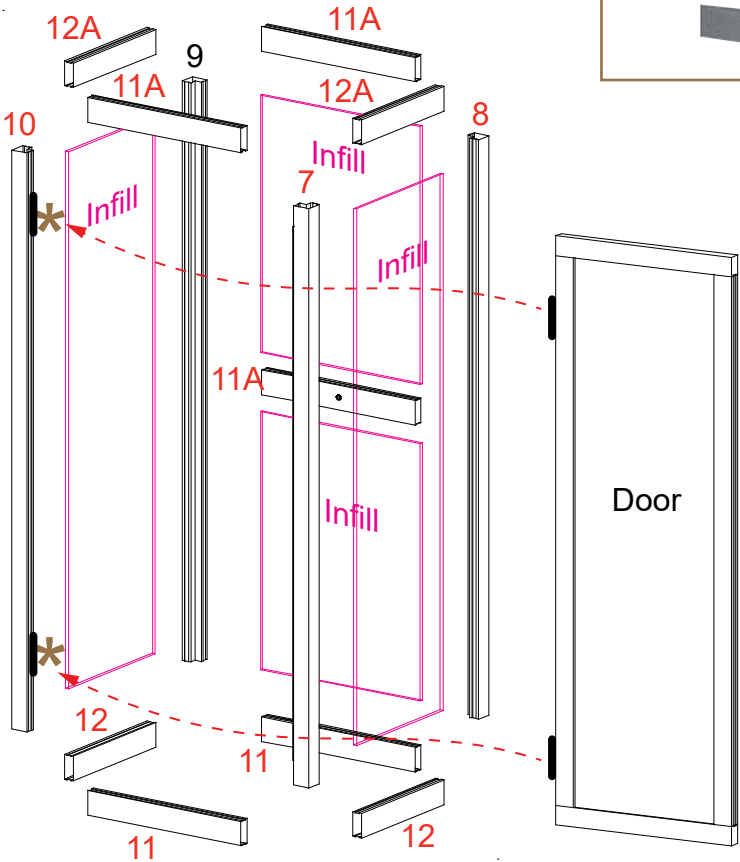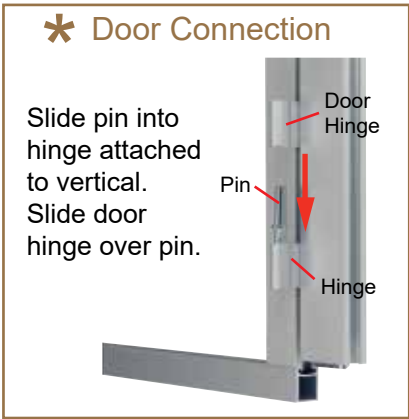

Left Workstation

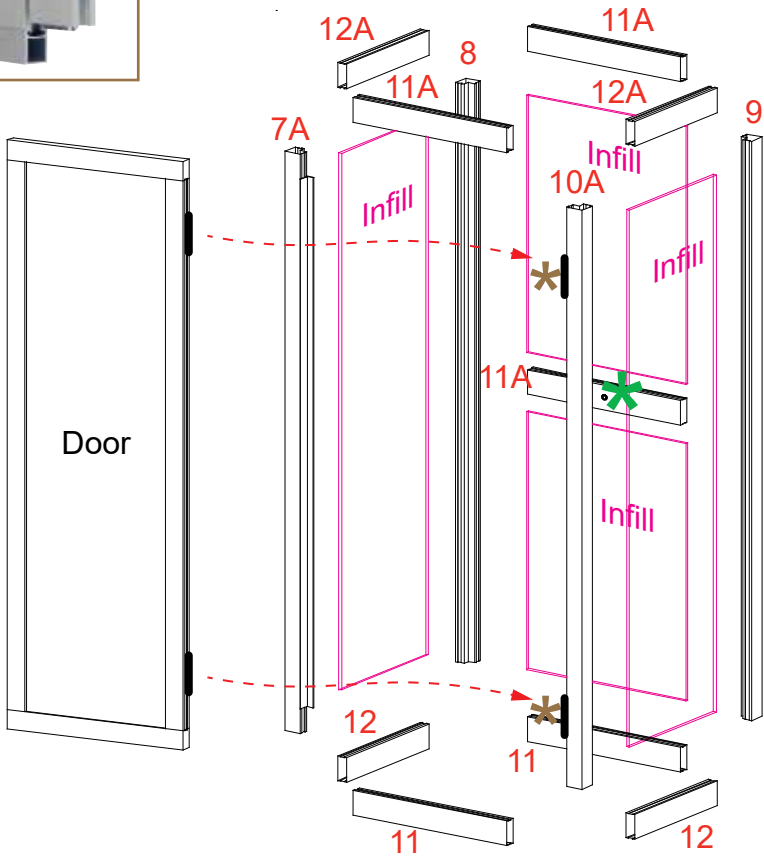

Right Workstation

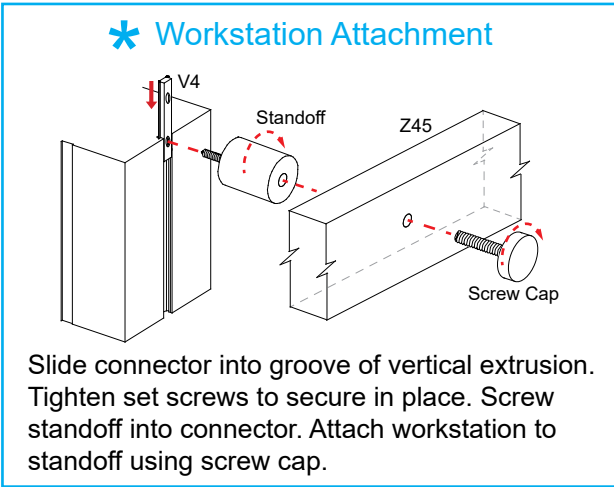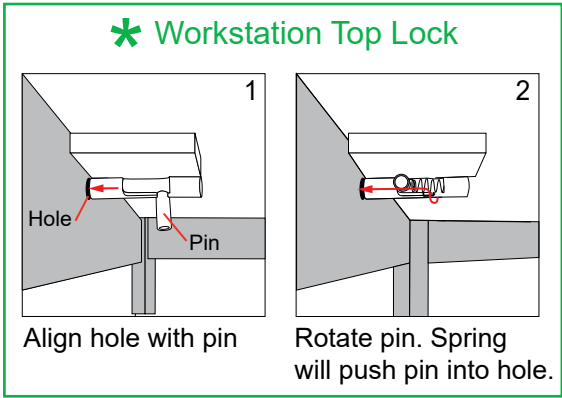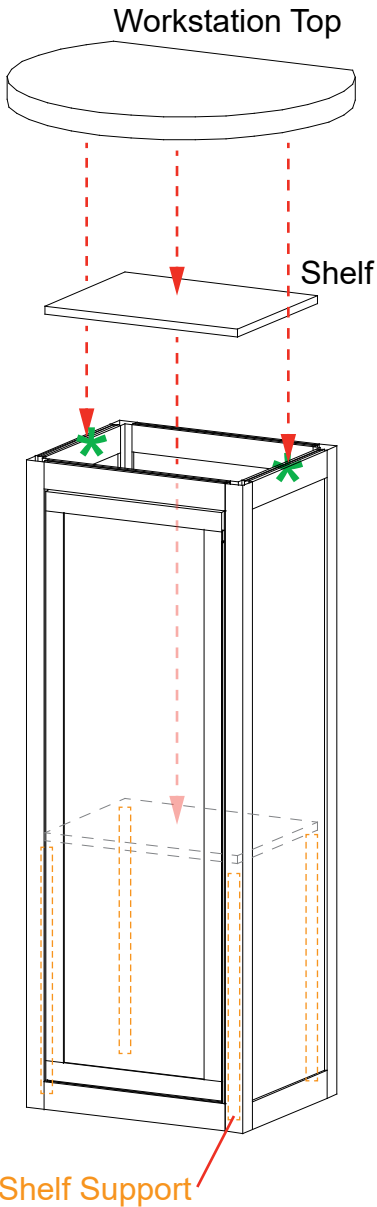


- Steps:
- 1) Attach base plate to straight end of post, using bolt.
 - 2) Attach mounting plate to curved end of post, using bolt.
NOTE: Plate must rotate to left and right before installing clamshell.
 - 3) Attach clamshell to mounting plate, using acorn nuts.
See [Clamshell Attachment](#) detail.
 - 4) Insert iPad in clamshell, then route cords through holes. See [Cord Management for iPad](#) detail.


Clamshell Attachment




Cord Management For iPad

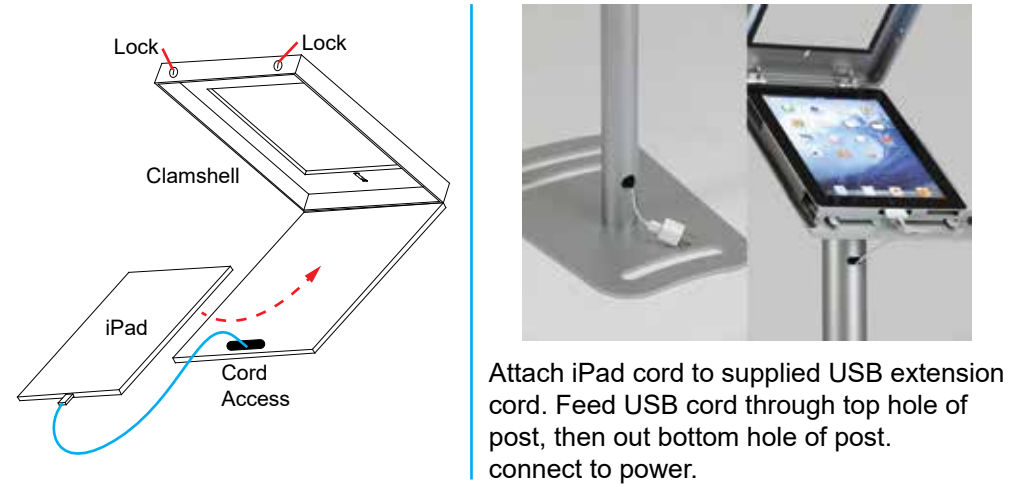

Attach iPad cord to supplied USB extension cord. Feed USB cord through top hole of post, then out bottom hole of post. connect to power.

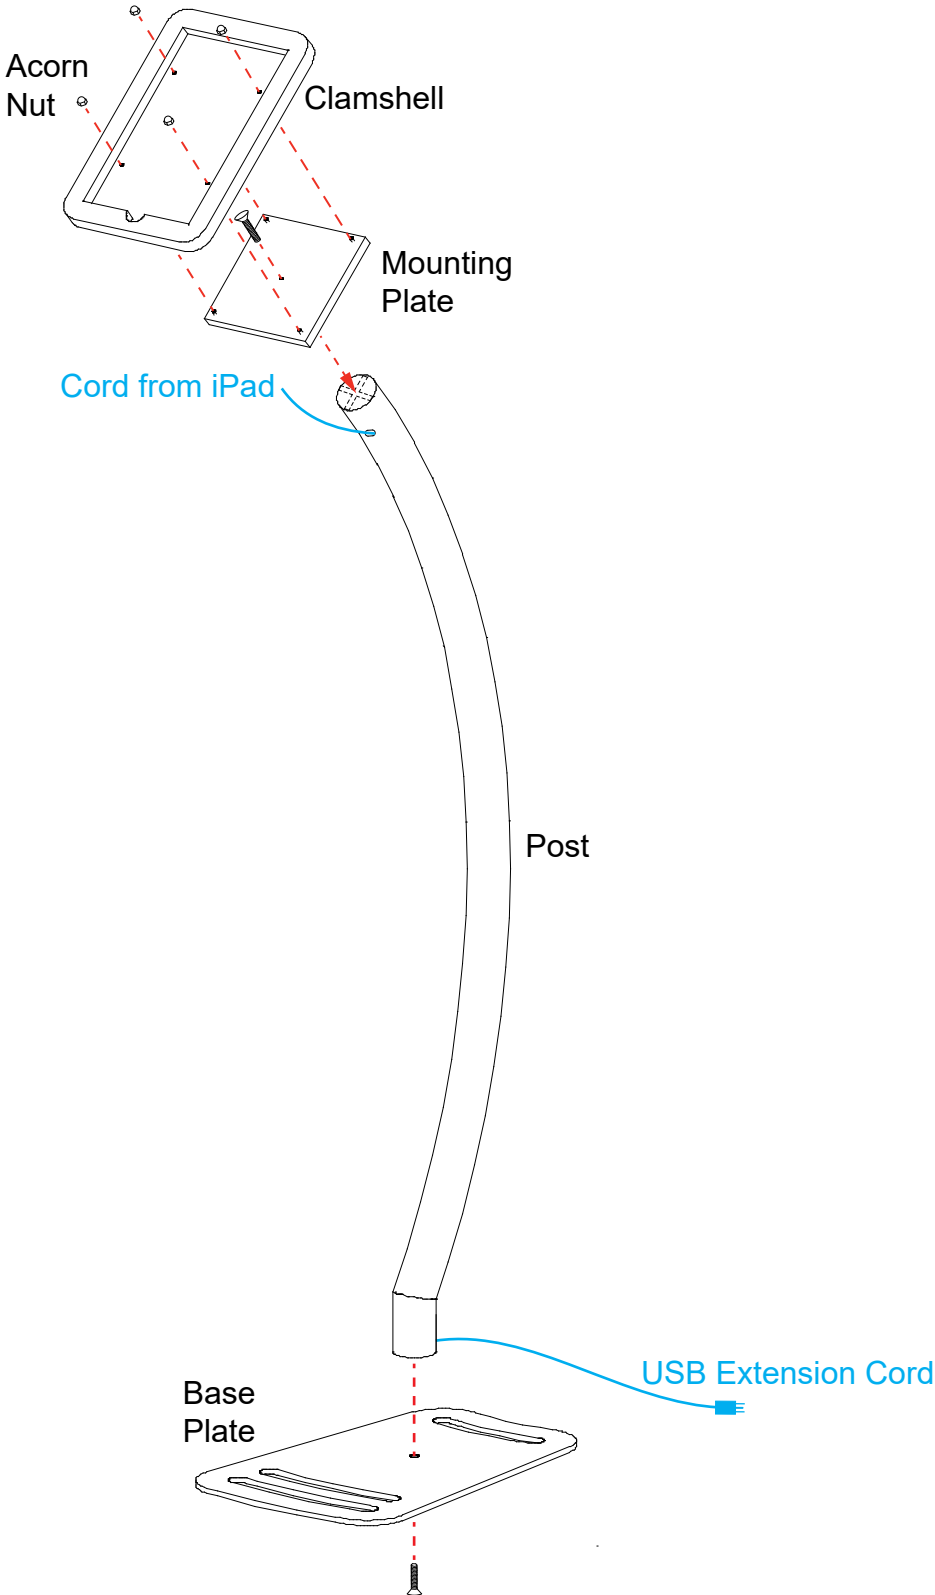


Rotate clamshell to turn iPad from portrait to landscape orientation.

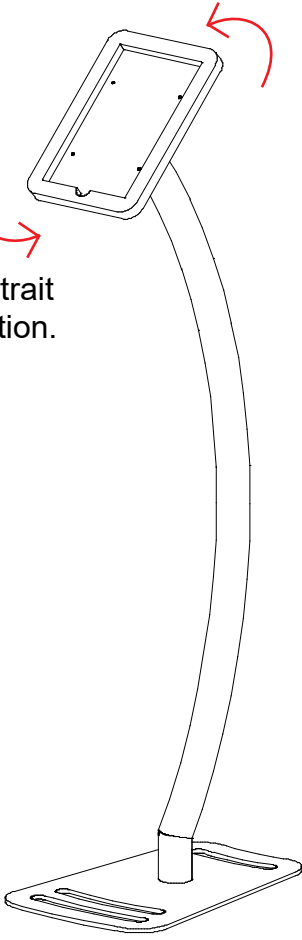

Completed Assembly

Optional Cover for Home Button

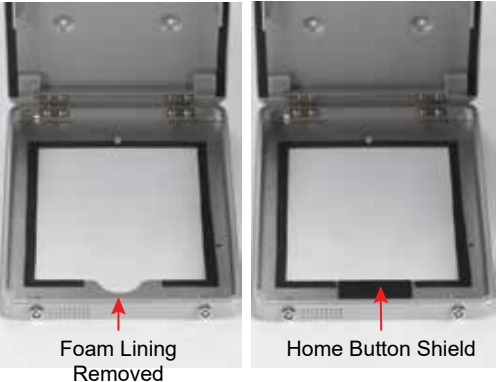

- 1) Remove foam lining from inside bottom of clamshell.
 - 2) Attach Home Button Shield with double-sided tape to inside of clamshell, keeping top of shield flush with clamshell opening.
- NOTE: This is a permanent fix and can't be easily removed.*