



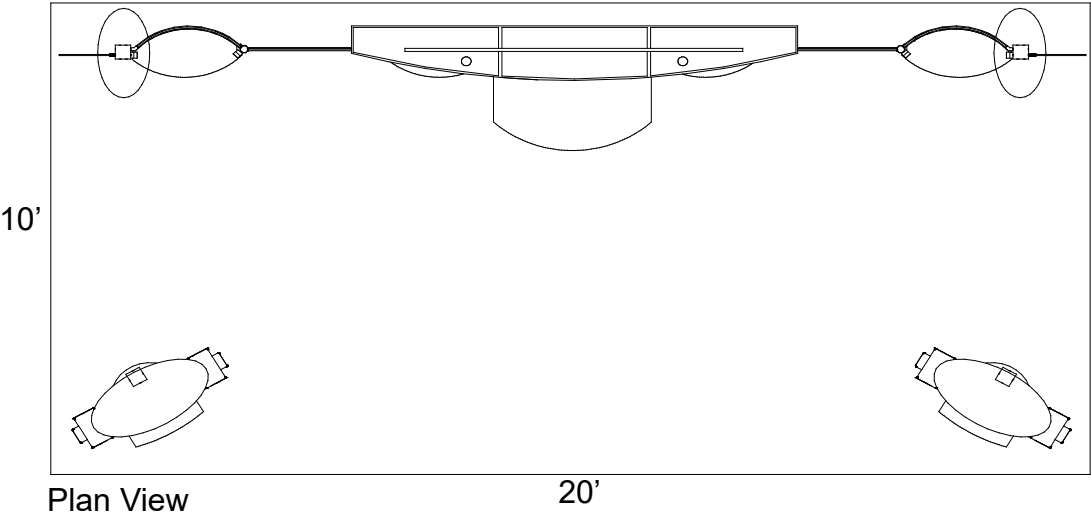

SETUP INSTRUCTIONS

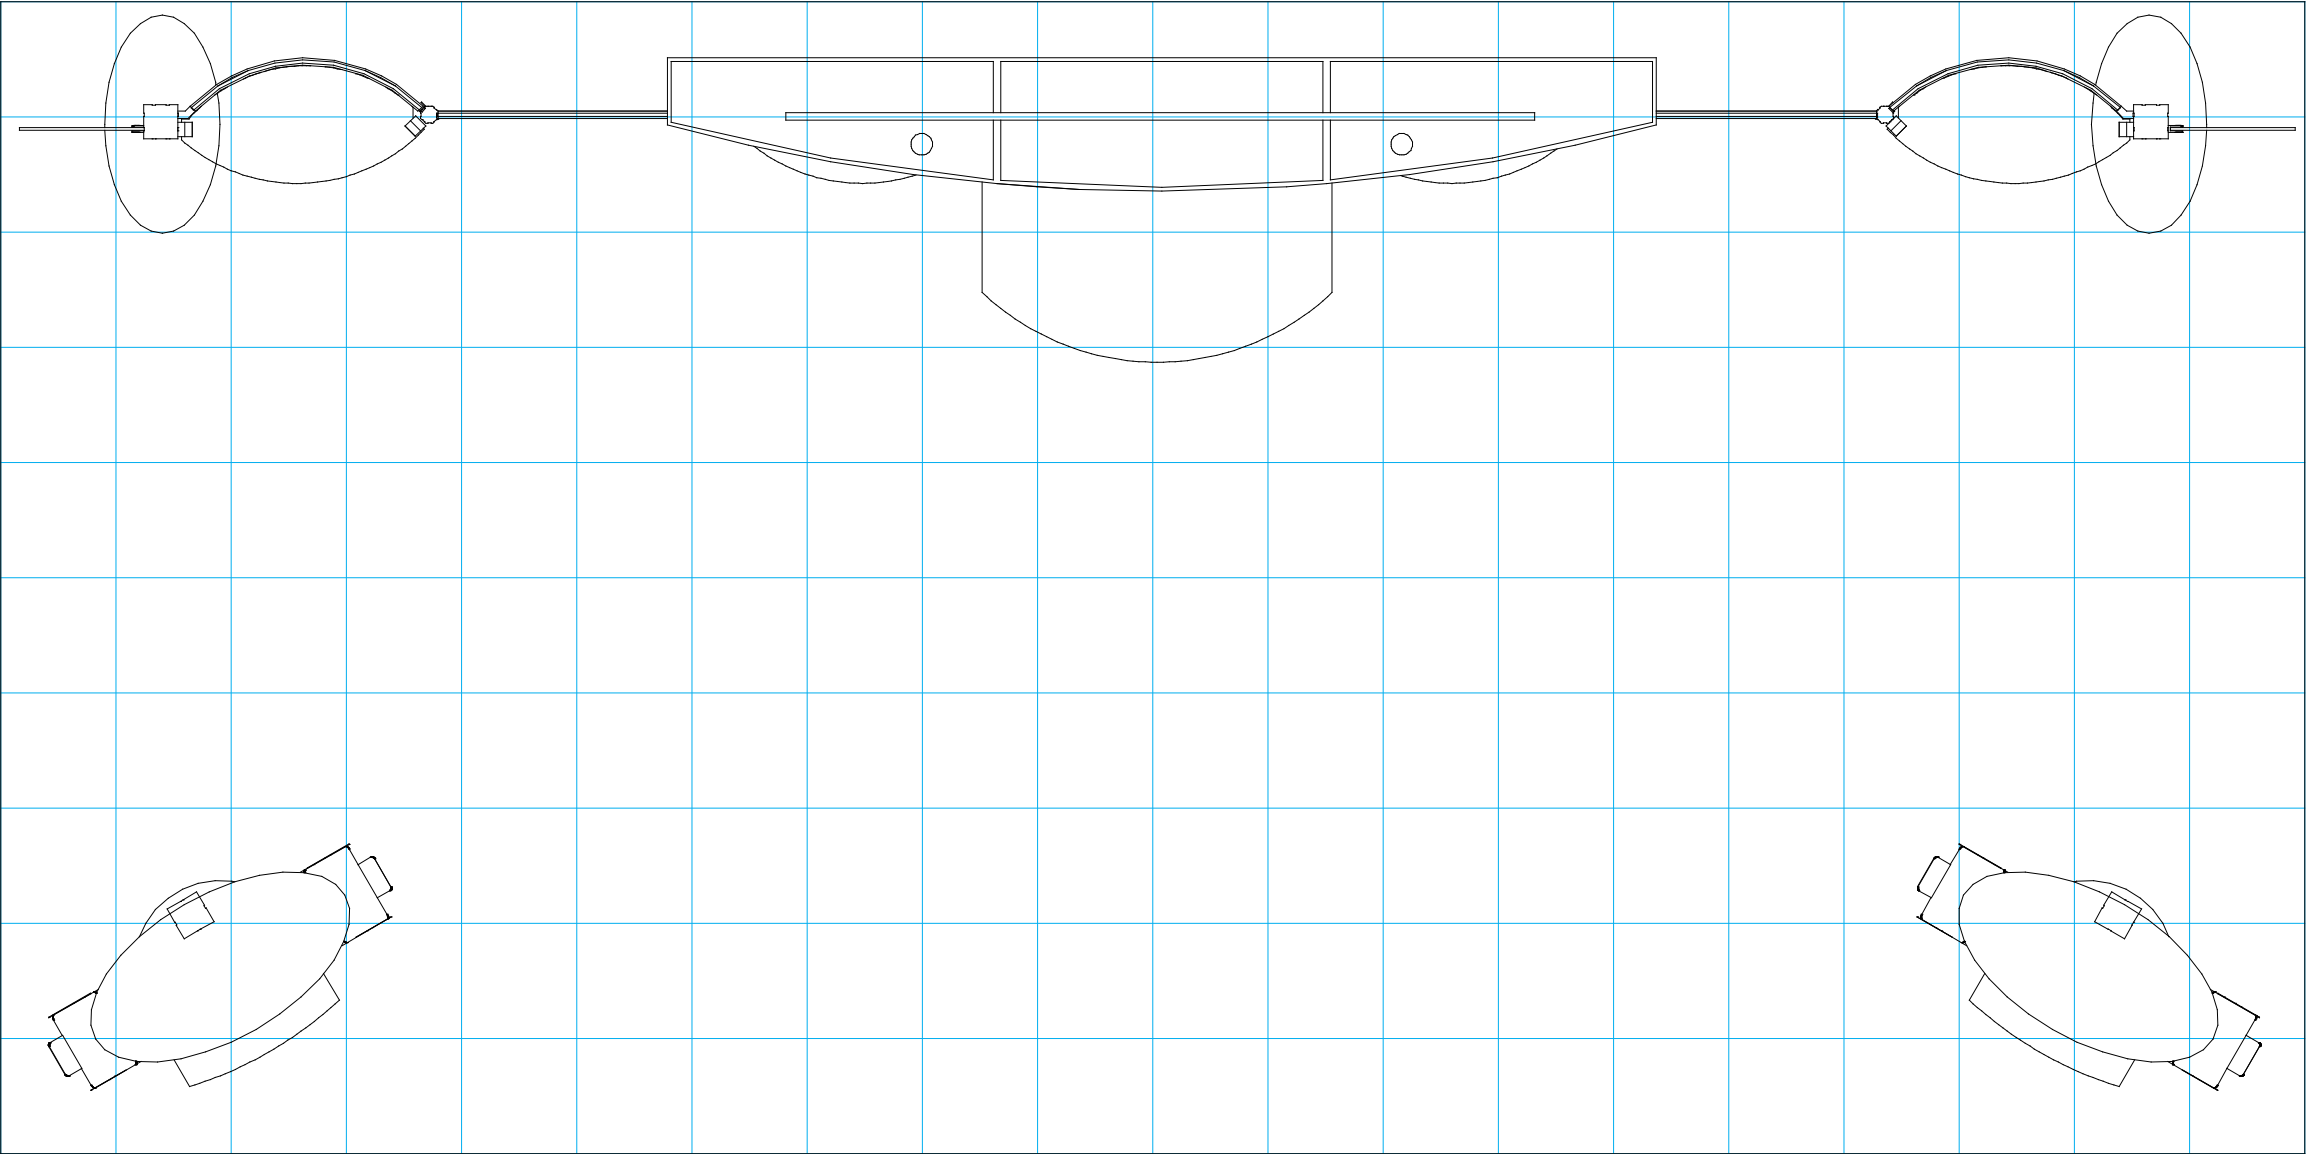

 = 1 sq foot

General Setup Instructions


- Read entire setup instruction manual prior to unpacking parts and pieces.
- The setup instructions are created specifically for this configuration.
- Setup instructions are laid out sequentially in steps, including exploded views with detailed explanation for assembly.

Cleaning & Packing


- For Cleaning Metal, Plex, & Laminate Parts:
Use a **MILD NON-ABRASIVE** cleanser and soft cloth/paper towel to clean all surfaces.
- Keep exhibit components away from heat and prolonged sun exposure.
Heat and UV exposure will warp and fade components.
- Retain all provided Packing Materials.
All provided packing materials are for ease of repacking & component protection.

Disassembly


- For loss prevention, tighten all set screws and locks during disassembly.

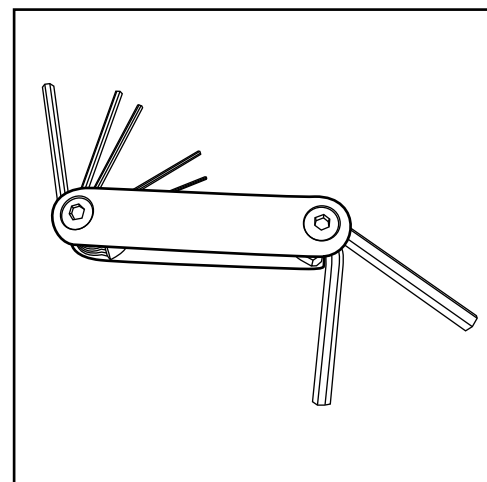


Hex Tool - Essential for Assembly

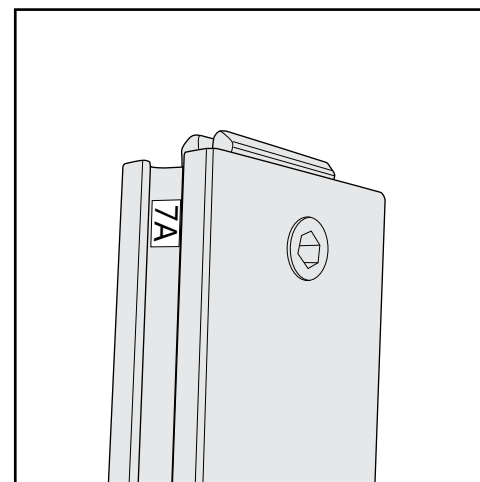


Part Identification - Numbering

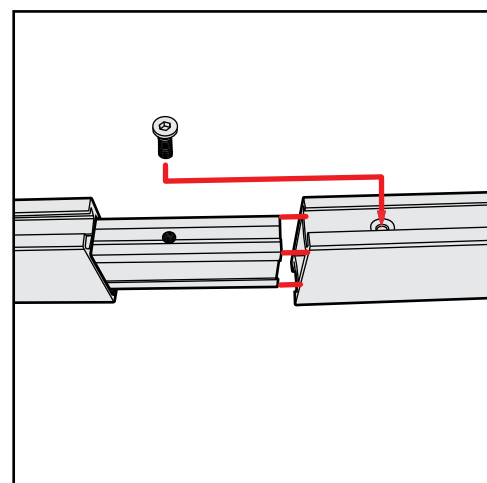


Spline Connection

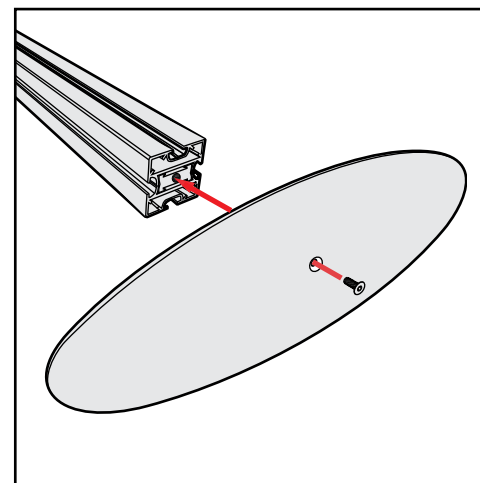

Base Plate & Extrusion Connection

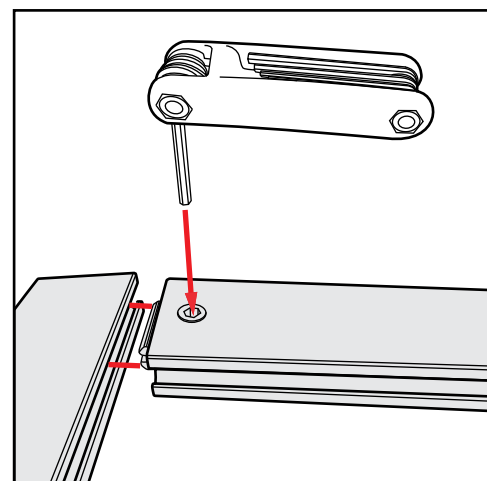


Extrusion & Lock Connection

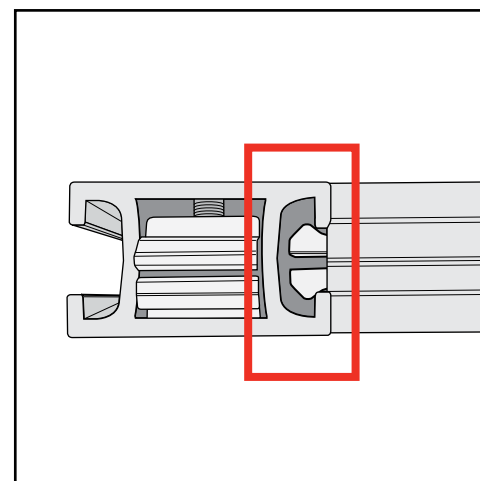

Engaged Lock



WARNING

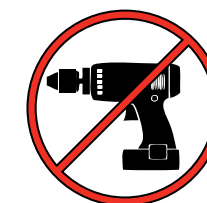

DO NOT USE POWER TOOLS



LADDERS OR LIFTS
MAY BE REQUIRED




ALL CONNECTIONS MUST
BE TIGHTLY SECURED


SEG Graphic Installation *in 3 Steps*

The Perfect Fit


STEP 1: Attach Corners

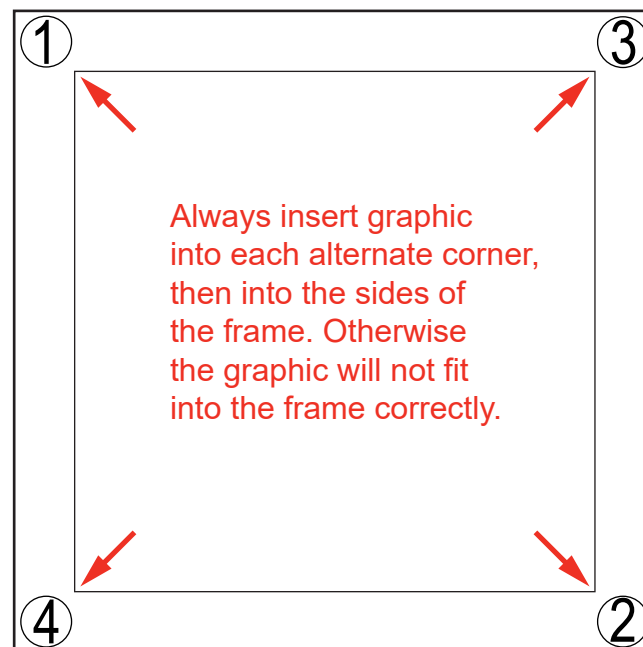

STEP 2: Attach Middle

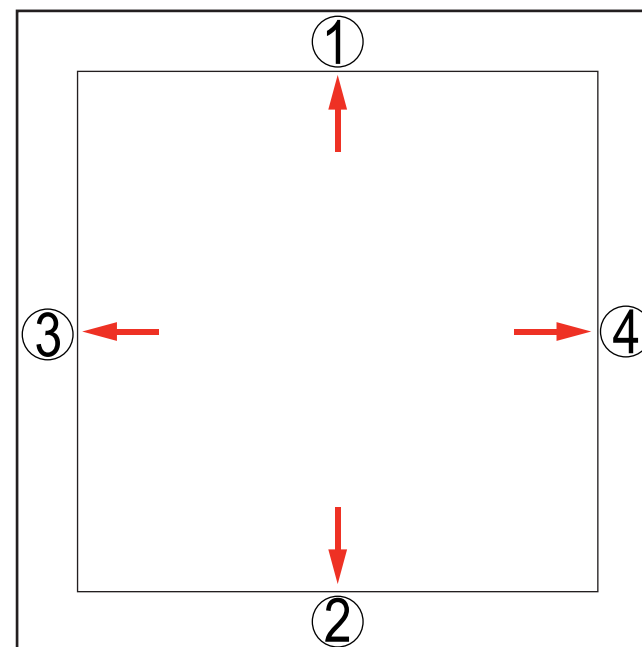

STEP 3: Attach Sides

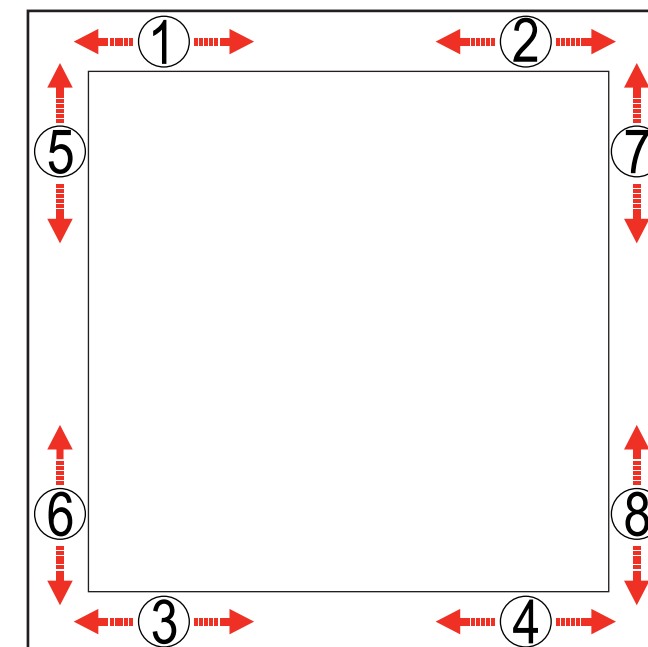

Insert narrow side of silicone welt into the channel at corner 1, with fabric to the outside.

Repeat for opposite corner 2, then corner 3, then corner 4.

Once corners are attached, press the middle of edge 1 into the channel. Then press middle of edge 2 into the channel on opposite side.

Repeat with edge 3 & 4.

Once the middle of sides are attached, fully press the silicone welt into the channel, between center and corner at location 1. Repeat the process between center and corner at location 2.

Do the same for welt on opposite side, at locations 3 & 4. Then repeat for locations 5 & 6 and 7 & 8.

Once the welt is fully inserted on all sides, smooth out edges as needed for a perfect fit.




To remove the graphic from the frame, locate the fabric **pull tab**. Gently pull on the tab to remove the graphic.

Install video:



SECTIONS IDENTIFICATION

Assemble Sections A & B separately then connect with center extrusions.

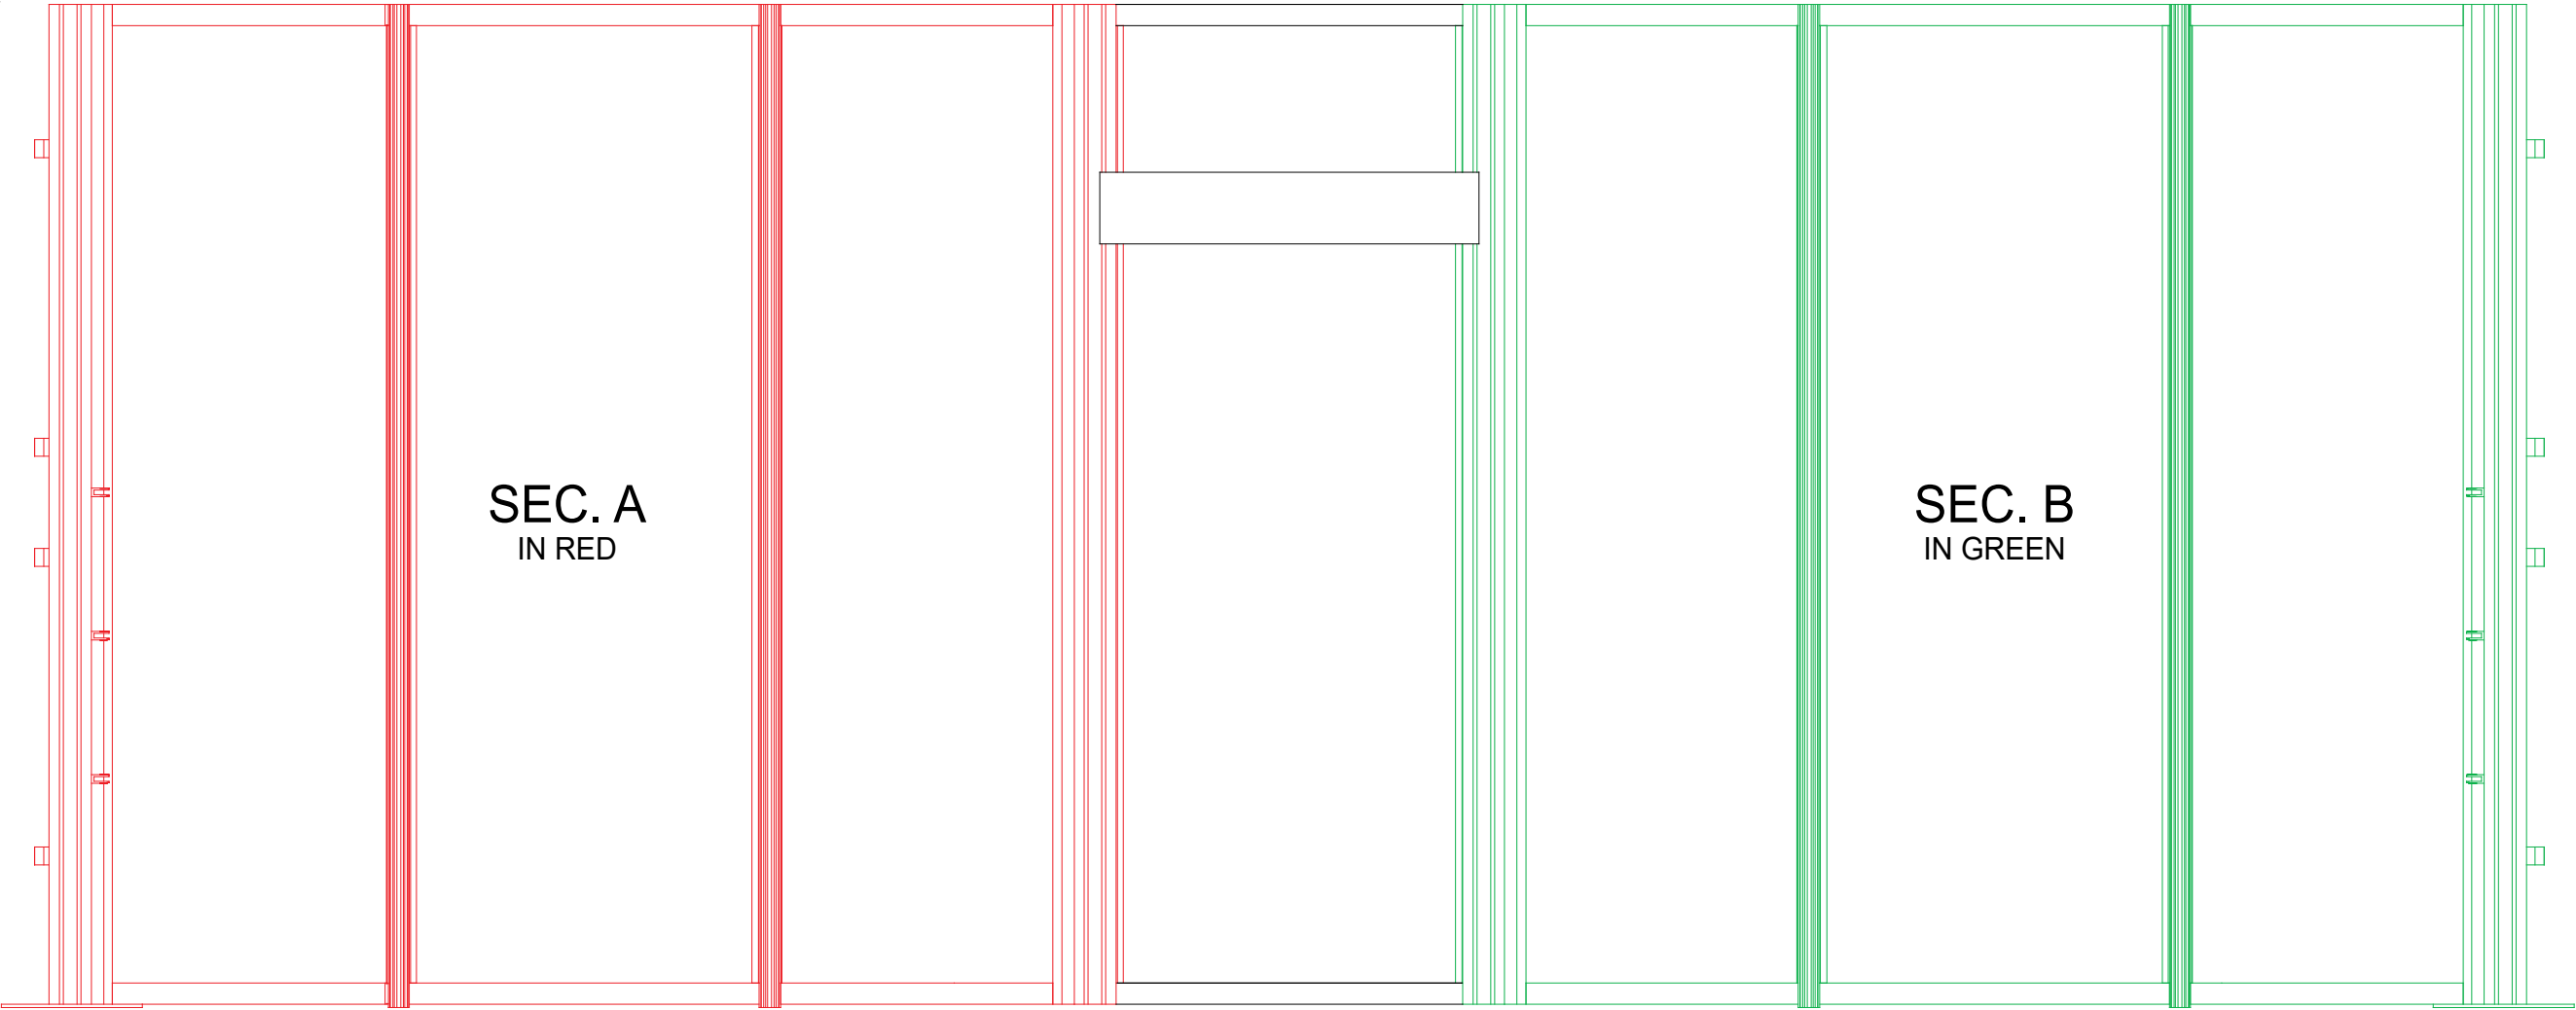


SECTION A ASSEMBLY

Item	Qty.	Description
1	2	Oval Base Plate
2	1	83.75"h Square Vertical Extrusion
3	1	83.75"h Square Vertical Extrusion
4	1	84"h Square Vertical Extrusion
5	1	84"h Vertical Extrusion
8	1	83.75"h Angled Vertical Extrusion
9	1	83.75"h Angled Vertical Extrusion
10	2	26.9449" Curved Horizontal Extrusion
11	1	29.7770"w Horizontal Extrusion
12	2	26.9449" Curved Horizontal Extrusion
13	1	29.7770"w Horizontal Extrusion




Steps:

- 1) Connect base plates [1] to vertical extrusion [2].
- 2) Attach angled vertical extrusions [8 & 9] to verticals [2 & 3].
Refer to *V10 Pressure Screw Attachment* detail.
- 3) Attach upper and lower curved horizontal extrusions [10 & 12] and extrusions [11 & 13] between verticals [2, 4, 5, & 3].

NOTE: Velcro is on backside of frame.

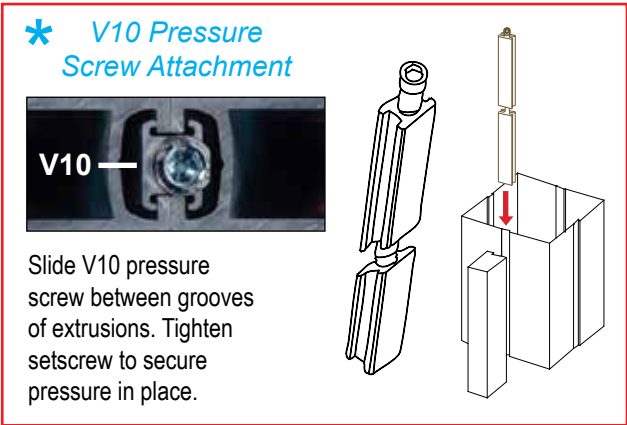

****Note:** Keep vertical extrusions [2 & 8] and [9 & 3] assembled when shipping.

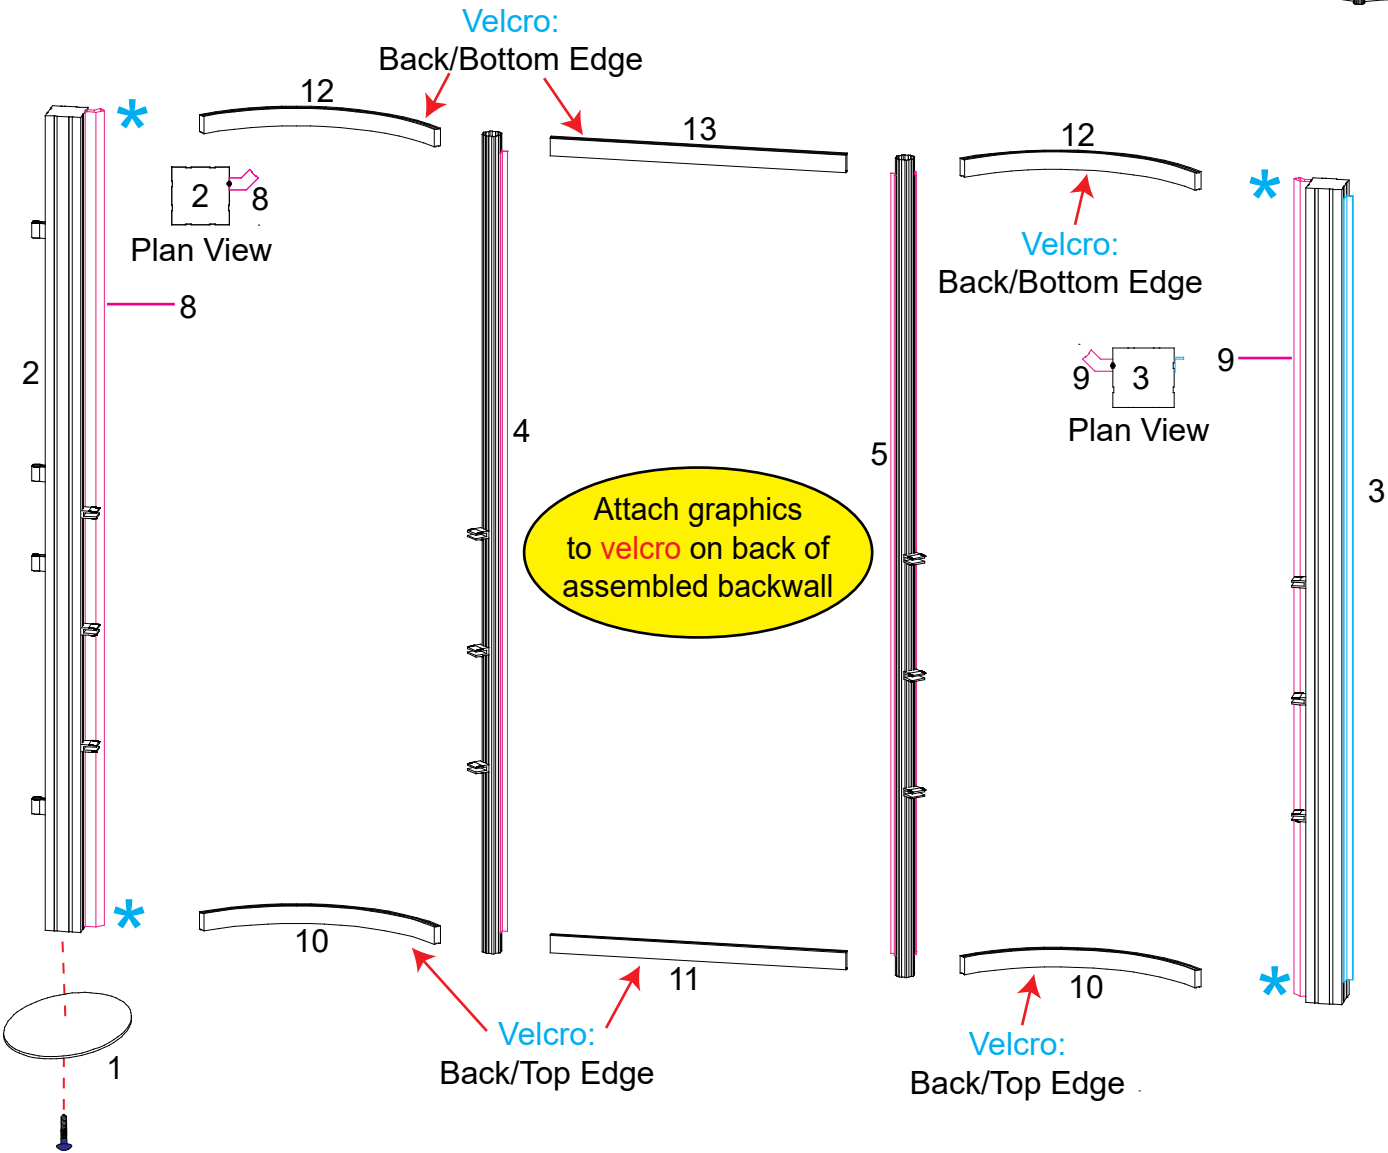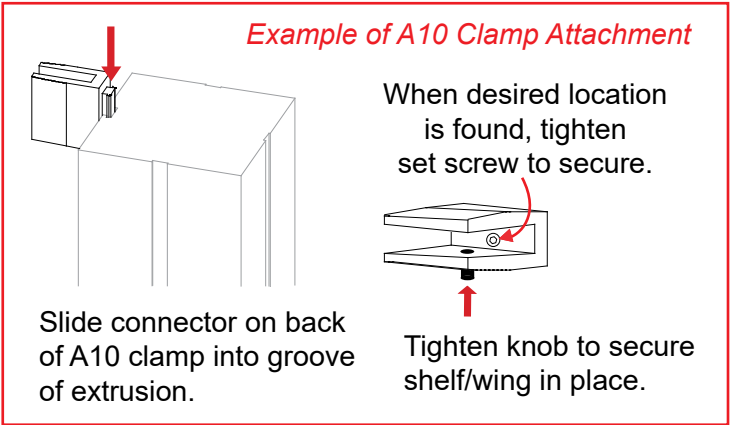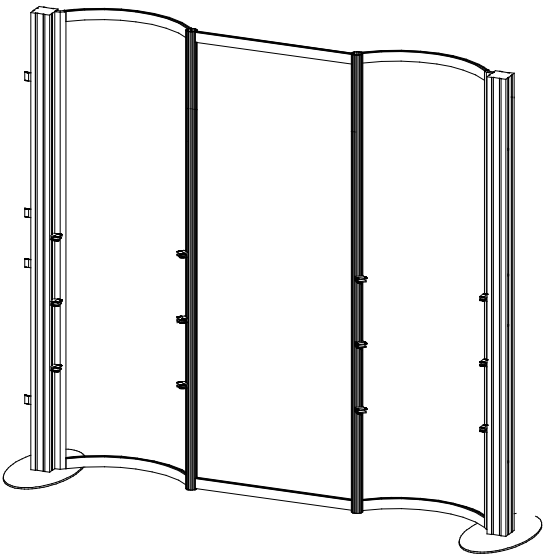


SECTION B ASSEMBLY

Item	Qty.	Description
1	1	Oval Base Plate
2a	1	83.75"h Square Vertical Extrusion
3a	1	83.75"h Square Vertical Extrusion
4	1	84"h Square Vertical Extrusion
5	1	84"h Vertical Extrusion
8	1	83.75"h Angled Vertical Extrusion
9	1	83.75"h Angled Vertical Extrusion
10	2	26.9449" Curved Horizontal Extrusion
11	1	29.7770"w Horizontal Extrusion
12	2	26.9449" Curved Horizontal Extrusion
13	1	29.7770"w Horizontal Extrusion




Steps:

- 1) Connect base plates [1] to vertical extrusions [2a].
- 2) Attach angled vertical extrusions [8 & 9] to verticals [2a & 3a].
Refer to *V10 Pressure Screw Attachment* detail.
- 3) Attach upper and lower curved horizontal extrusions [10 & 12] and extrusions [11 & 13] between verticals [2a, 4, 5, & 3a].

NOTE: Velcro is on backside of frame.

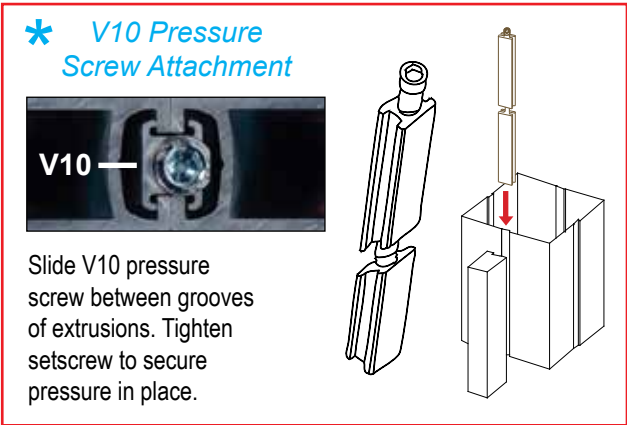



****Note:** Keep vertical extrusions [2 & 8] and [9 & 3] assembled when shipping.

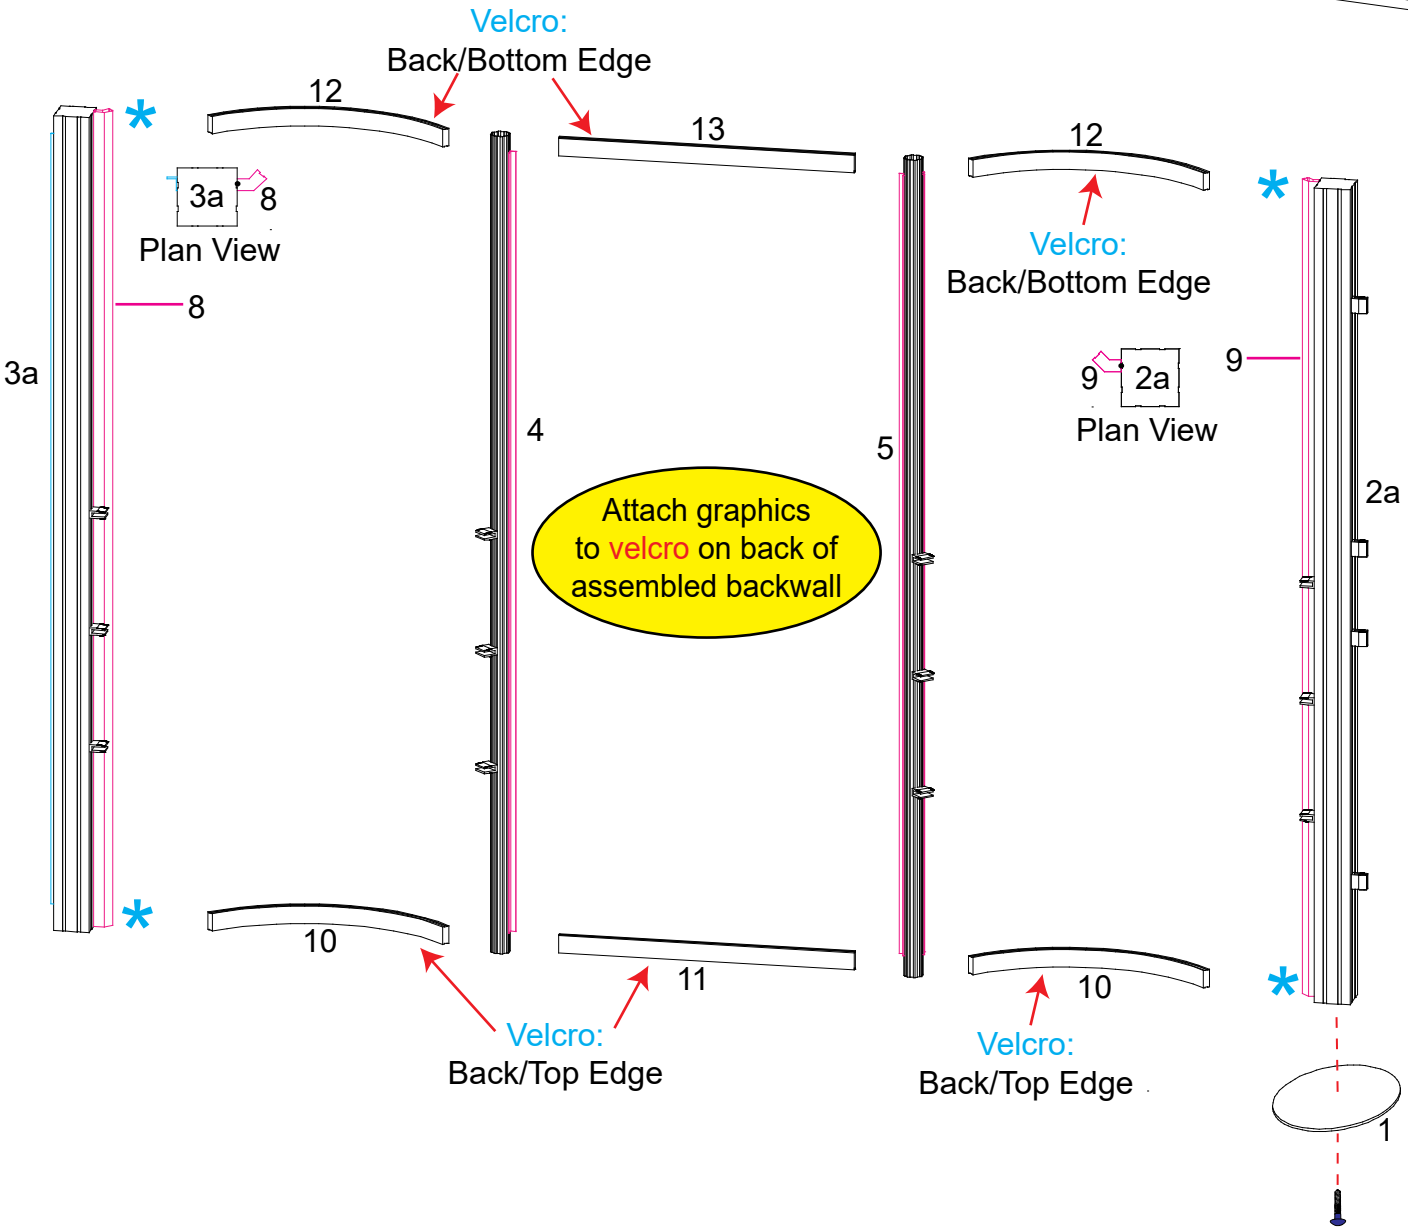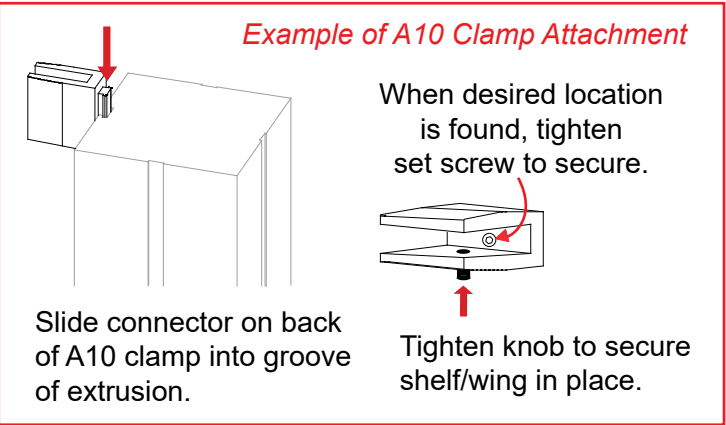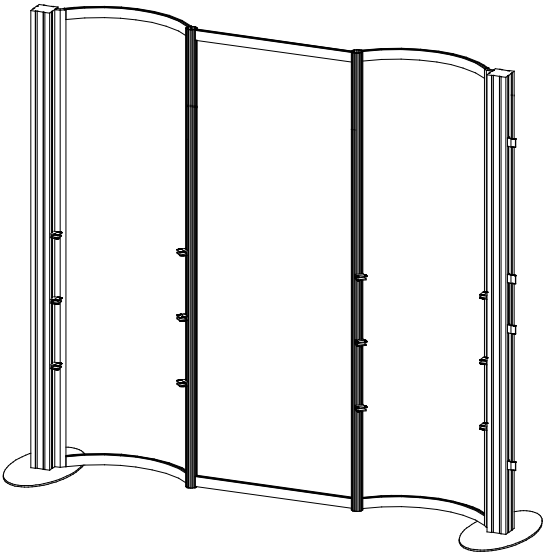

SECTIONS ASSEMBLY

Item	Qty.	Description
11a	1	29.5"w Z45 Horizontal Extrusion
13a	1	29.5"w Z45 Horizontal Extrusion
14	1	32.5"w Monitor Mounting Plate

- Steps:
- 1) Connect horizontal extrusions [11a & 13a] between verticals [3 & 3a].
NOTE: This connects Sections A & B together.
 - 2) Attach monitor mounting plate [14] to face of verticals [3 & 3a].
See **Monitor Mounting Plate Attachment** detail.
 - 3) Apply Graphics to backside of assembled backwall.
NOTE: Velcro is on backside of frame.

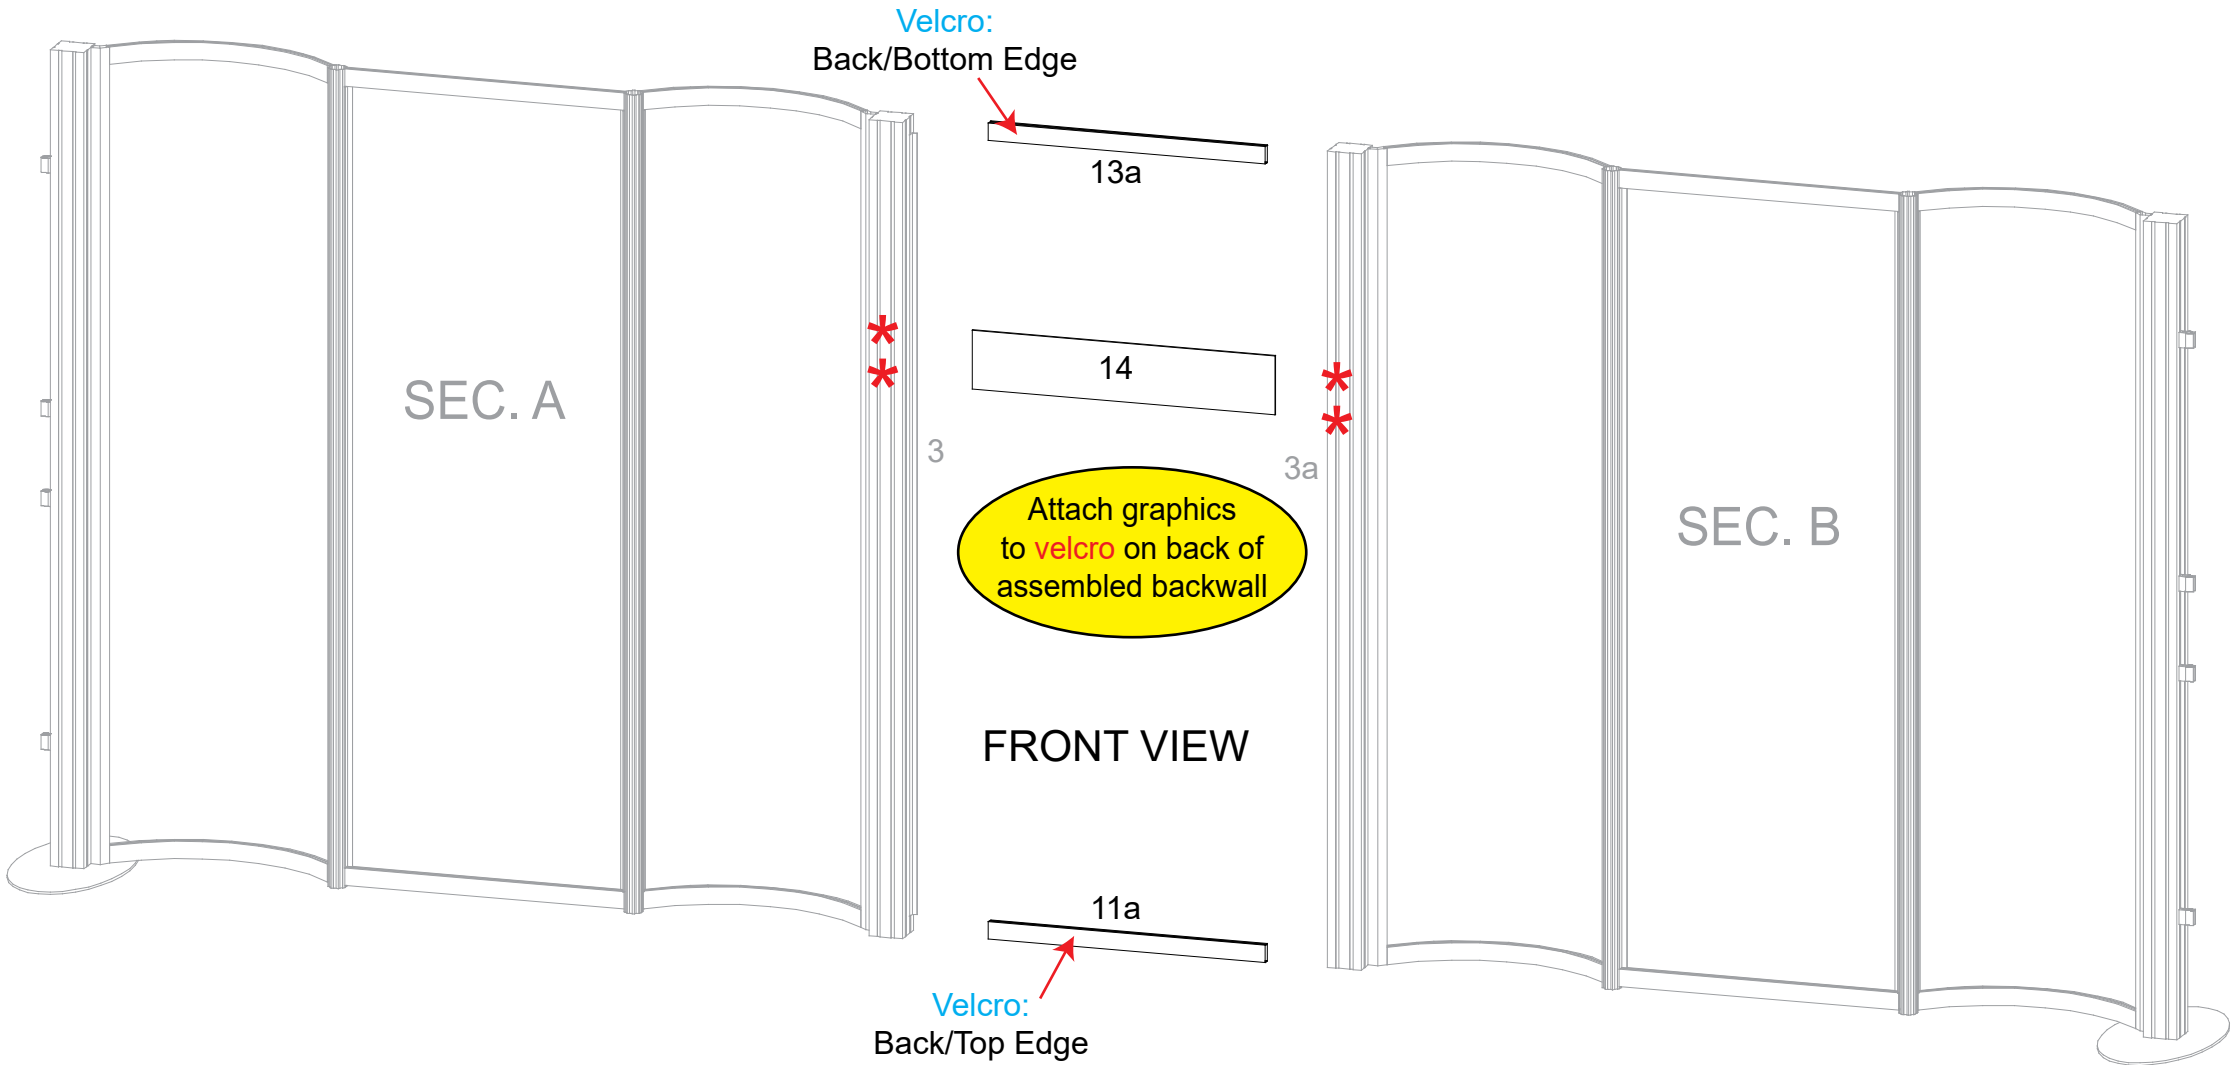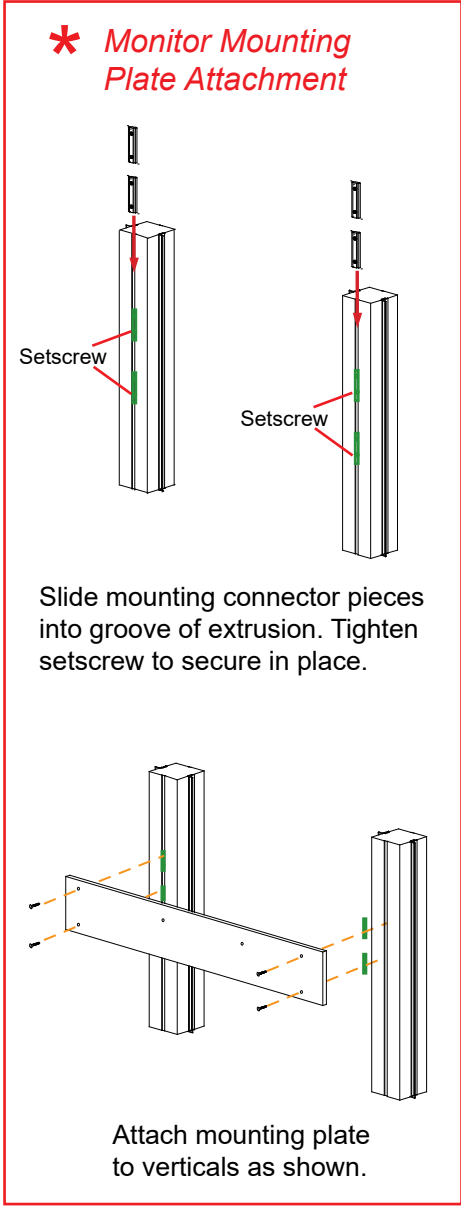







Item	Qty.	Description
6	1	38" Round Vertical Extrusion
7	1	38" Round Vertical Extrusion
15	2	12.5" Horizontal Extrusion
16	2	28.3203" Curved Extrusion
17	1	38" Angled Vertical Extrusion w/ Door Stopper
17A	1	38" Angled Vertical Extrusion w/ Door Hinges

Steps:


- 1) Attach angled vertical extrusions [17 & 17A] to verticals [6 & 7]. See [V10 Pressure Screw Attachment](#) detail.
- 2) Attach upper and lower horizontal extrusions [15] between verticals [6 & 4] and [7 & 5]. Note: Place infills between horizontal and vertical extrusions as shown.
- 3) Attach upper and lower horizontal curved extrusions [16] between vertical extrusions [17 & 17A]. Note: Attach door between horizontal and vertical extrusions as shown. See [Door Attachment](#) detail.

Steps Cont'd:

- 4) Attach monitor mount to horizontal plate [14].
See *Monitor Mount Attachment* detail.
- 5) Attach shelf supports to inside of backwall counter.
- 6) Place internal shelf on top of shelf supports.
- 7) Place Counter top on assembled kiosk base.
- 8) Connect shelves to clips on vertical extrusions.

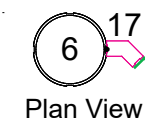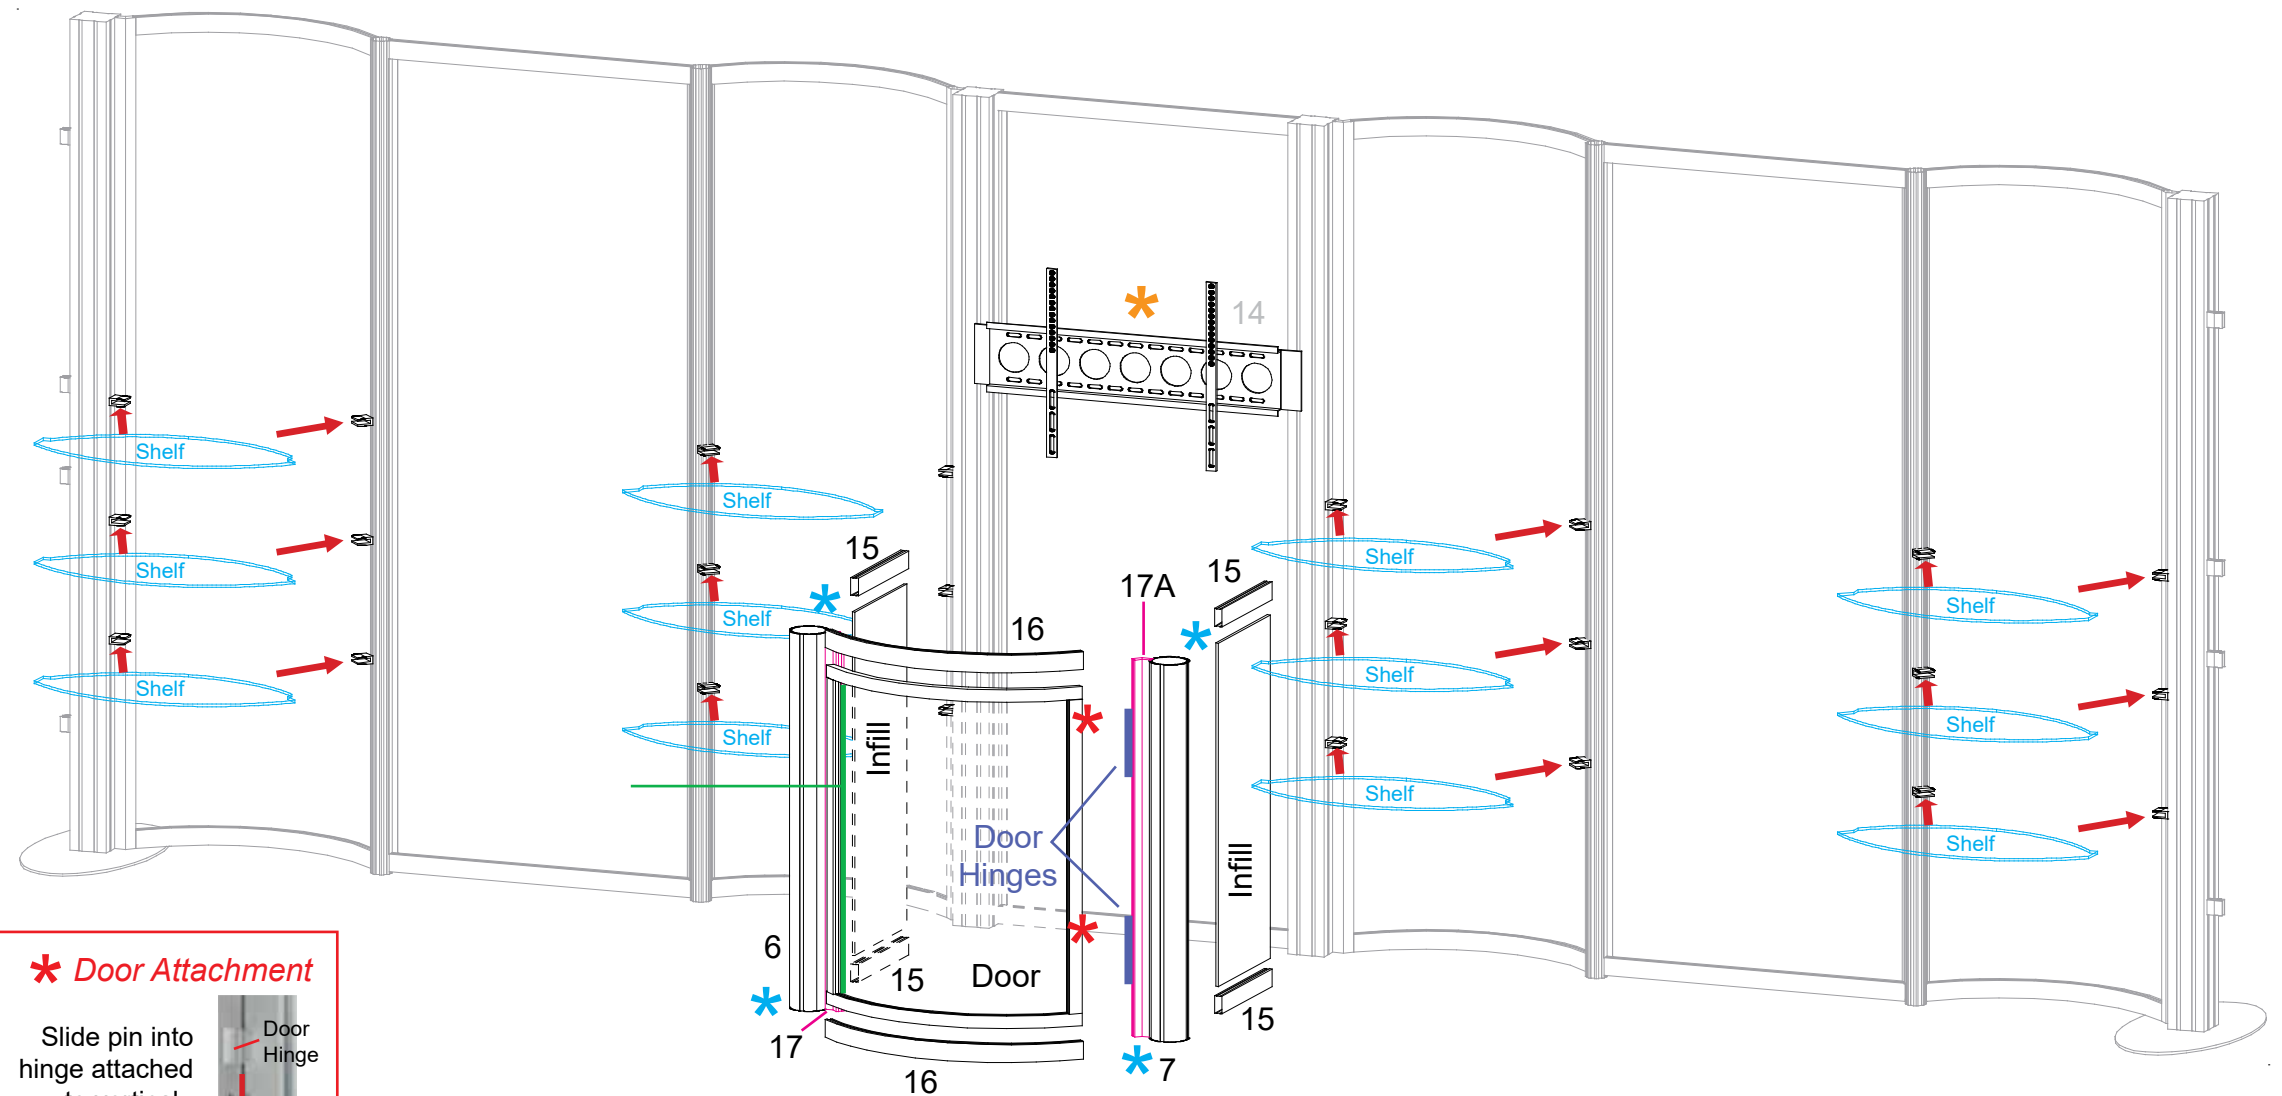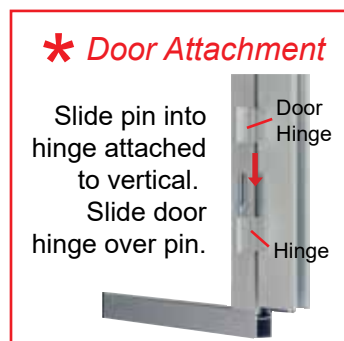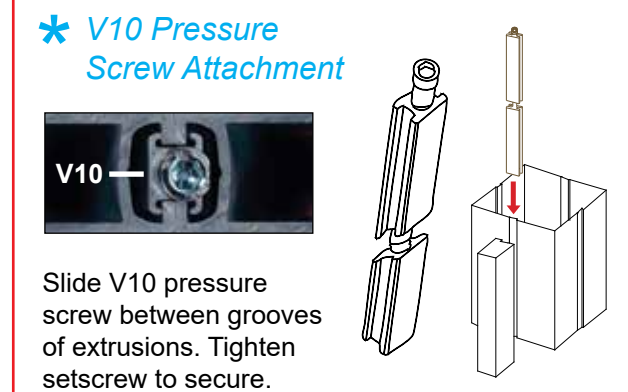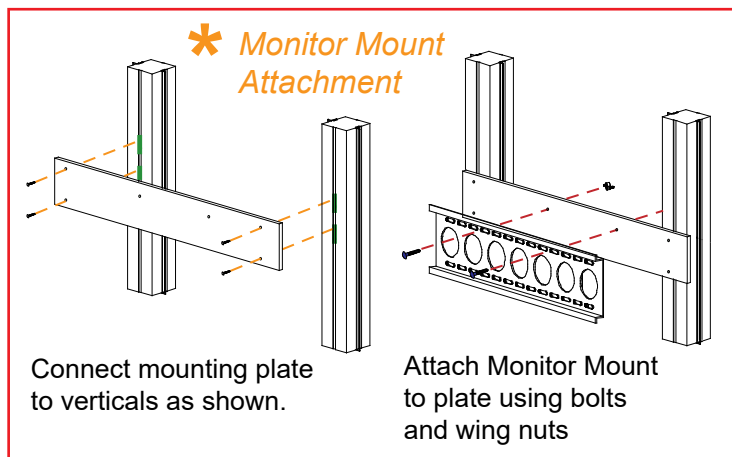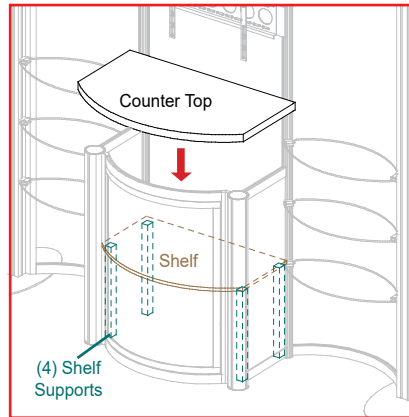


****Note: Keep vertical
extrusions [6 & 17] and [7 & 17A]
assembled when shipping.**

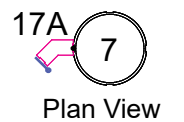


Item	Qty.	Description
18	1	78" Header Horizontal Extrusion
18A	1	78" Header Horizontal Extrusion with holes and bolts
19	2	5.823" Header Horizontal Extrusion

- Steps:
- 1) Attach vertical extrusions [19] between horizontal extrusions [18 & 18A].
Note: Place infills between horizontal and vertical extrusions as shown.
 - 2) Attach header assembly to ceiling using bolts and wing nuts as shown.
 - 3) Attach puck lights from under into holes at bottom of ceiling as shown.
Note: Light bulb must face down.

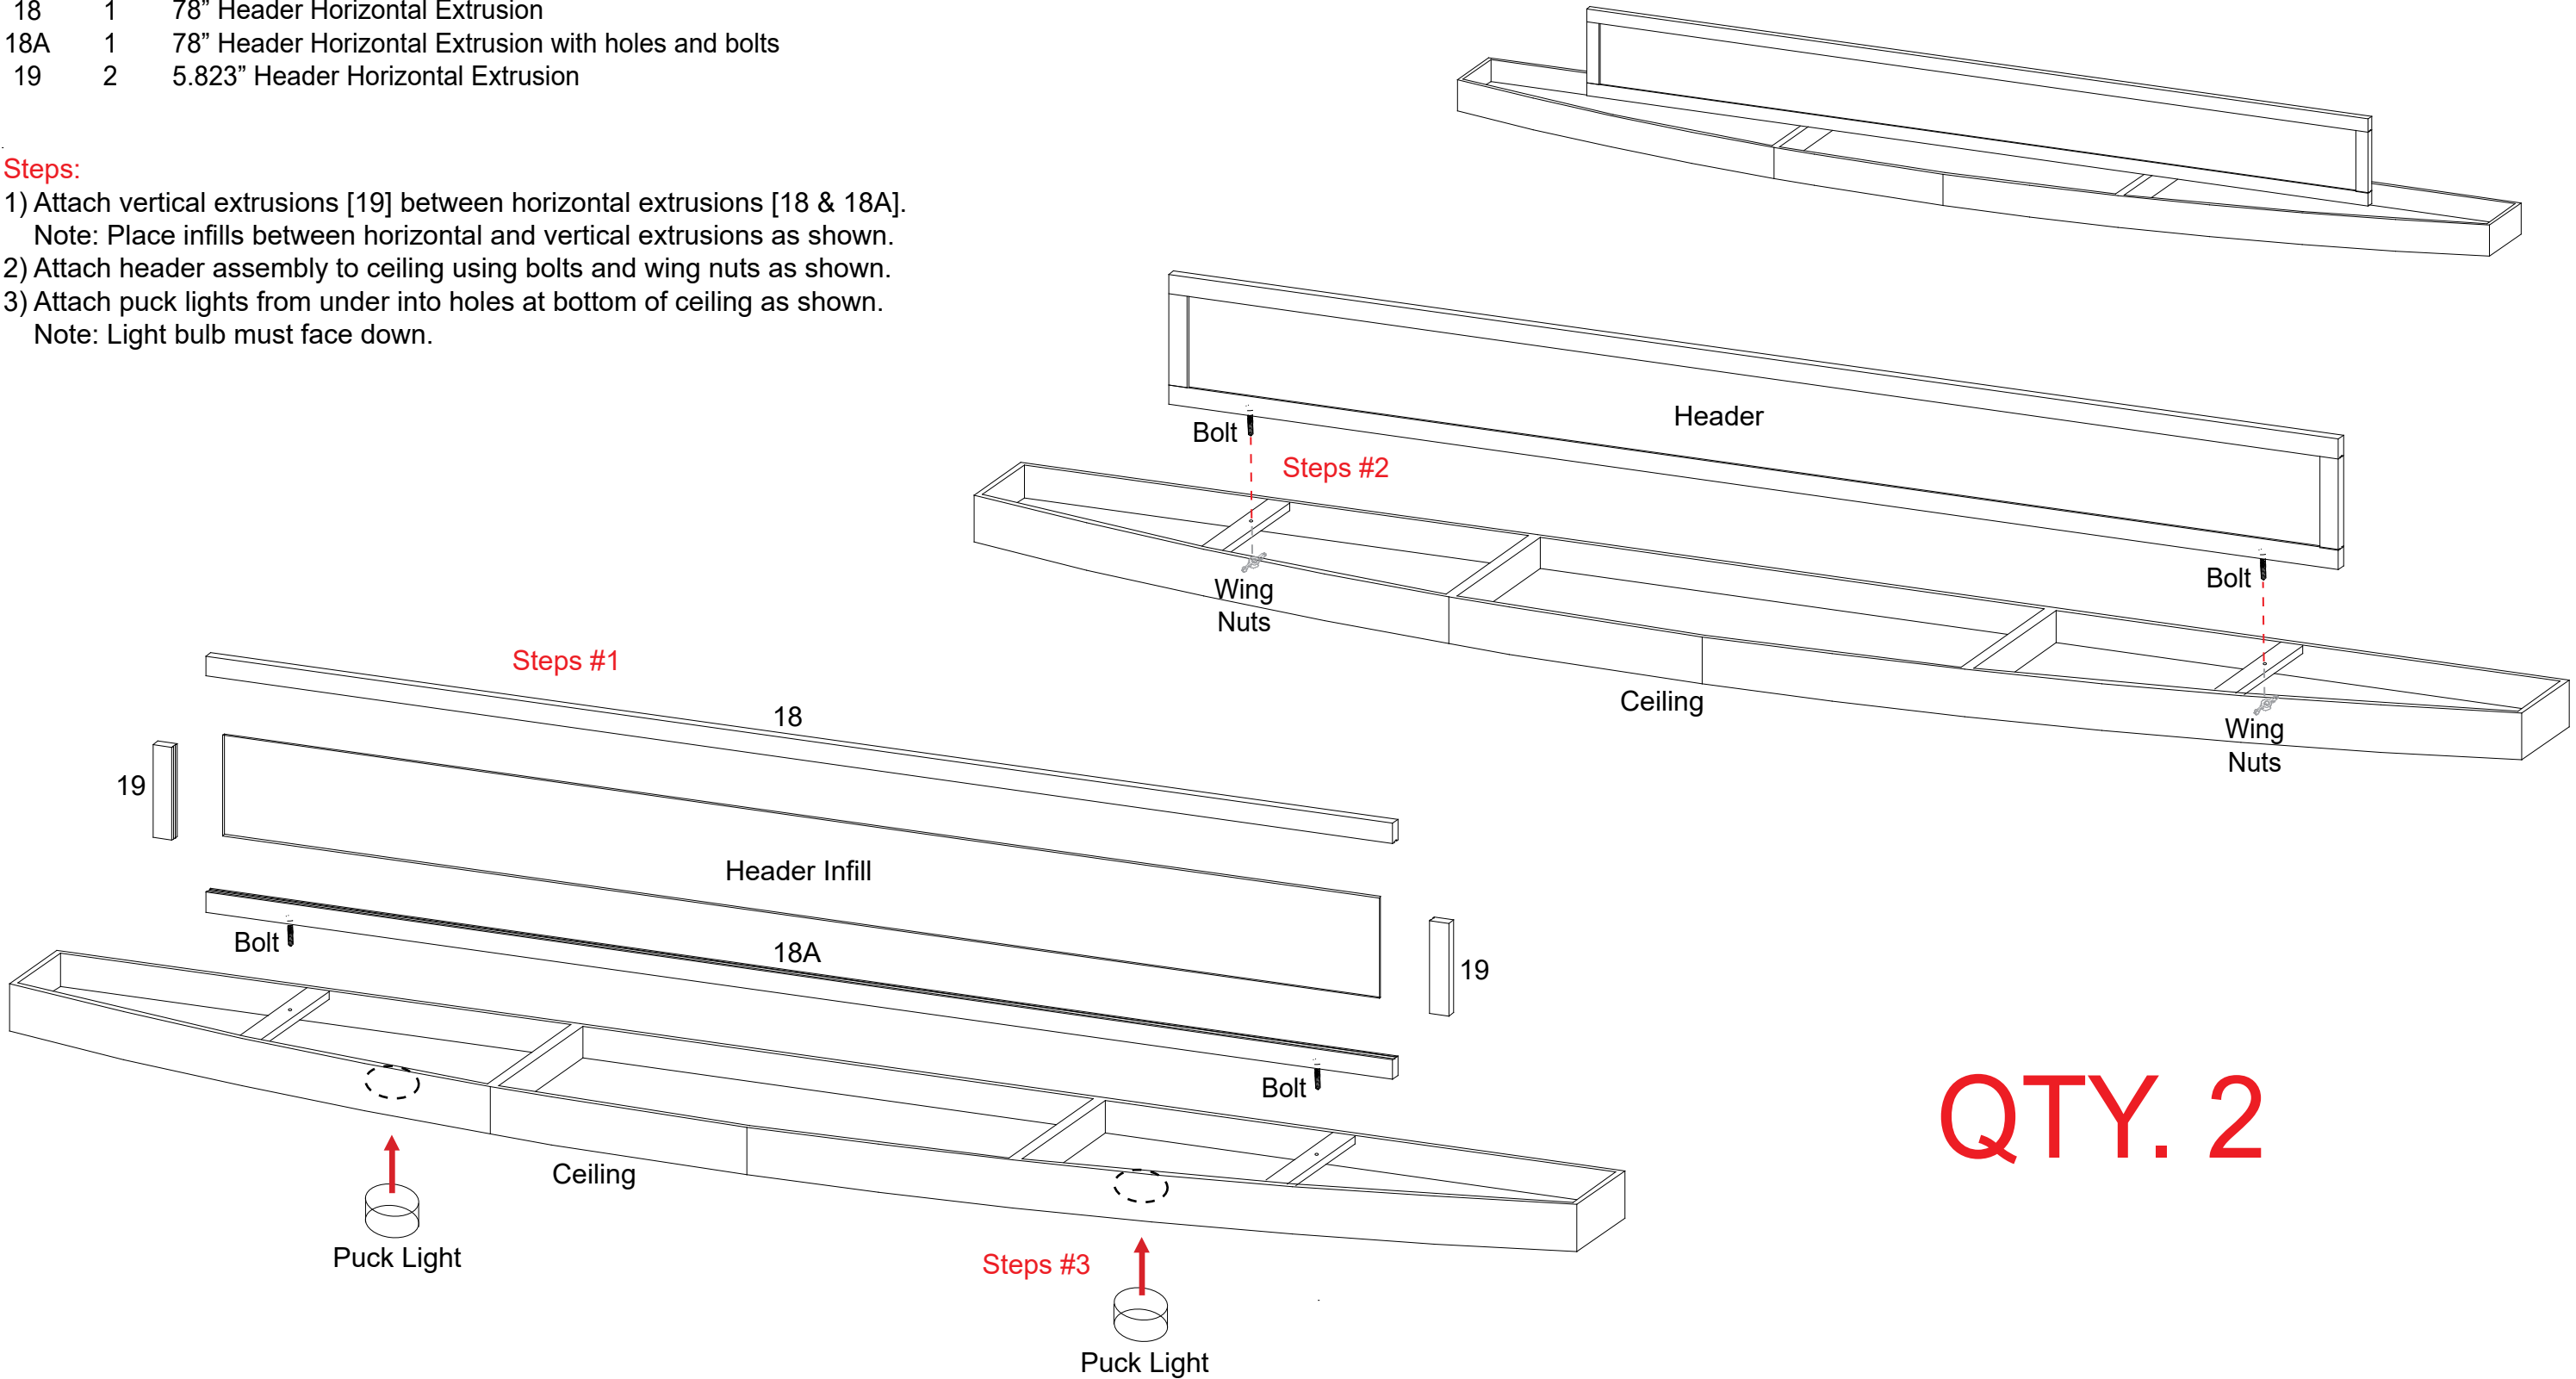

Steps:


- 1) Attach Ceiling/Header to top of assembly.
- 2) Connect the graphic wings to the outer verticals.

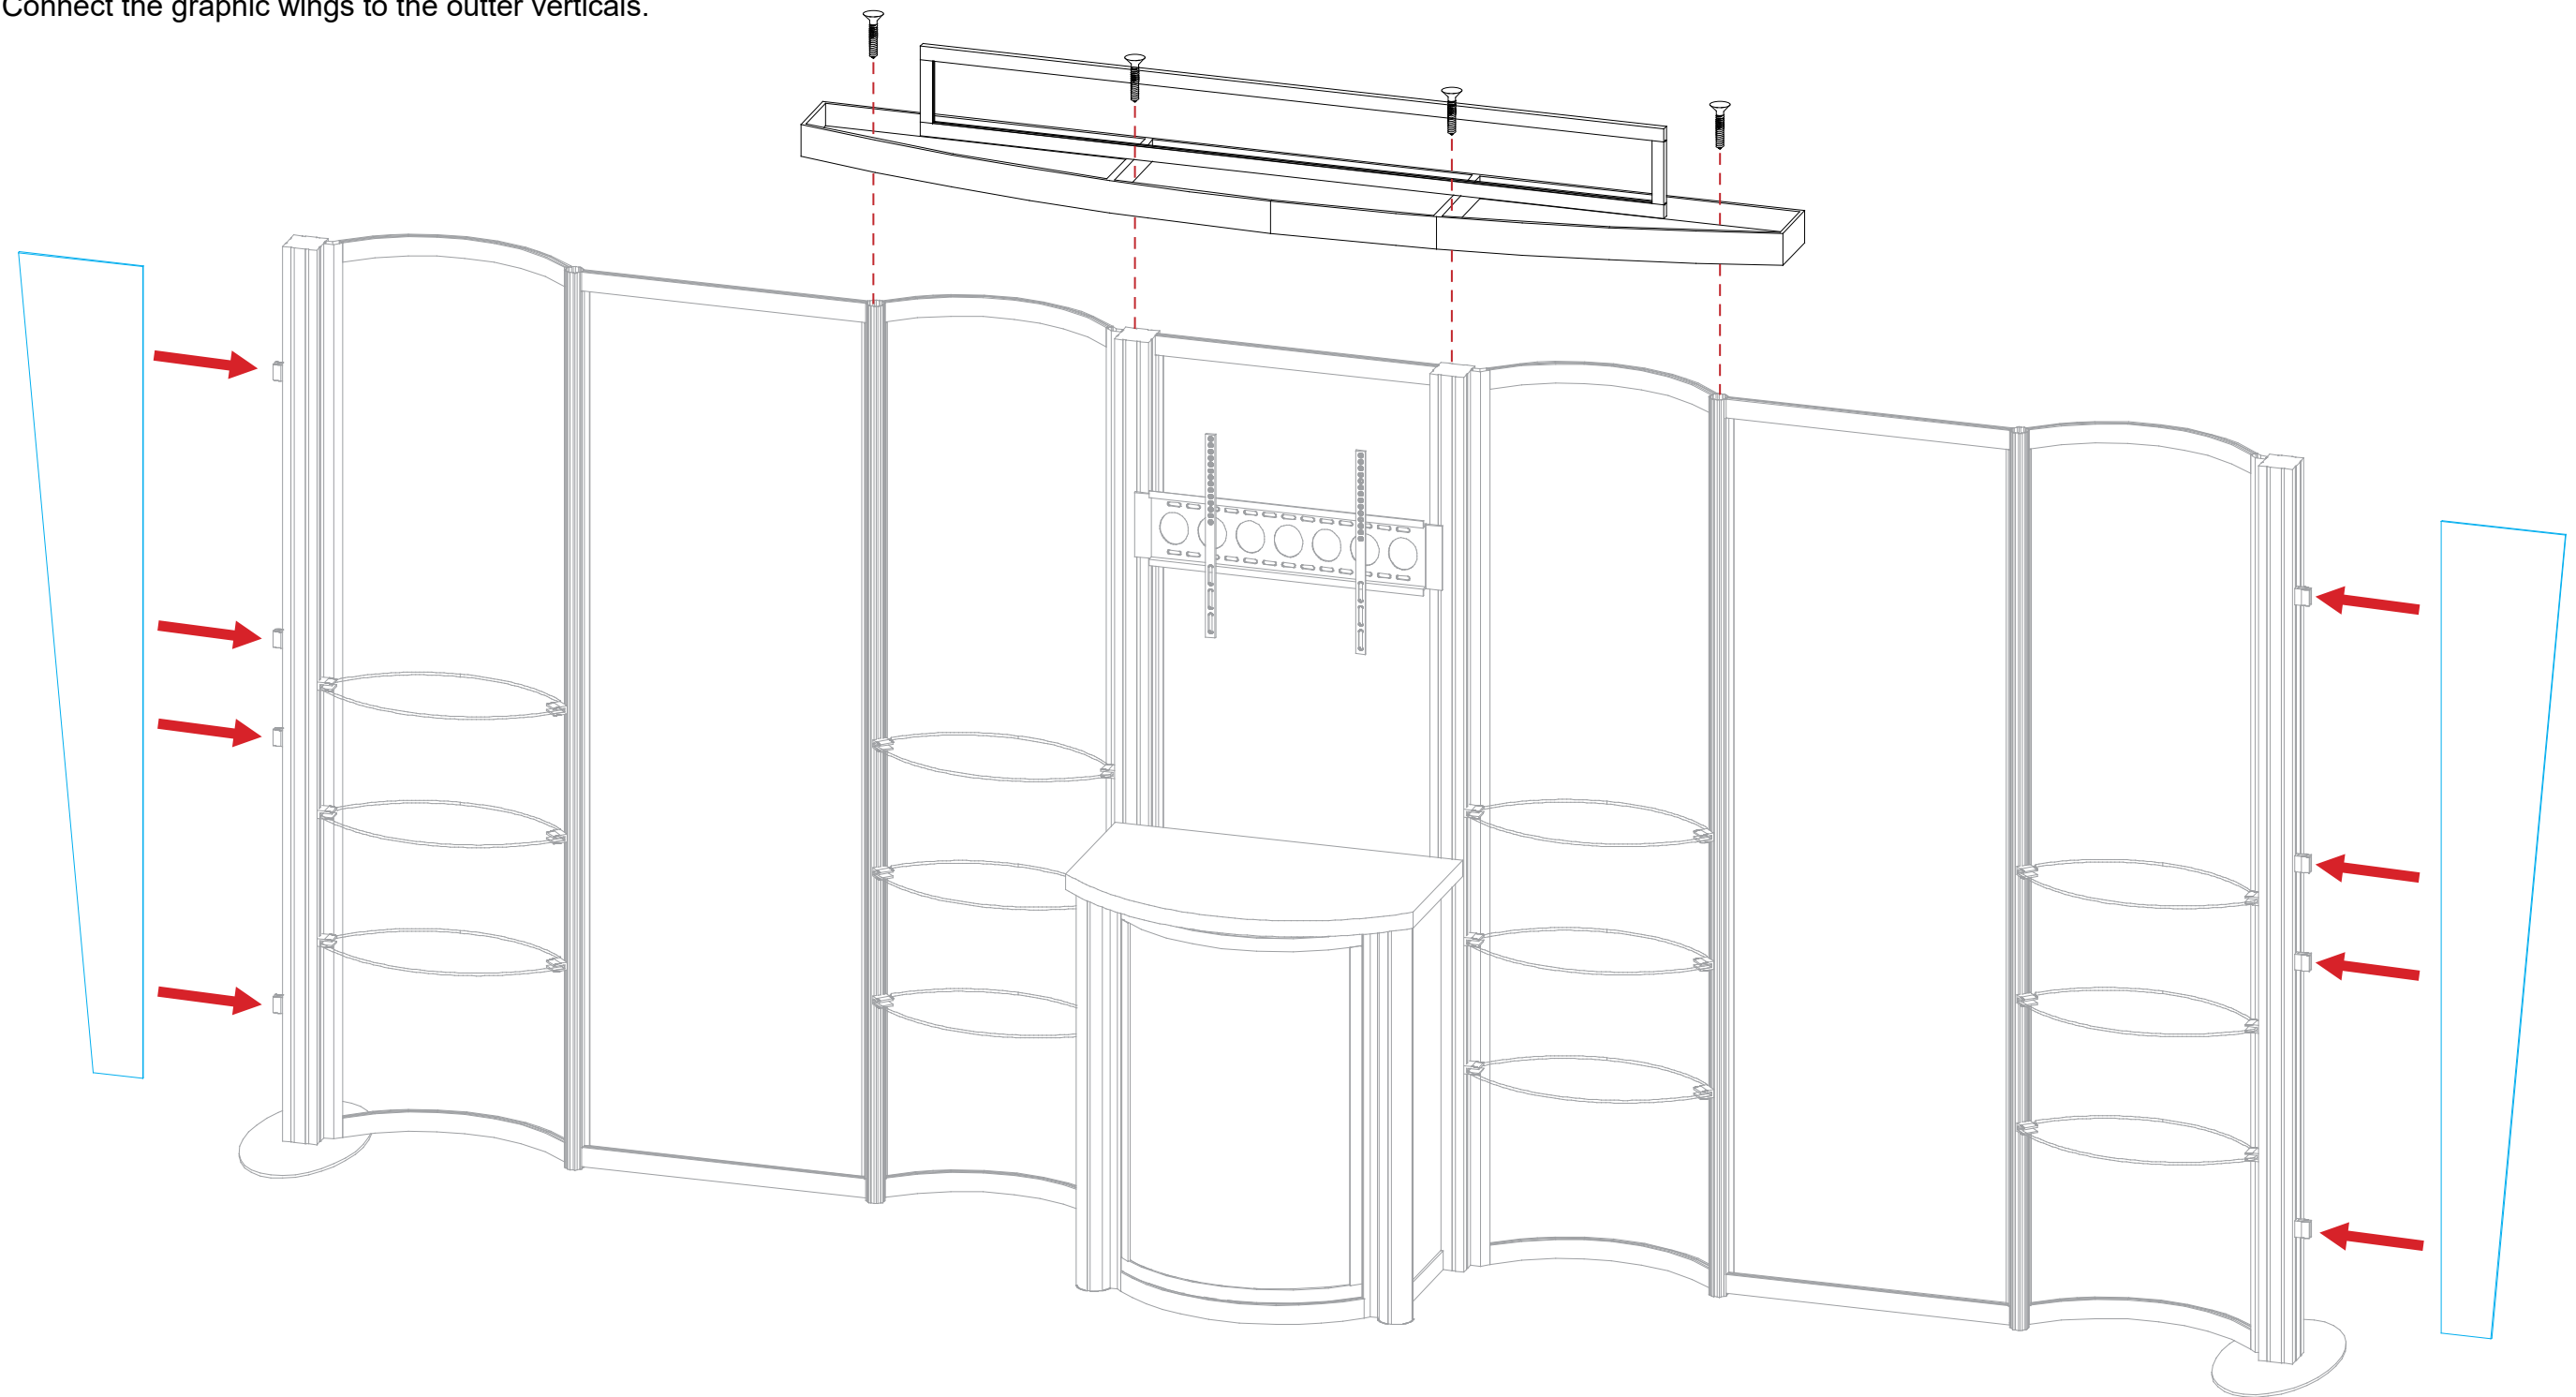


Item	Qty.	Description
20	1	Round Base Plate
21	1	38.125"h Left Diagonal Extrusion w/ A10 Clamps Attached
22	1	38.125"h Right Diagonal Extrusion w/ A10 Clamps Attached
23	1	60" Square Vertical Extrusion
24	1	16" Horizontal Extrusion w/ Angle Cut Both Ends

- Steps:
- 1) Attach diagonal extrusions [21 & 22] and square vertical extrusion [23] to round base plate [20].
 - 2) Place infill into groove between diagonal extrusions [21 & 22].
 - 3) Attach horizontal extrusion [24] between diagonal extrusions [21 & 22] at top.
 - 4) Place counter top atop horizontal support [24] and attach to vertical extrusion [23].
Refer to [Counter Attachment](#) detail.
 - 5) Attach shelves to diagonal extrusions [21 & 22] with A10 Clamps. ******
Refer to [Example of A10 Clamp Attachment](#) detail.
 - 6) Attach literature pockets to diagonal extrusions [21 & 22].
Refer to [Literature Rack Attachment](#) detail.
 - 7) Attach monitor mount plate to vertical extrusion [23].
Refer to [Monitor Mount Attachment](#) detail.


Monitor Mount Attachment

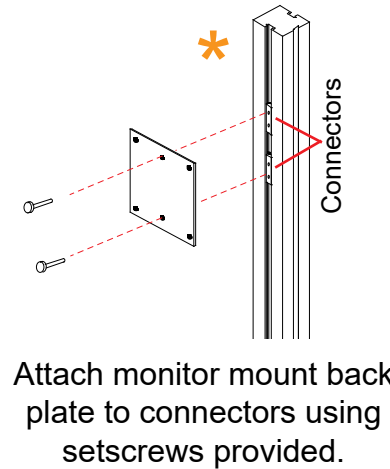


****Note:** Keep A10 Clamps assembled with vertical extrusion when shipping.

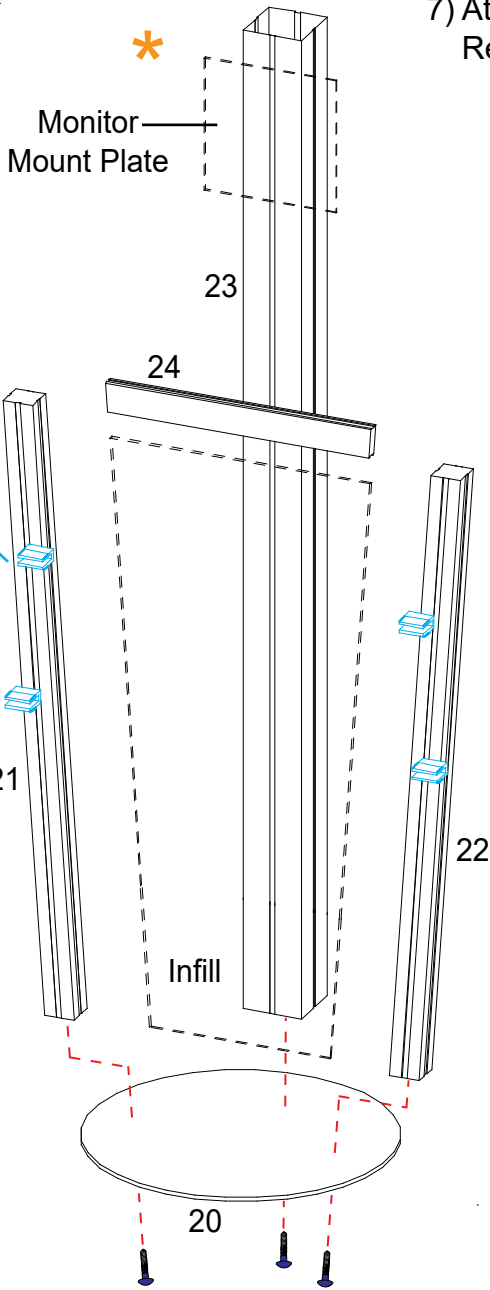

Counter Attachment


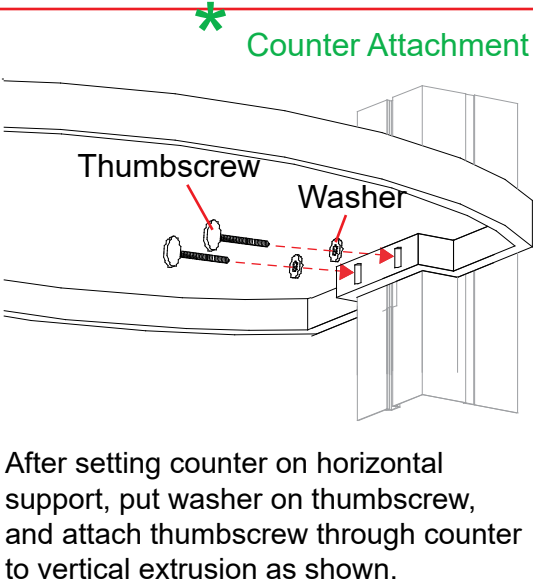


Literature Rack Attachment

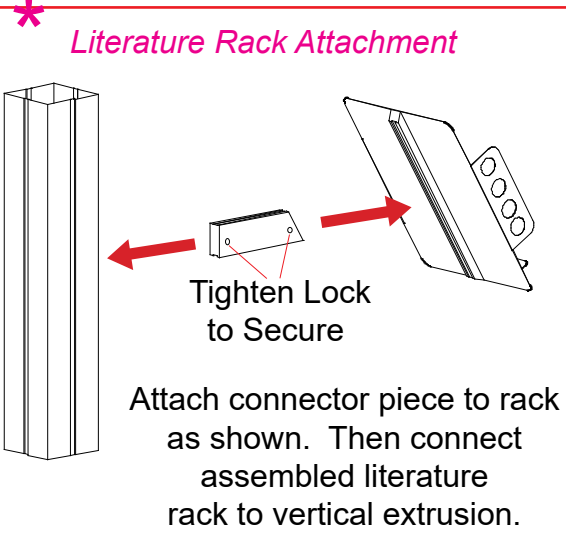

QTY. 2

Example of A10 Clamp Attachment

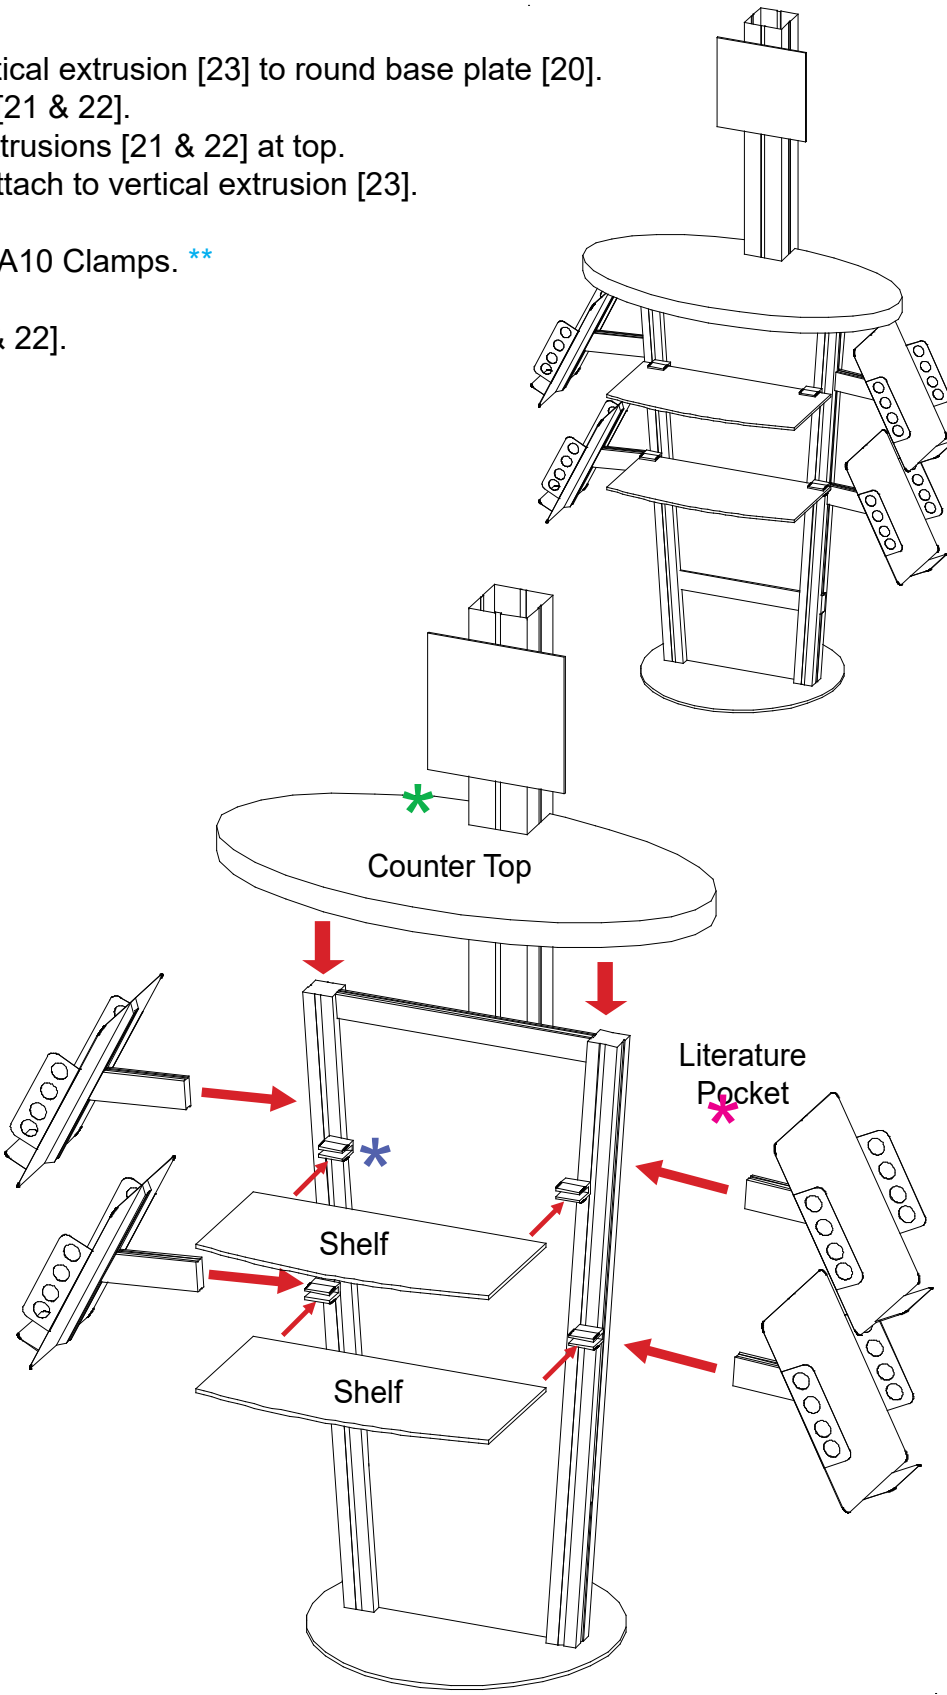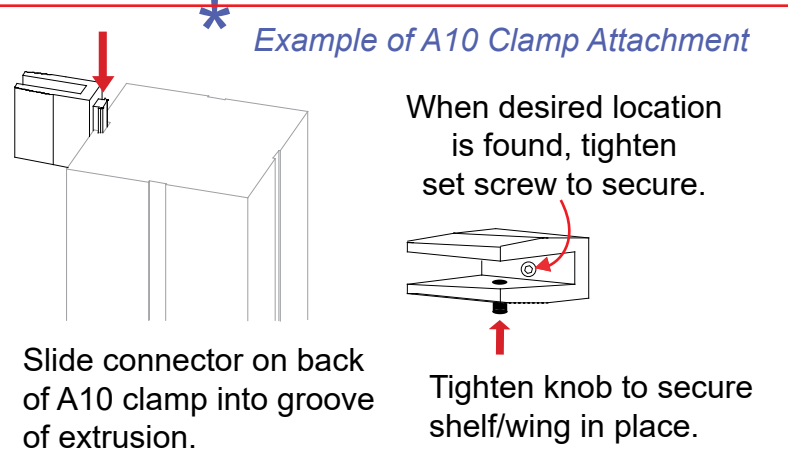



© 2026

Order #XXXXX Crate Packing

CRATE PACKING