



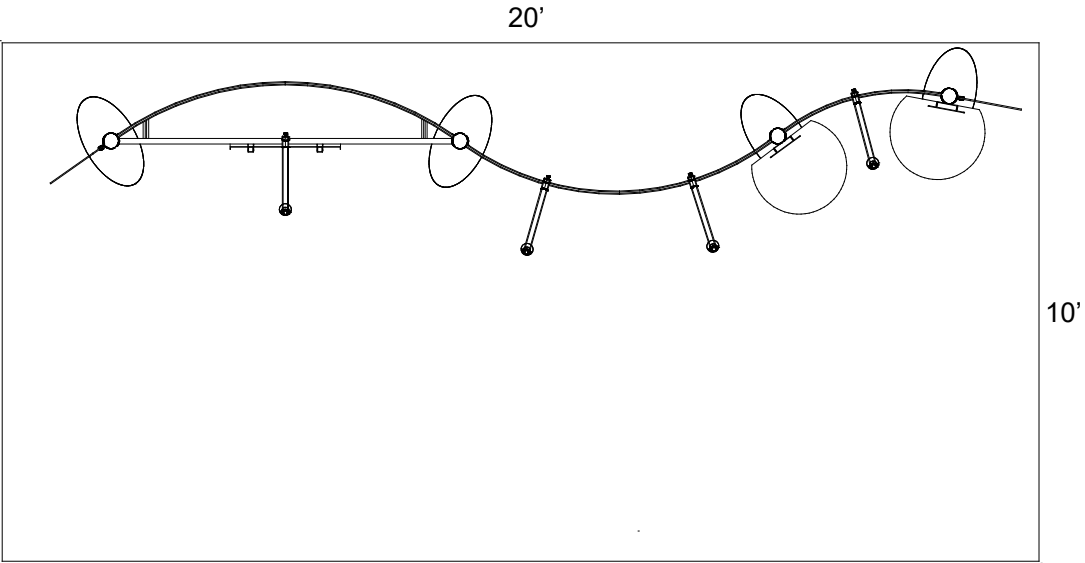

Top View

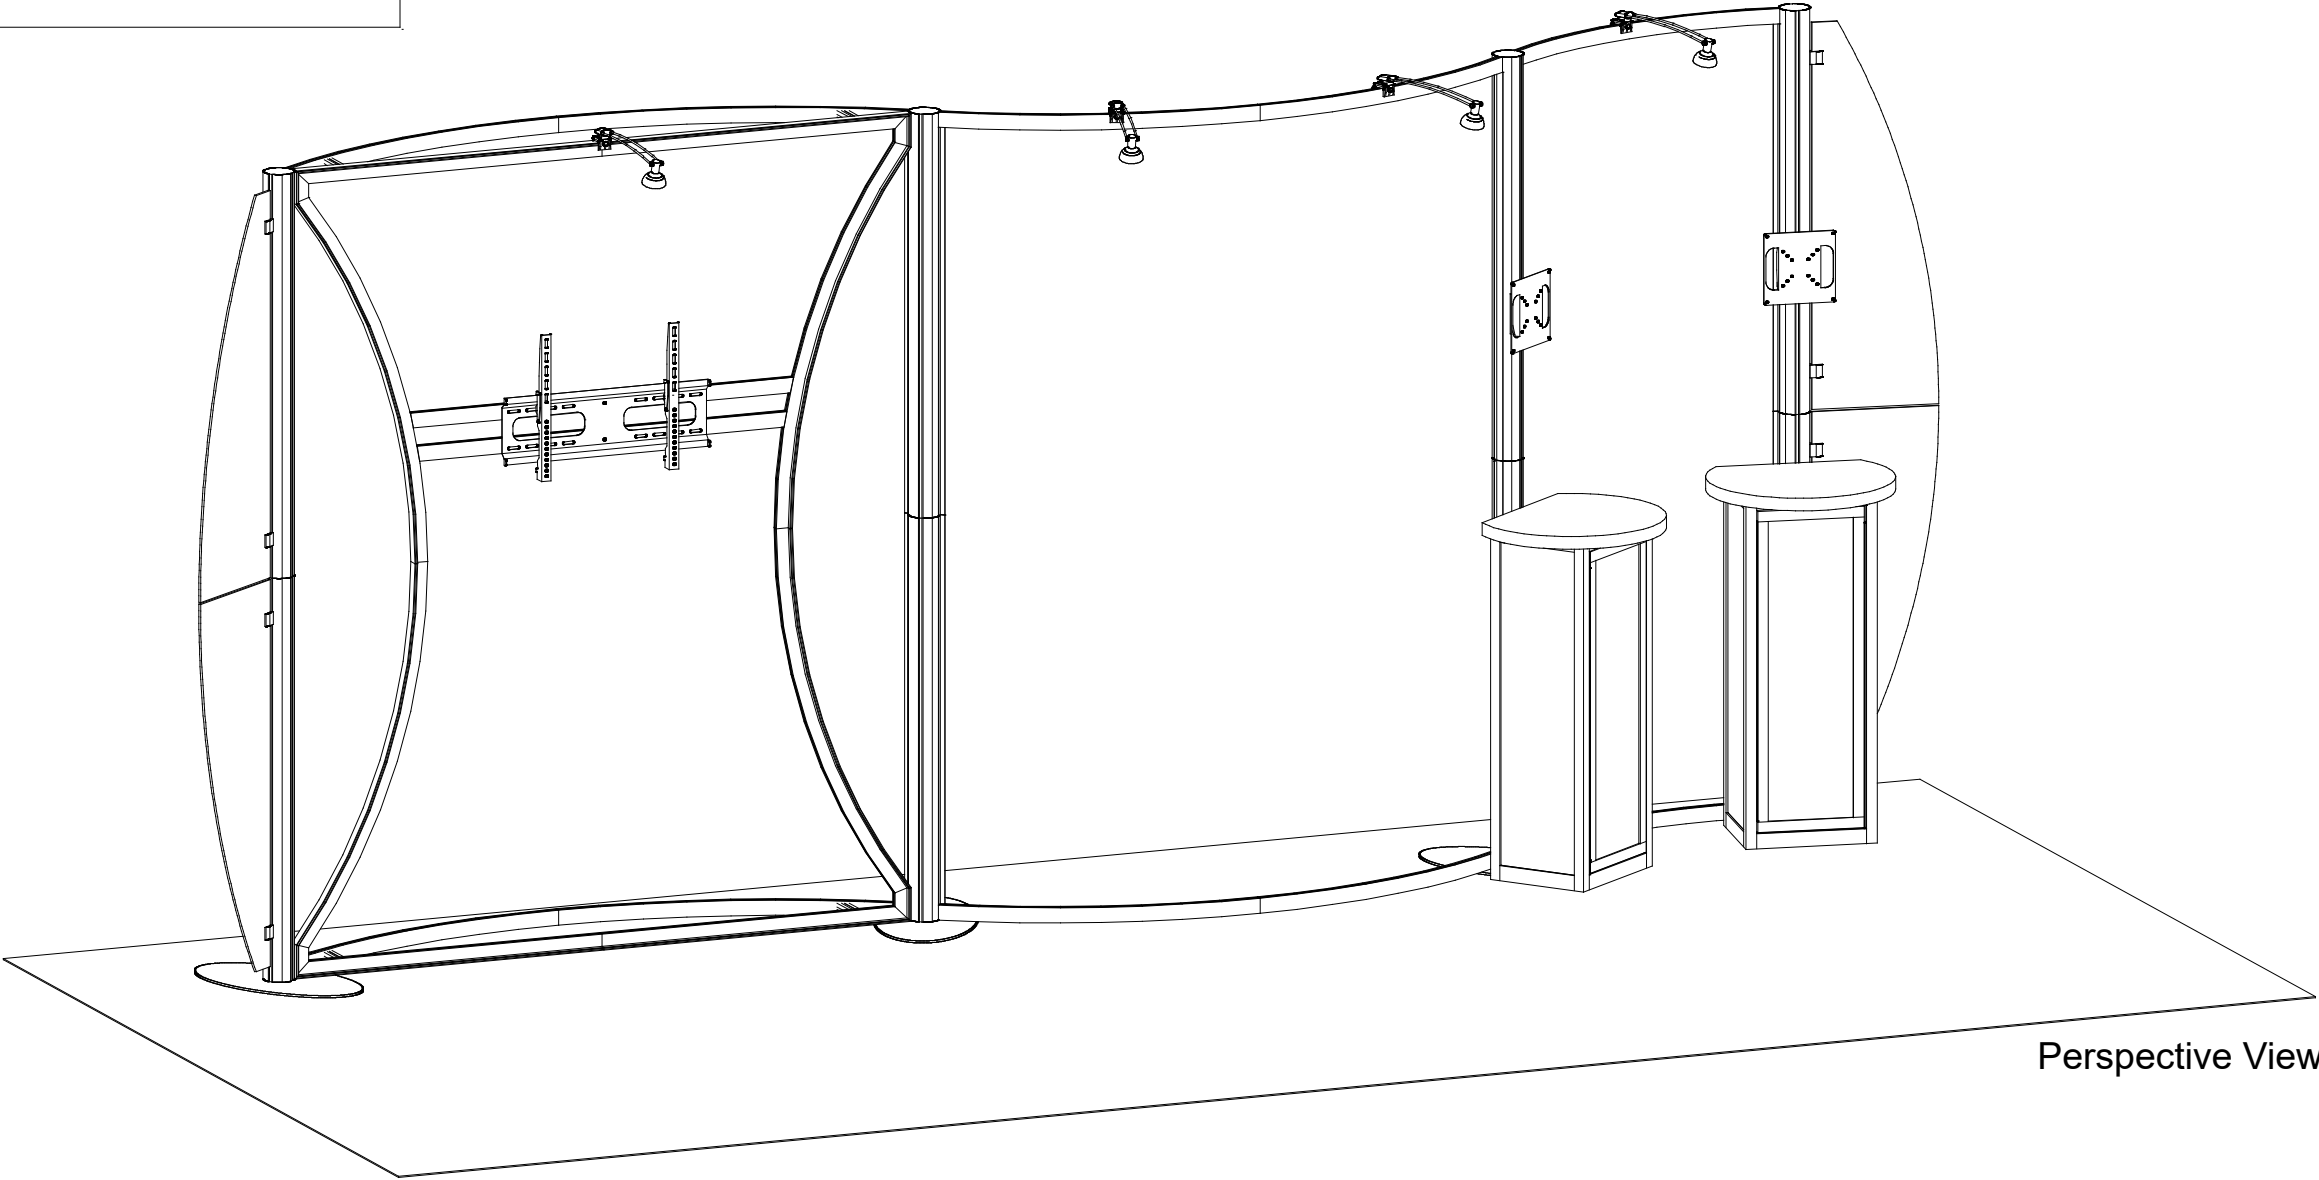


Perspective View


SETUP INSTRUCTIONS

General Setup Instructions

- Read entire setup instruction manual prior to unpacking parts and pieces.
- The setup instructions are created specifically for this configuration.
- Setup instructions are laid out sequentially in steps, including exploded views with detailed explanation for assembly.

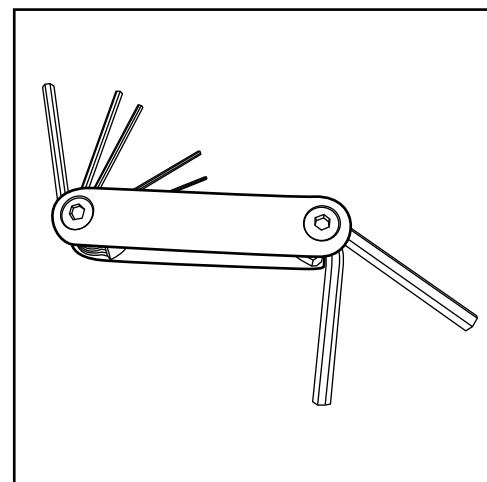

Hex Tool - Essential for Assembly

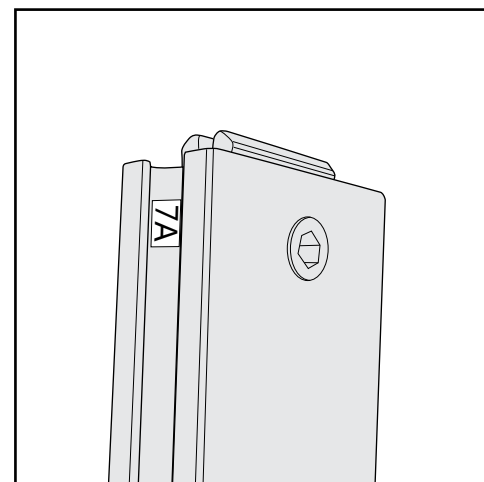

Part Identification - Numbering




WARNING

Cleaning & Packing


- For Cleaning Metal, Plex, & Laminate Parts: Use a **MILD NON-ABRASIVE** cleanser and soft cloth/paper towel to clean all surfaces.
- Keep exhibit components away from heat and prolonged sun exposure.
Heat and UV exposure will warp and fade components.
- Retain all provided Packing Materials. All provided packing materials are for ease of repacking & component protection.

Disassembly

- For loss prevention, tighten all set screws and locks during disassembly.

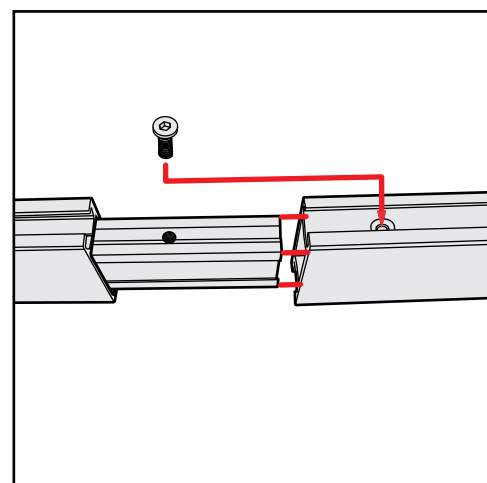


Spline Connection

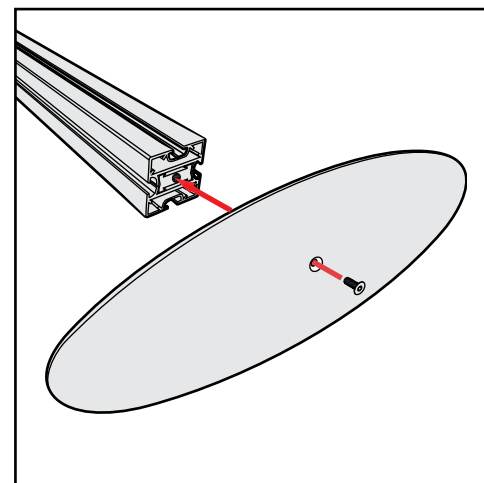


Base Plate & Extrusion Connection




DO NOT USE POWER TOOLS

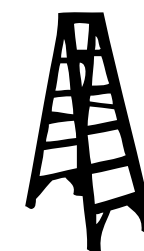

LADDERS OR LIFTS
MAY BE REQUIRED

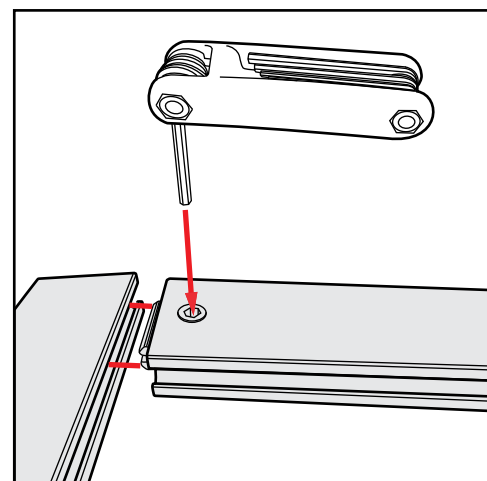

Extrusion & Lock Connection

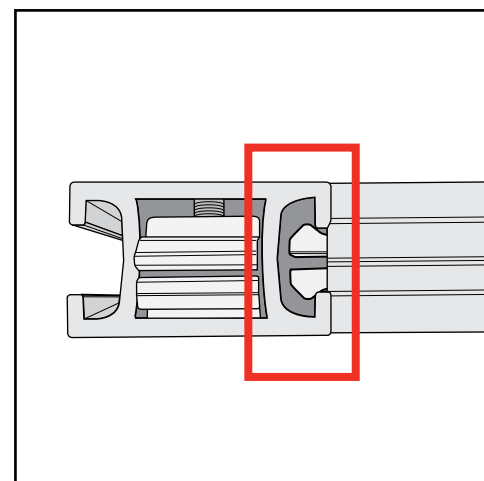

Engaged Lock




ALL CONNECTIONS MUST
BE TIGHTLY SECURED


SEG Graphic Installation *in 3 Steps*

The Perfect Fit


STEP 1: Attach Corners

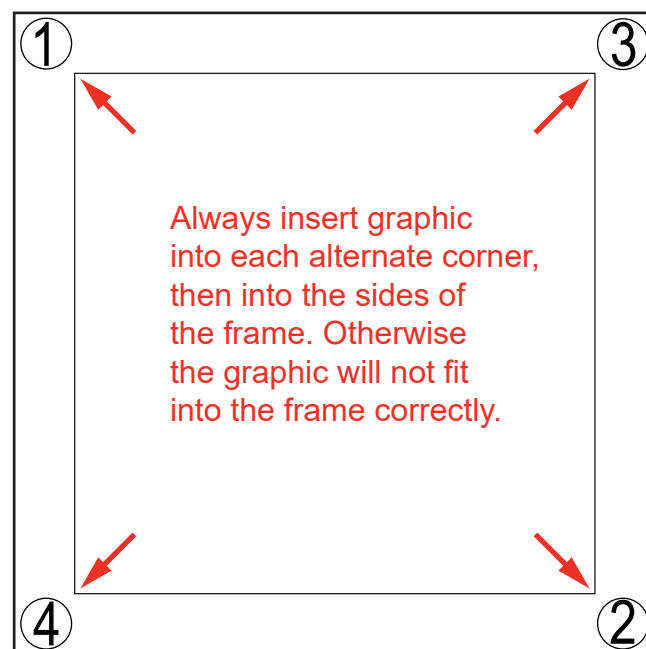

STEP 2: Attach Middle

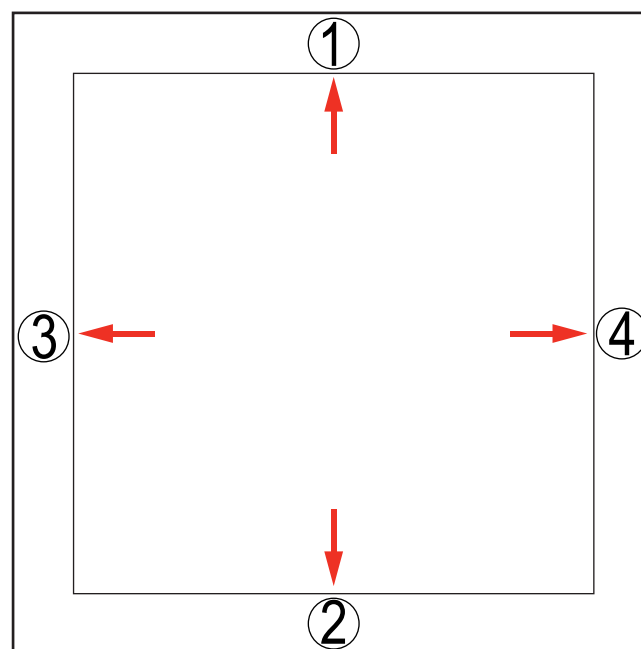

STEP 3: Attach Sides

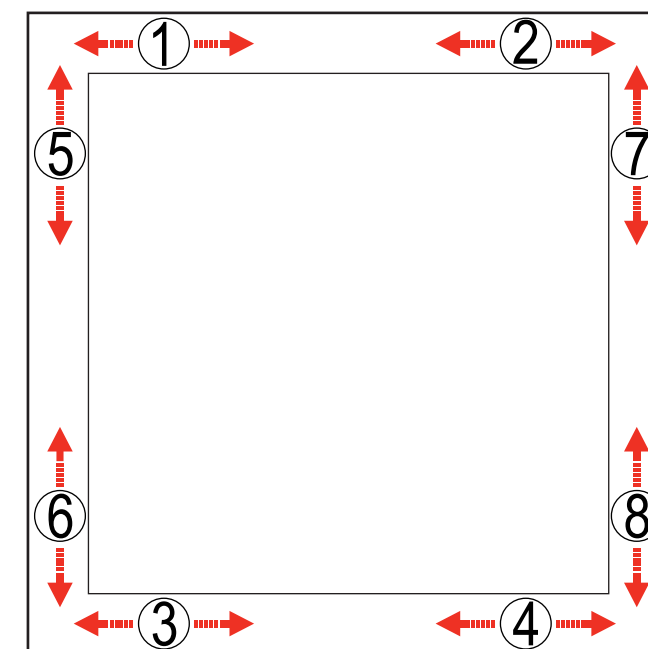

Insert narrow side of silicone welt into the channel at corner 1, with fabric to the outside.

Repeat for opposite corner 2, then corner 3, then corner 4.

Once corners are attached, press the middle of edge 1 into the channel. Then press middle of edge 2 into the channel on opposite side.

Repeat with edge 3 & 4.

Once the middle of sides are attached, fully press the silicone welt into the channel, between center and corner at location 1. Repeat the process between center and corner at location 2.

Do the same for welt on opposite side, at locations 3 & 4. Then repeat for locations 5 & 6 and 7 & 8.

Once the welt is fully inserted on all sides, smooth out edges as needed for a perfect fit.




To remove the graphic from the frame, locate the fabric **pull tab**. Gently pull on the tab to remove the graphic.


Install video:



Top View of Each Level

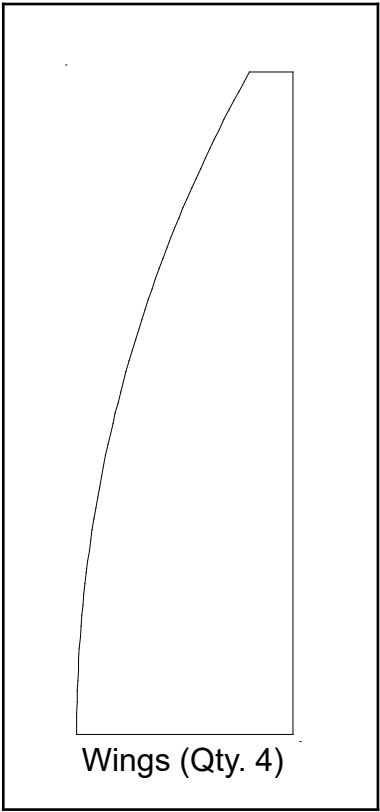


Level 1 (Bottom Level)

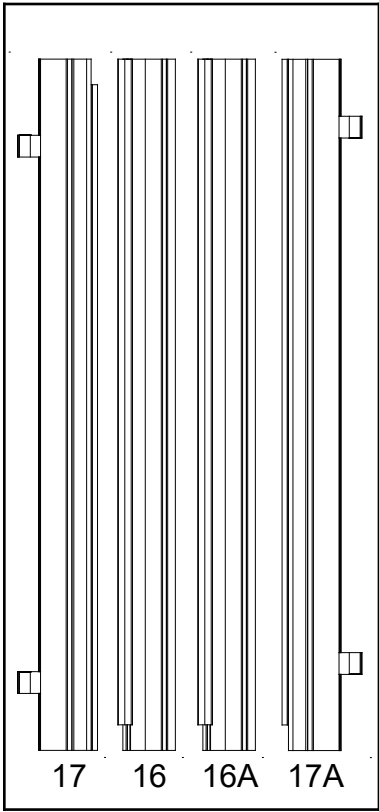


Level 2




Top View of Each Level

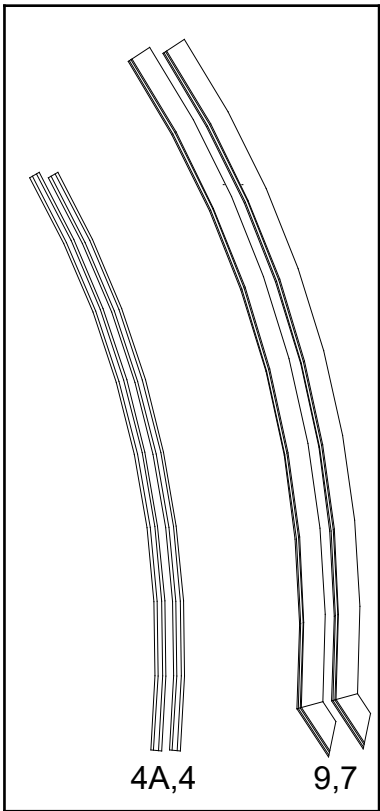

Level 1 (Bottom Level)

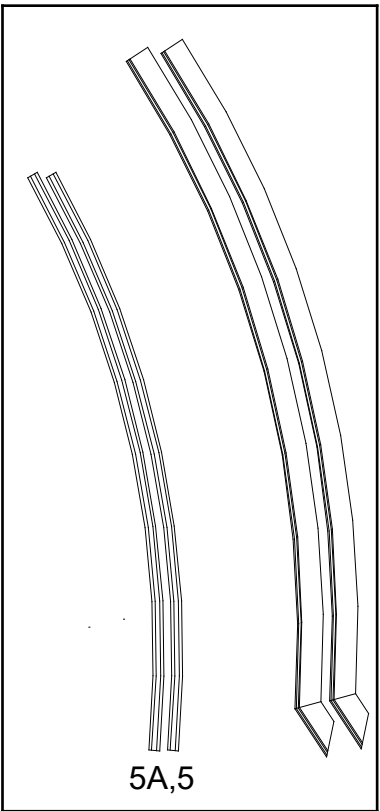

Level 2

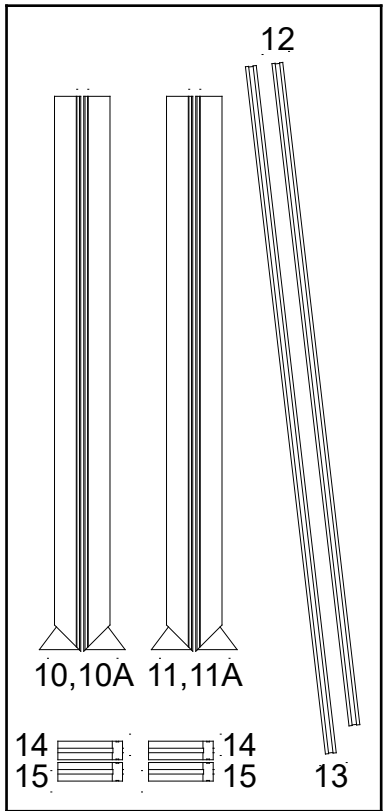


Level 3


Lights

Graphics


Top View of Each Level

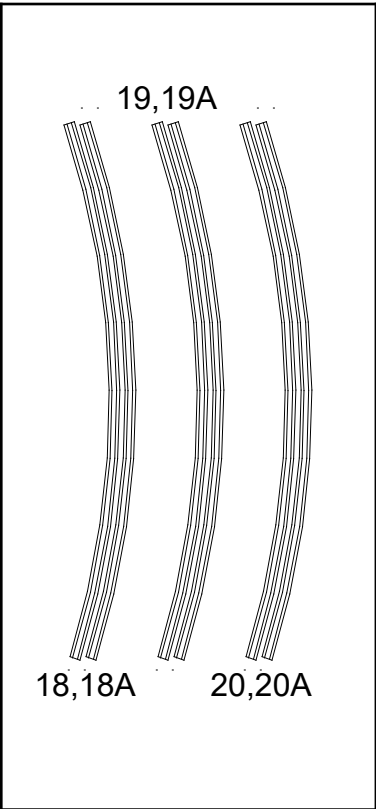

Level 1 (Bottom Level)

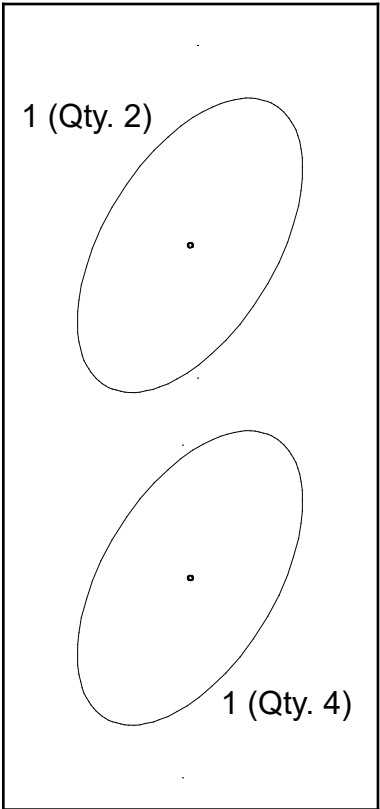


Level 2

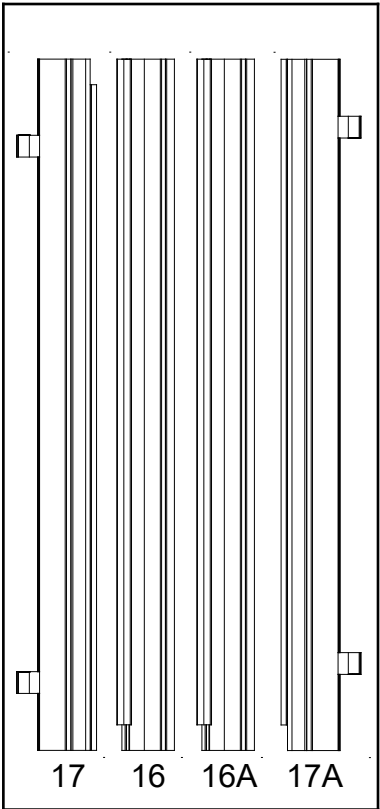


Level 3




Top View of Each Level

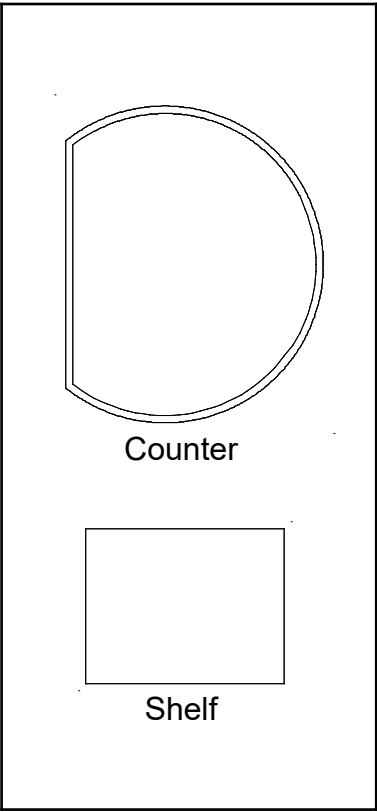


Level 1 (Bottom Level)

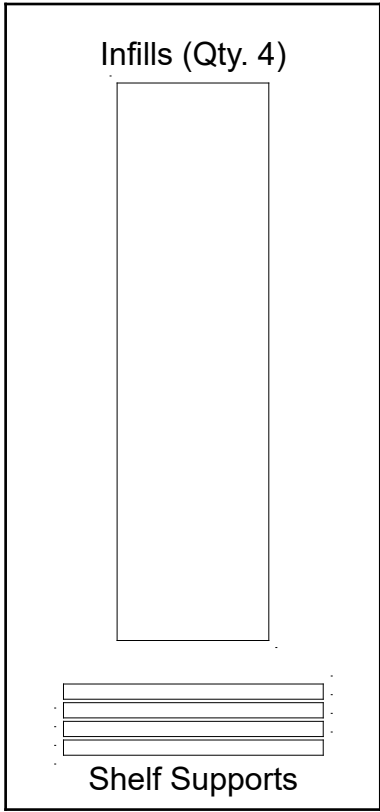

Level 2

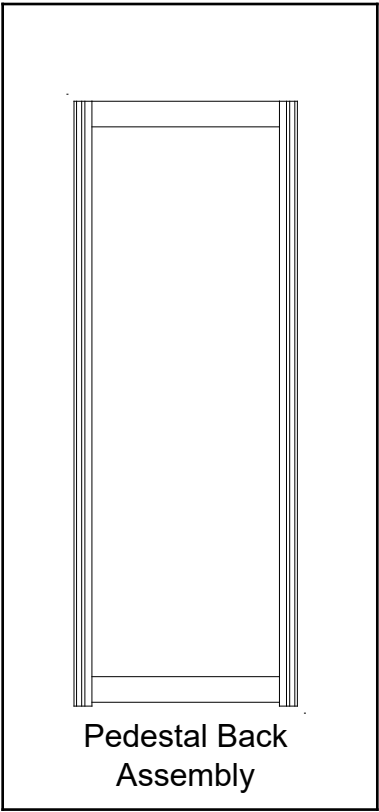


Level 3

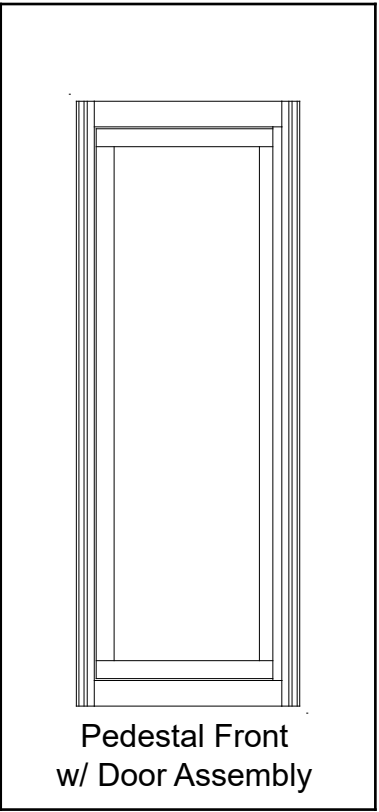


Level 4


Top View of Each Level

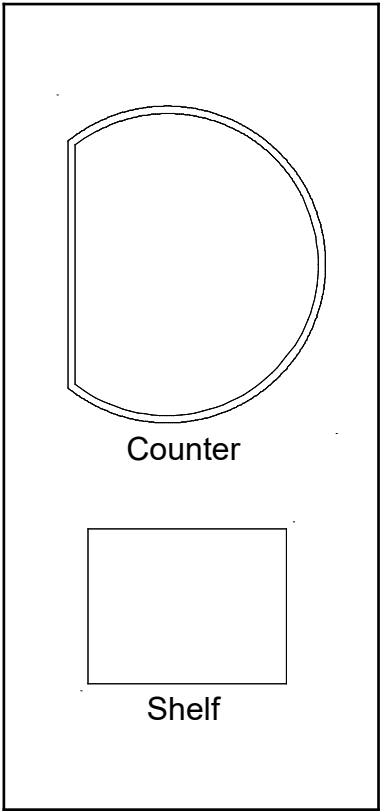


Level 1 (Bottom Level)

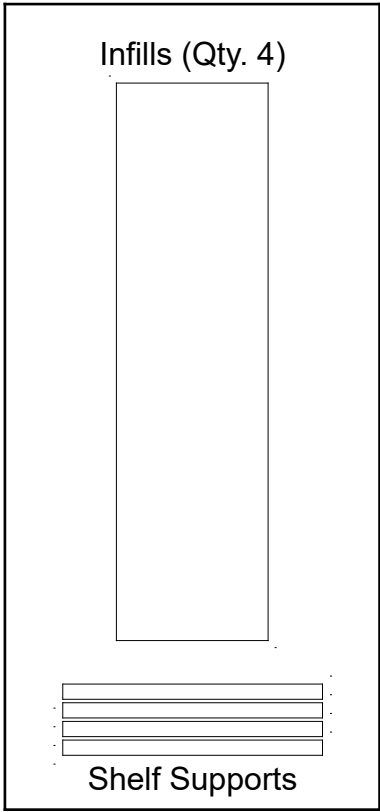

Level 2

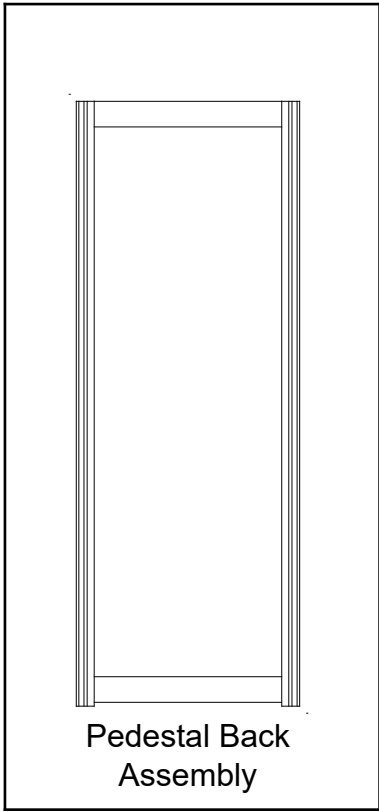

Level 3



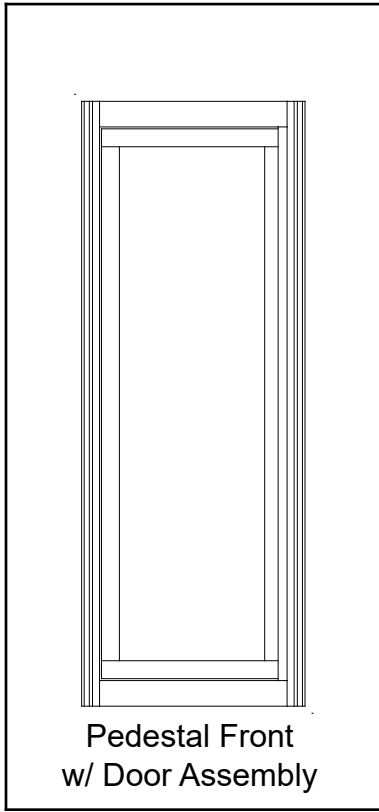


Level 4



Item	Qty.	Description
1	2	Base Plate
2,2A	1	48"h Vertical Extrusion
3,3A	1	48"h Vertical Extrusion
4,4A	1	41.7083" Curved Horizontal Extrusion
5,5A	1	41.7083" Curved Horizontal Extrusion

- Steps:
- 1) Attach base plates [1] to lower verticals [2] and [3], using bolts.
 - 2) Connect verticals [2] to [2A] and [3] to [3A]. See **Extrusion Connector** detail.
 - 3) Connect horizontals [4] to [4A] and [5] to [5A]. See **Horizontal Connector** detail.
 - 4) Attach horizontal assemblies [4/4A] and [5/5A] between vertical assemblies [2/2A] and [3/3A].
 - 5) Attach clamps to verticals [2/2A], where indicated. See **Clamp Attachment** detail.

Keep connectors attached to [2] [3] and [5], when packing.

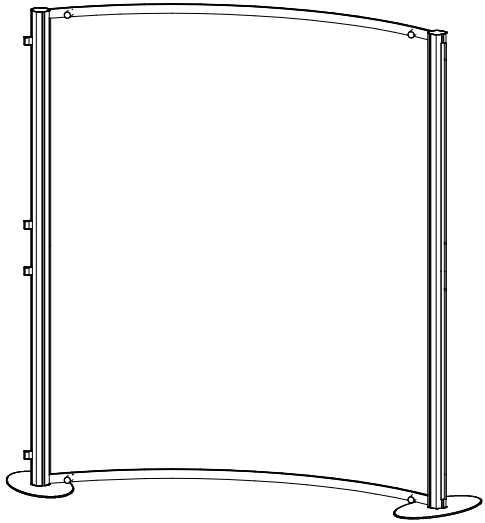
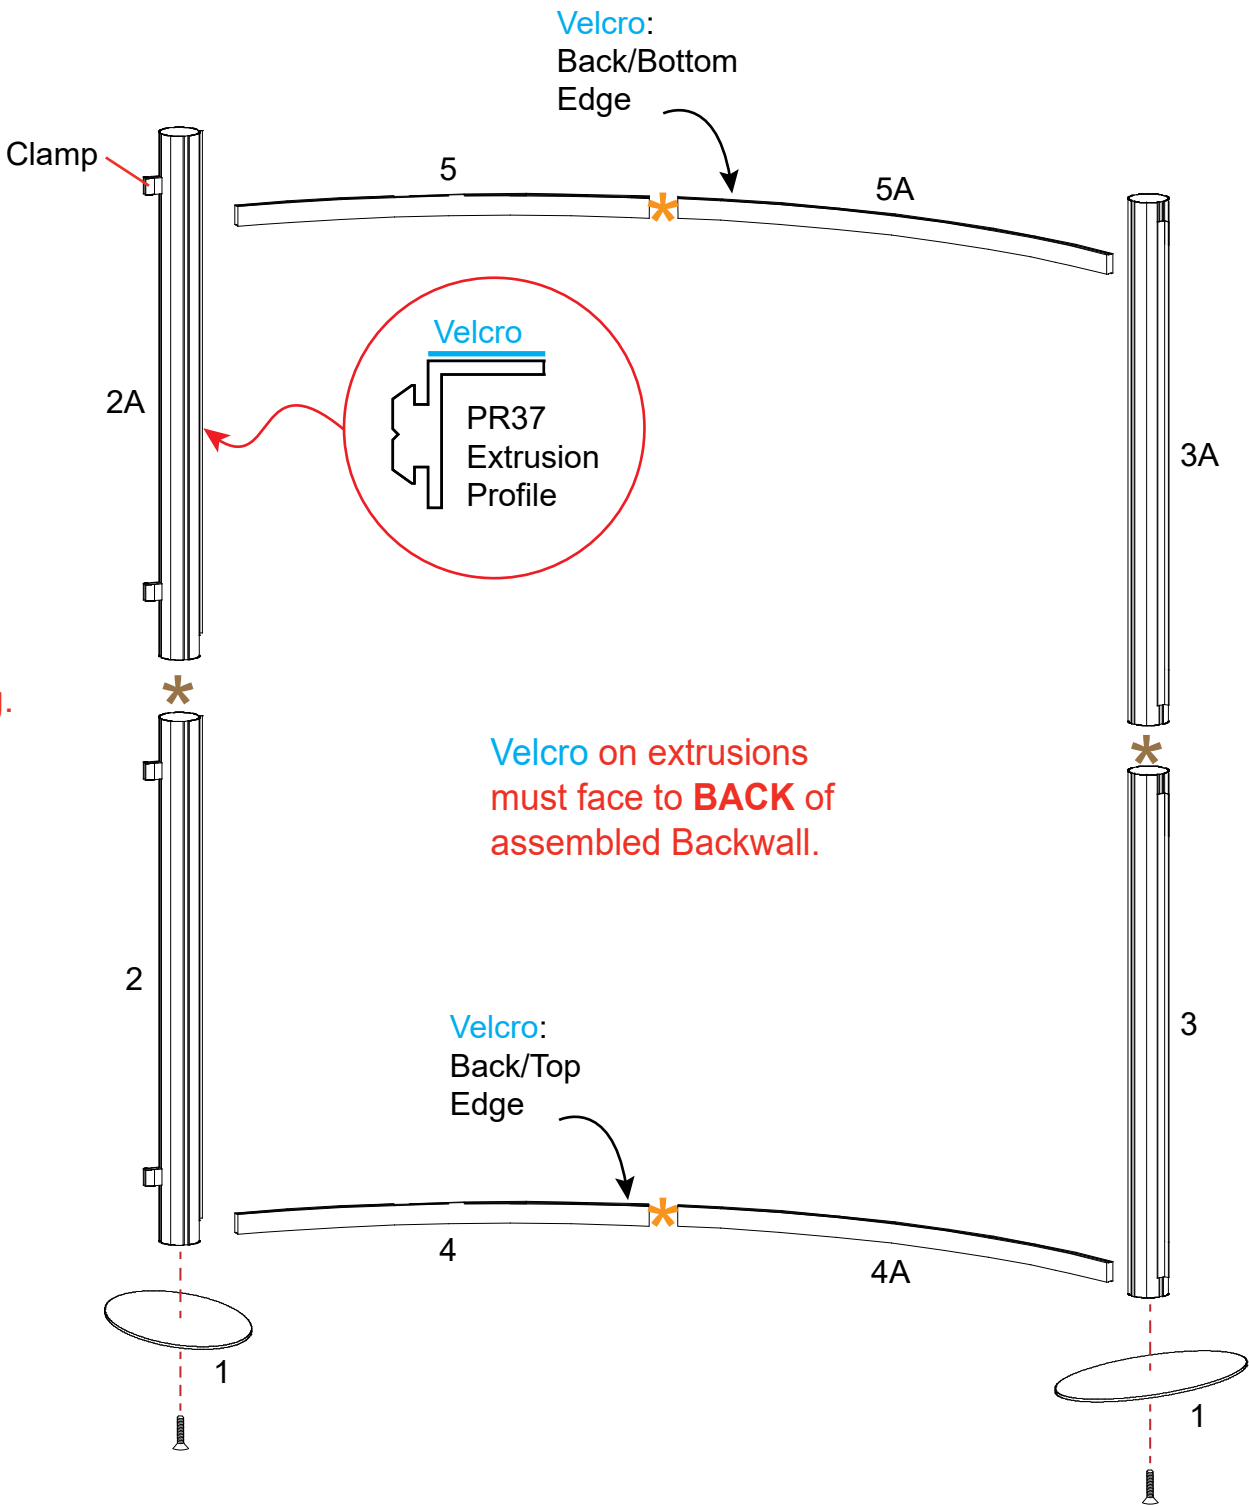
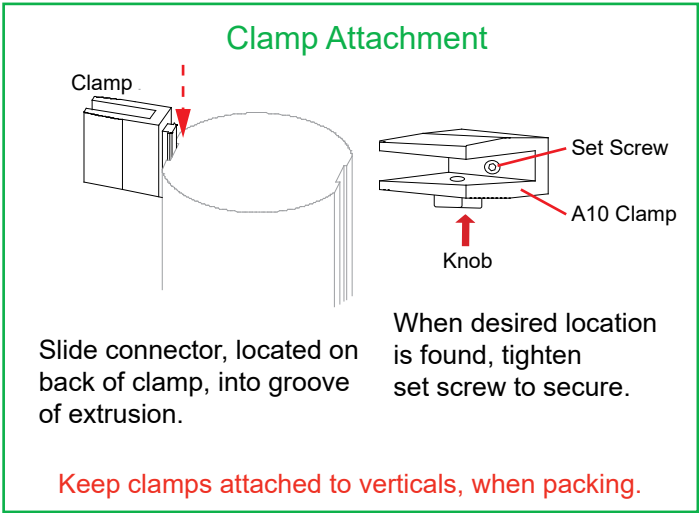


When assembled

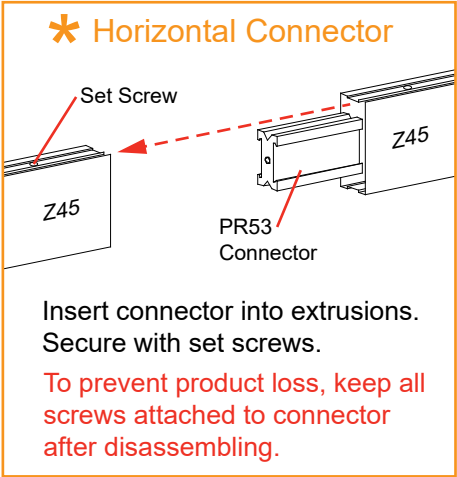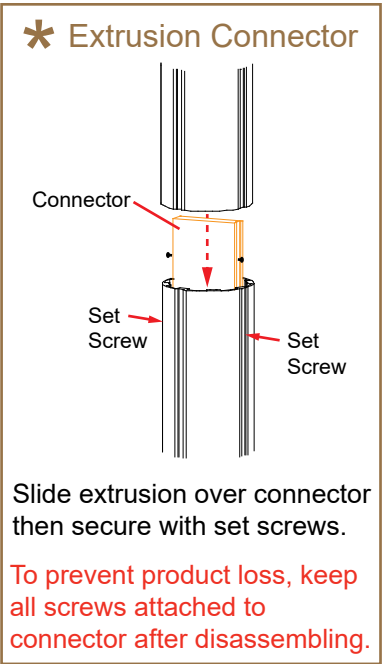


Item	Qty.	Description
6	1	48"h Curved Vertical Extrusion
7	1	48"h Curved Vertical Extrusion
8	1	48"h Curved Vertical Extrusion
9	1	48"h Curved Vertical Extrusion
10,10A	1	38.5"w Horizontal Extrusion
11,11A	1	38.5"w Horizontal Extrusion
12	1	46.2573"w Horizontal Extrusion
13	1	48"w Horizontal Extrusion


- Steps:
- 1) Assembled extrusions together, as shown.
See connection details.
 - 2) Connect blocker fabric to assembled frame.
 - 3) Install SEG graphic to assembled frame.
See SEG Graphic Installation sheet for instruction.

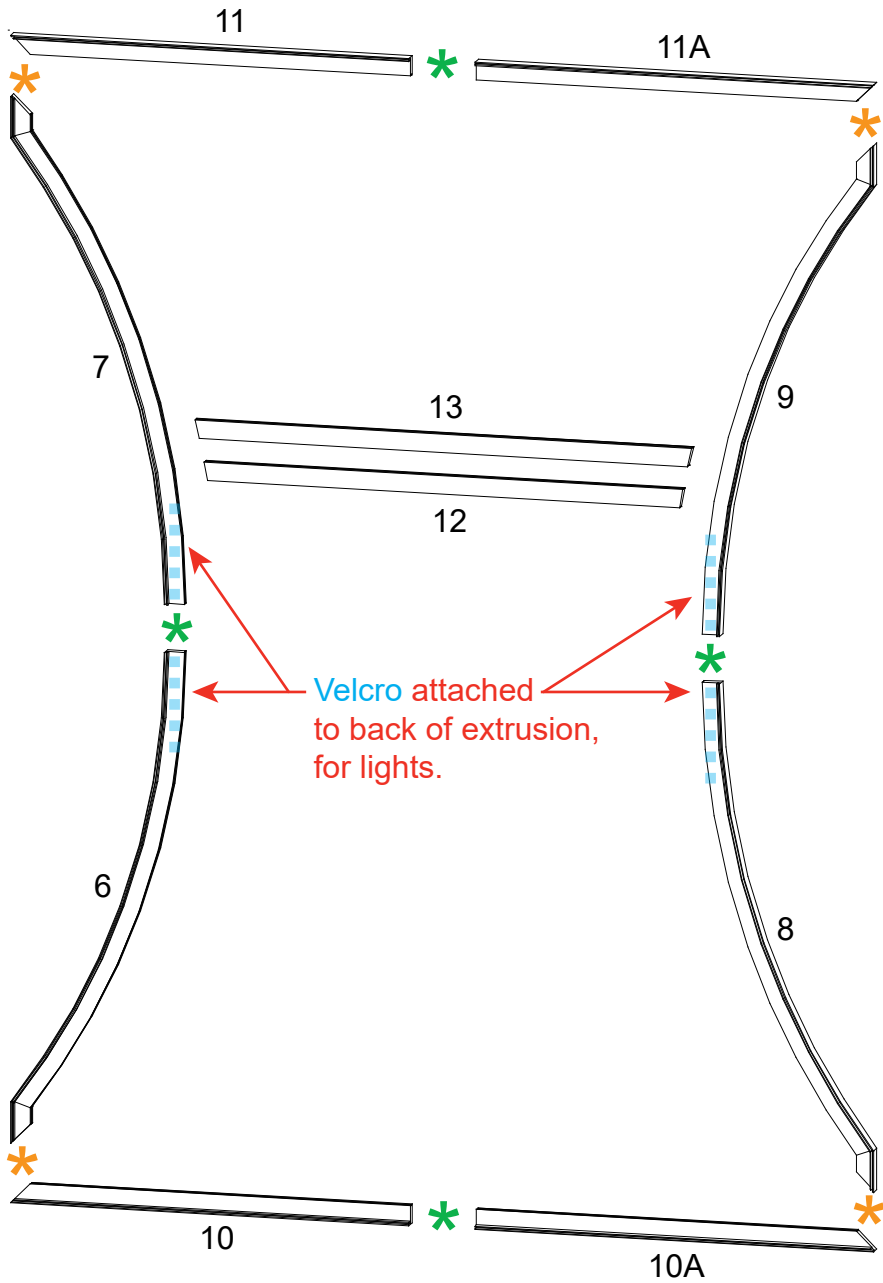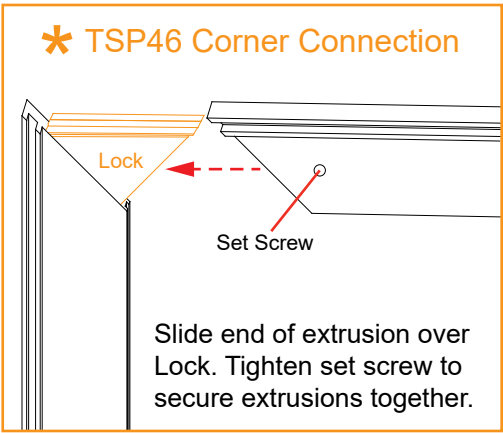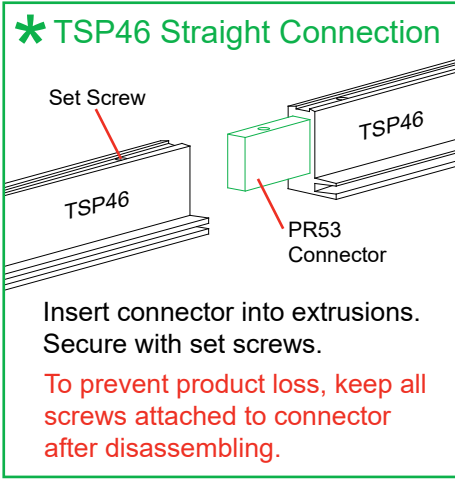


Front View

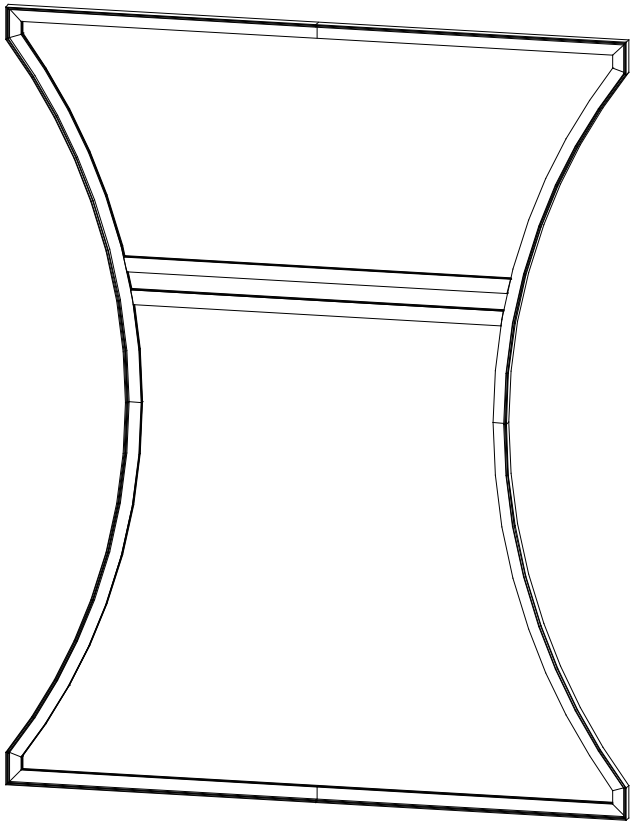


When assembled
Front View

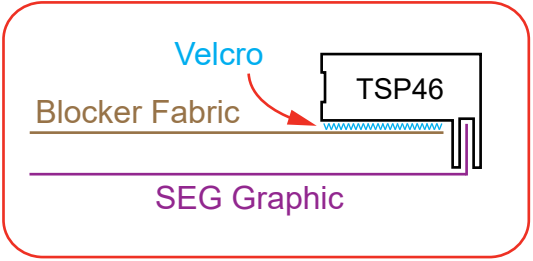


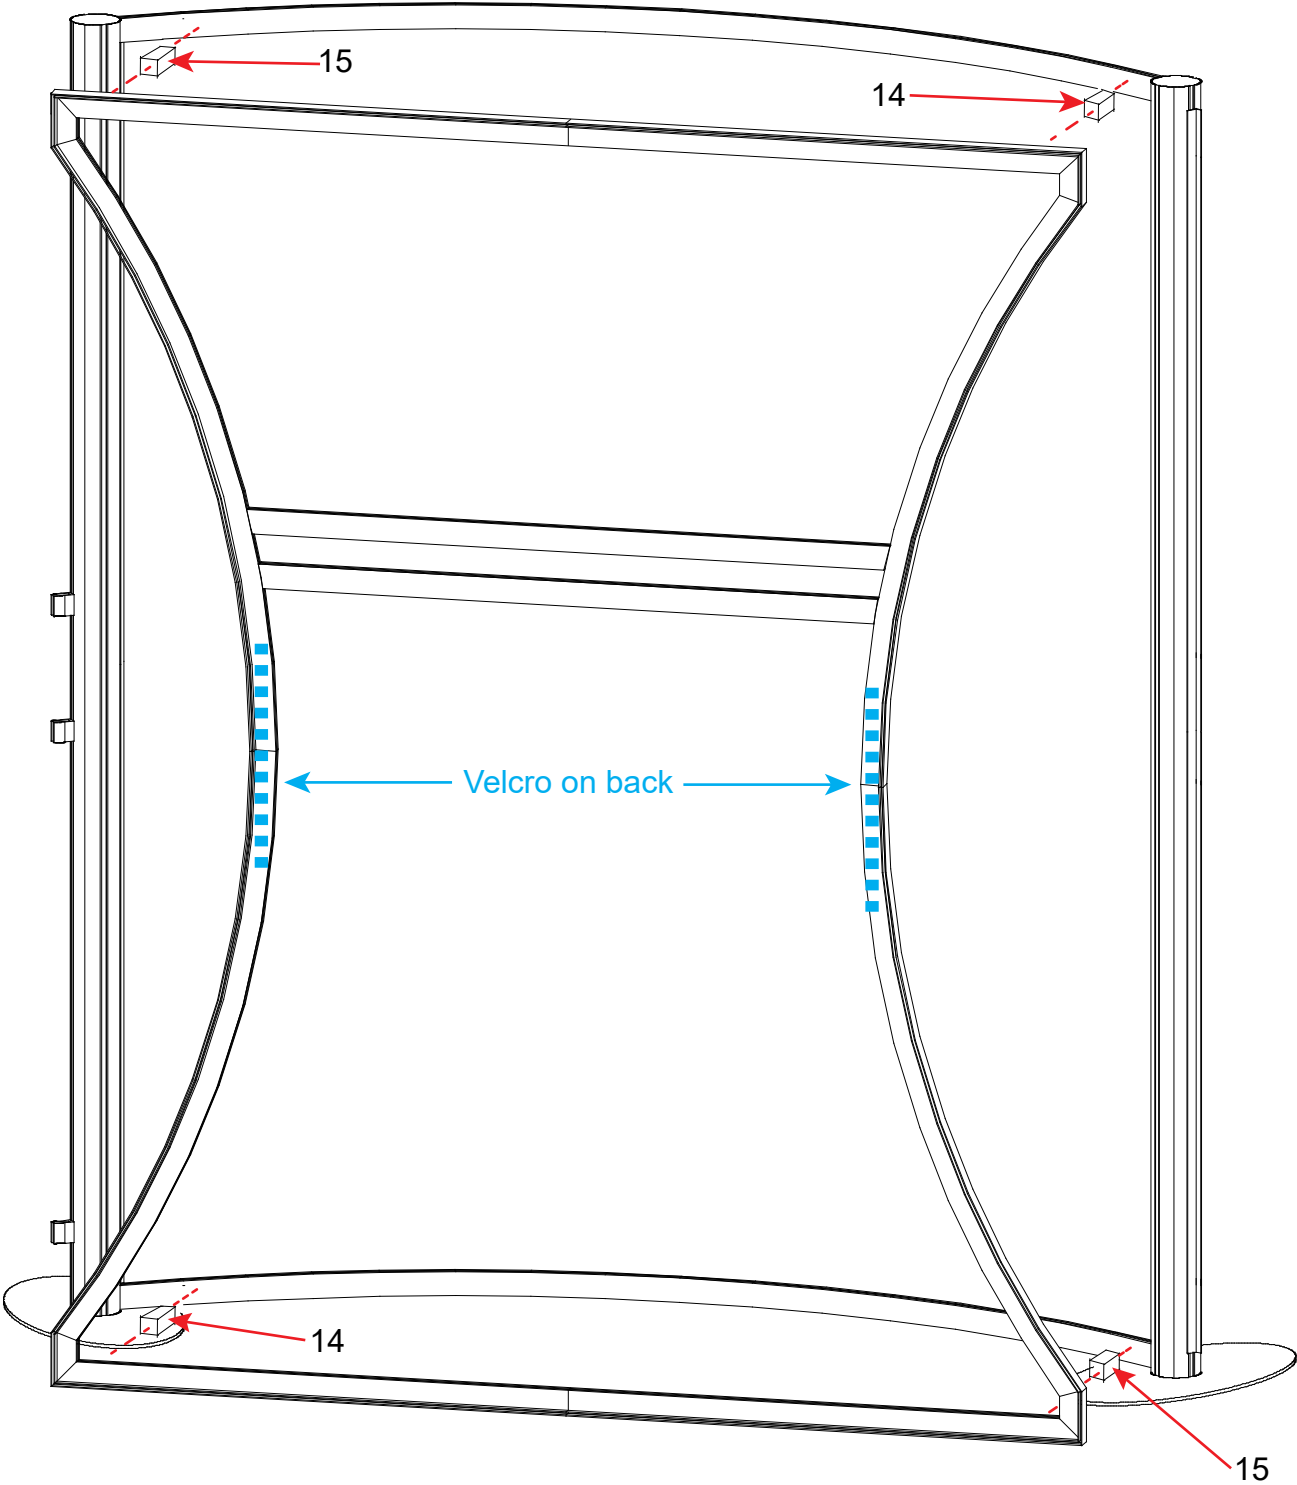


Item	Qty.	Description
14	2	4.5" Horizontal Extrusion
15	2	4.5" Horizontal Extrusion

- Steps:
- 1) Attach assembled frame to assembled backwall, using horizontals [14] and [15].
 - 2) Attach lights to **Velcro** on back of assembled frame.




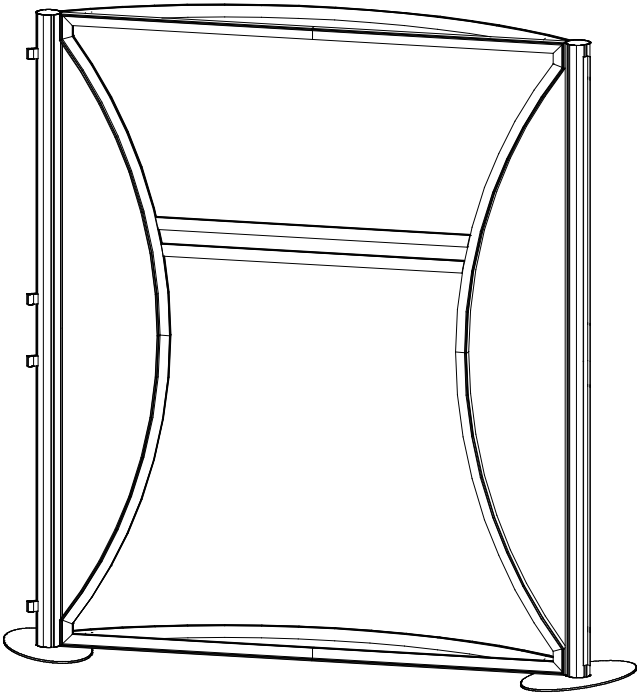


When assembled

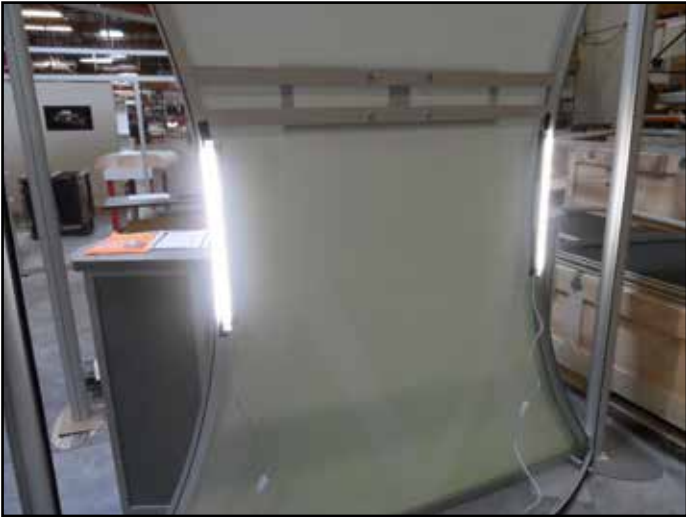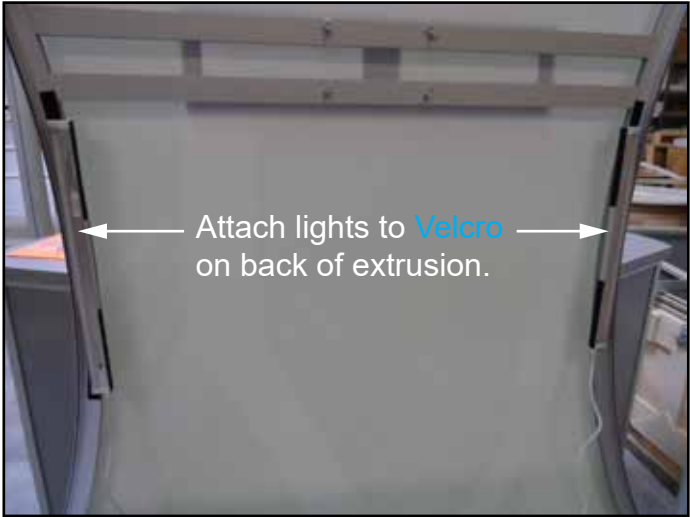

Steps:



- 1) Connect Light to the upper horizontal of SEG Frame.
See [Light Connection](#) detail.
- 2) Attach wings to clamps on verticals [2/2A].
See [Clamp Attachment](#) detail.
- 3) Attach monitor mount to horizontals [12] and [13].
See [Monitor Mount Attachment](#) detail.

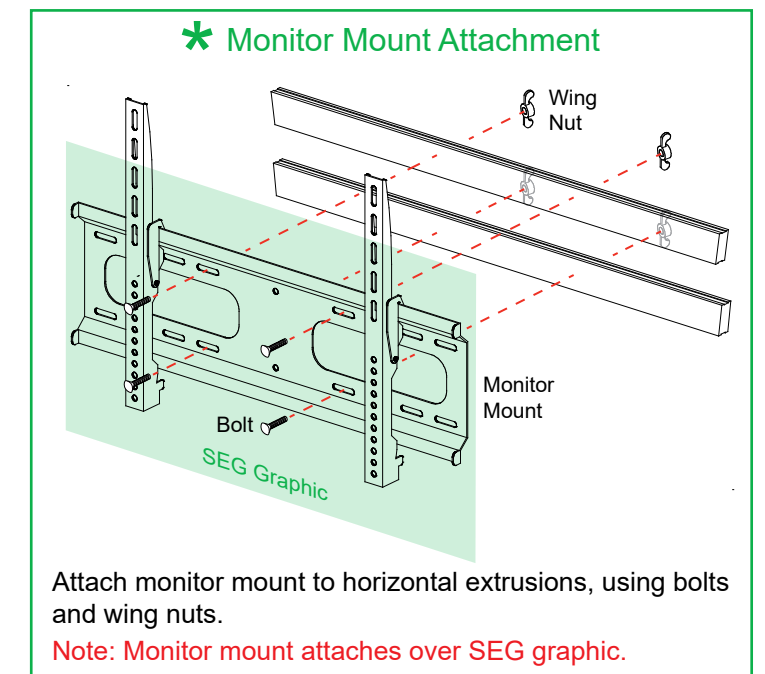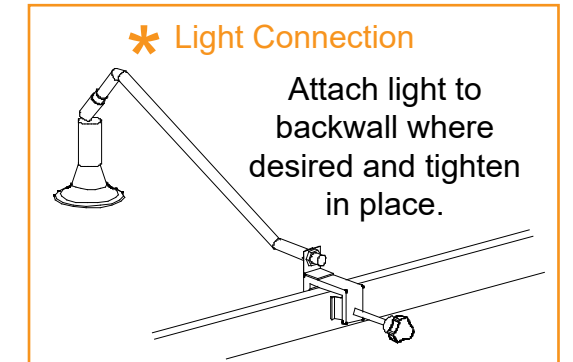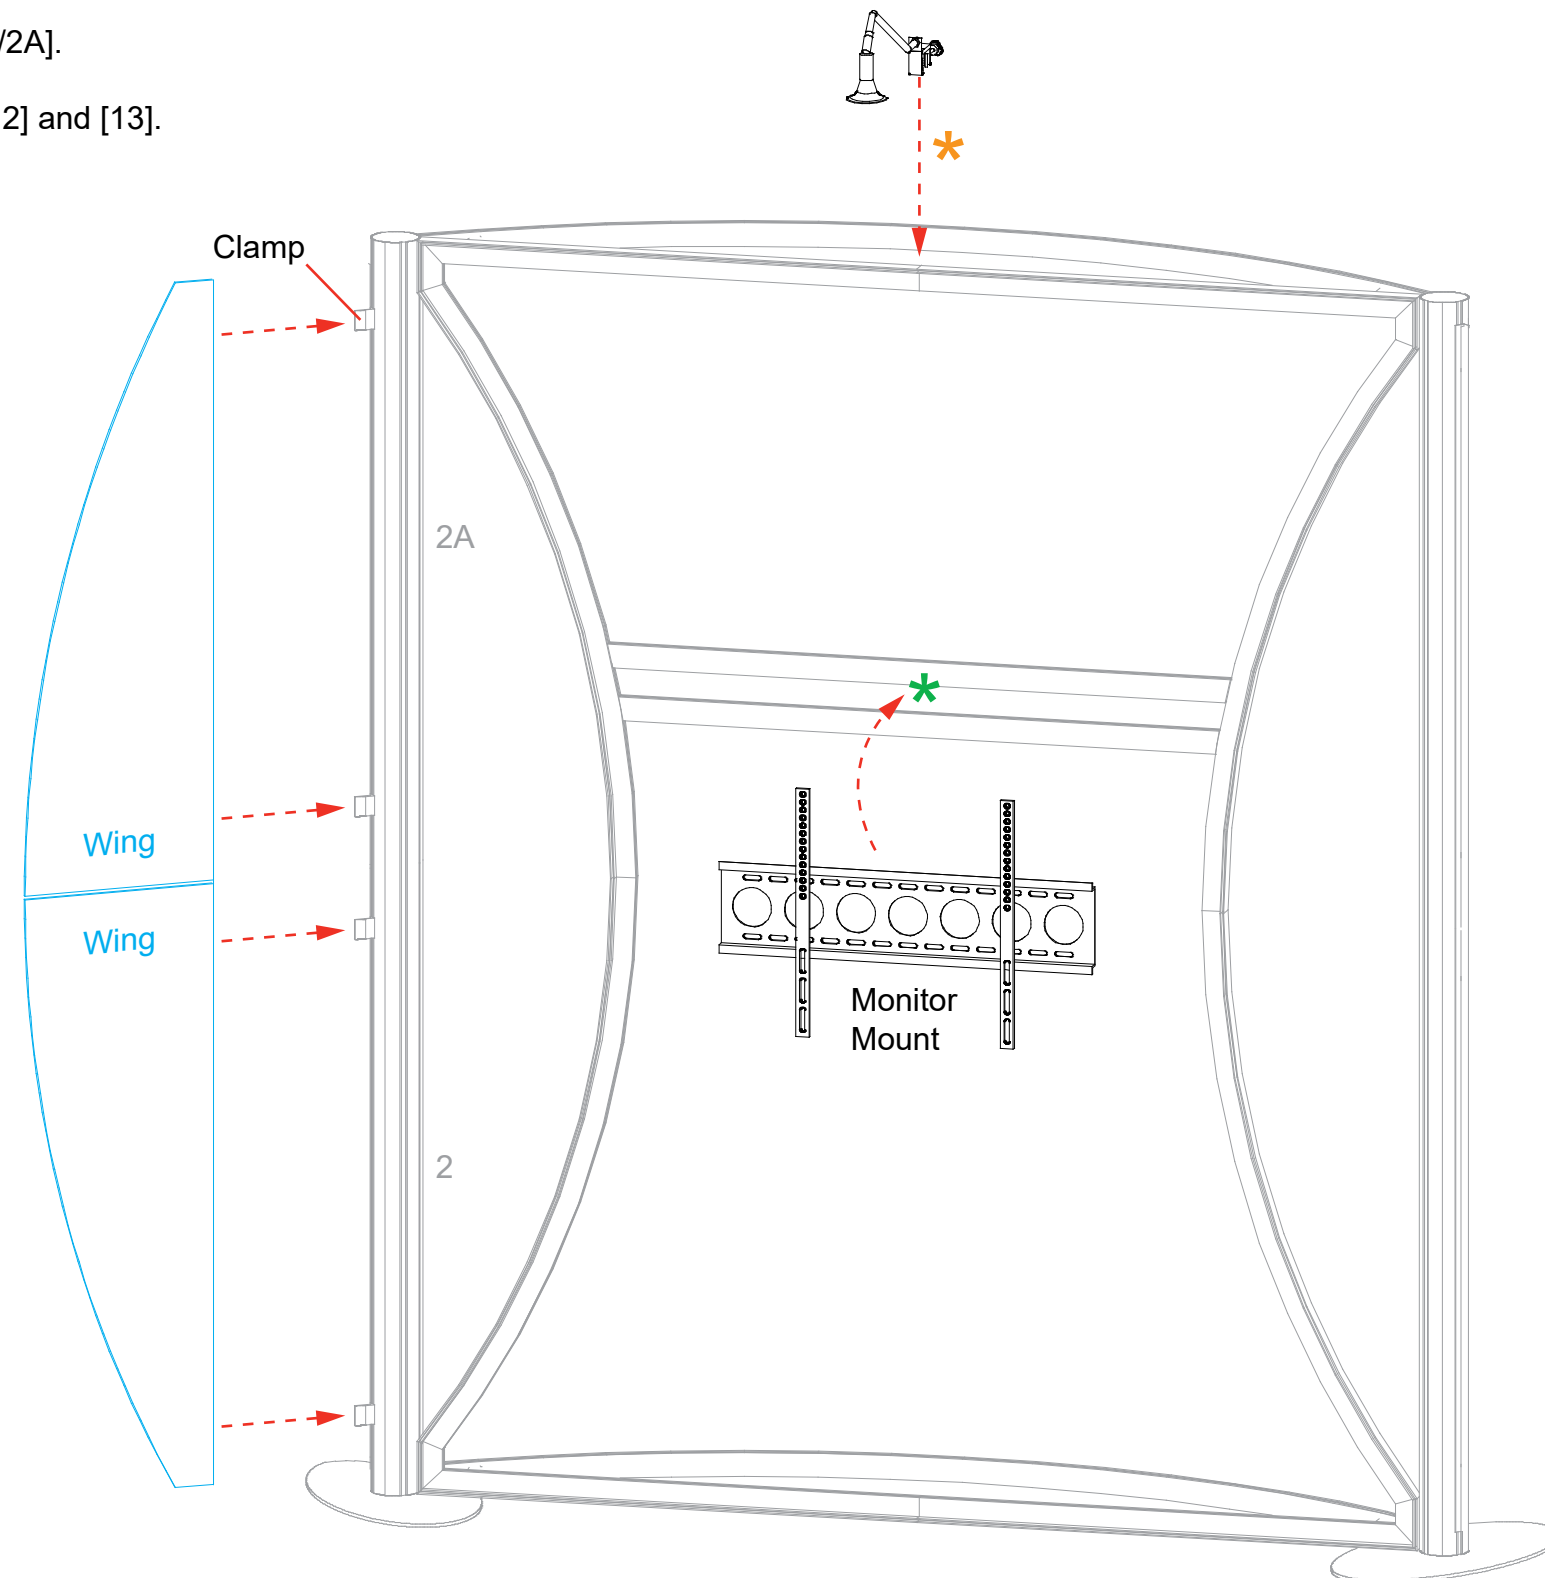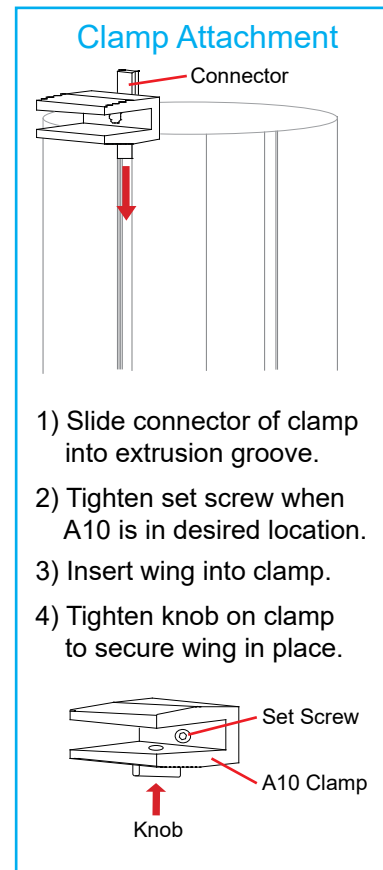

- Steps:
- 1) Attach base plates [1] to lower verticals [16] & [17], using bolts.
 - 2) Connect verticals [16A to 16] and [17 to 17A].
 - 3) Connect curved horizontals [18 to 18A] and [19 to 19A].
 - 4) Attach curved horizontal assemblies [18/18A] & [19/19A] between verticals [3/3A] & [16/16A].
 - 5) Attach horizontals [20] & [20A] between verticals [16/16A] & [17/17A]
 - 6) Connect graphic to Velcro on back of assembled frame.



Item	Qty.	Description
1	2	Base Plate
16/16A	1/1	48"h Round Vertical Extrusion
17/17A	1/1	48"h Round Vertical Extrusion
18/18A	1/1	38" Curved Horizontal Extrusion
19/19A	1/1	38" Curved Horizontal Extrusion
20/20A	1/1	38" Curved Horizontal Extrusion

Velcro on extrusions must face to **BACK** of assembled Backwall.


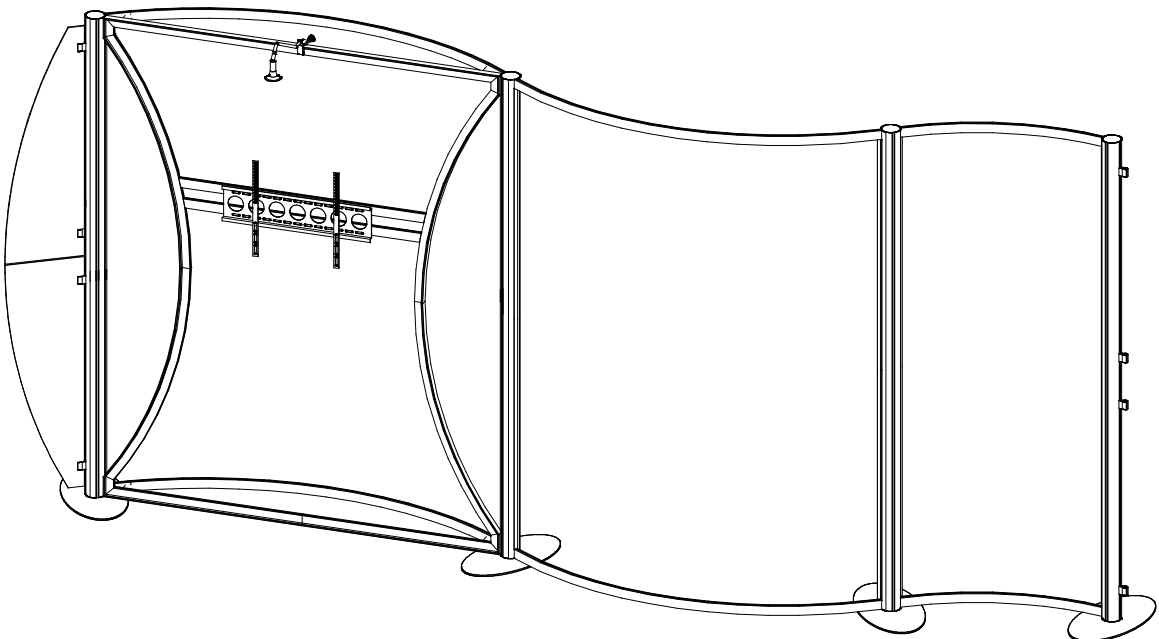
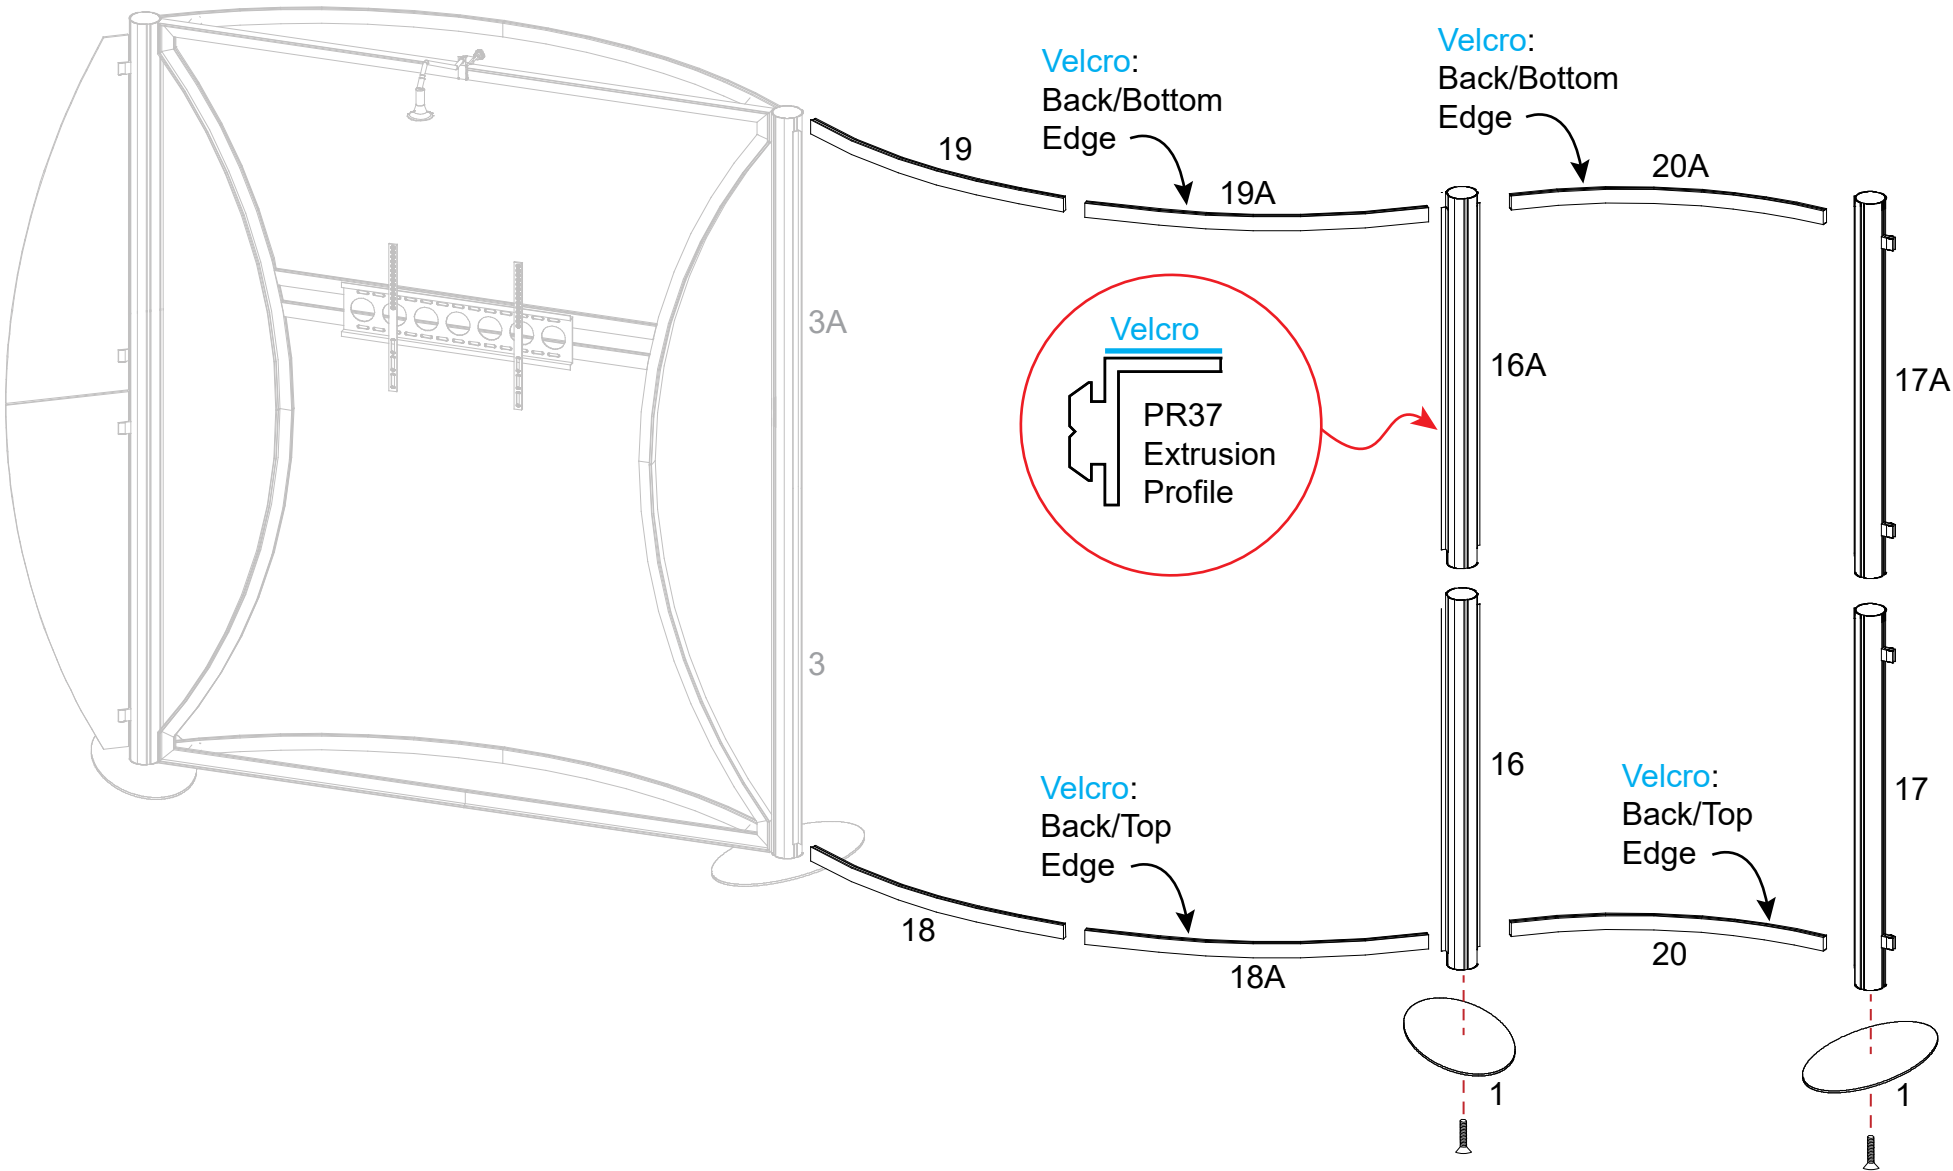



When assembled

- Steps:
- 1) Connect lights to upper horizontals, where indicated.
See [Light Connection](#) detail.
 - 2) Connect wings to vertical [17/17A], using clamps.
See [Clamp Attachment](#) detail.
 - 3) Attach monitor mounts to verticals, where indicated.
See [Monitor Mount](#) detail.

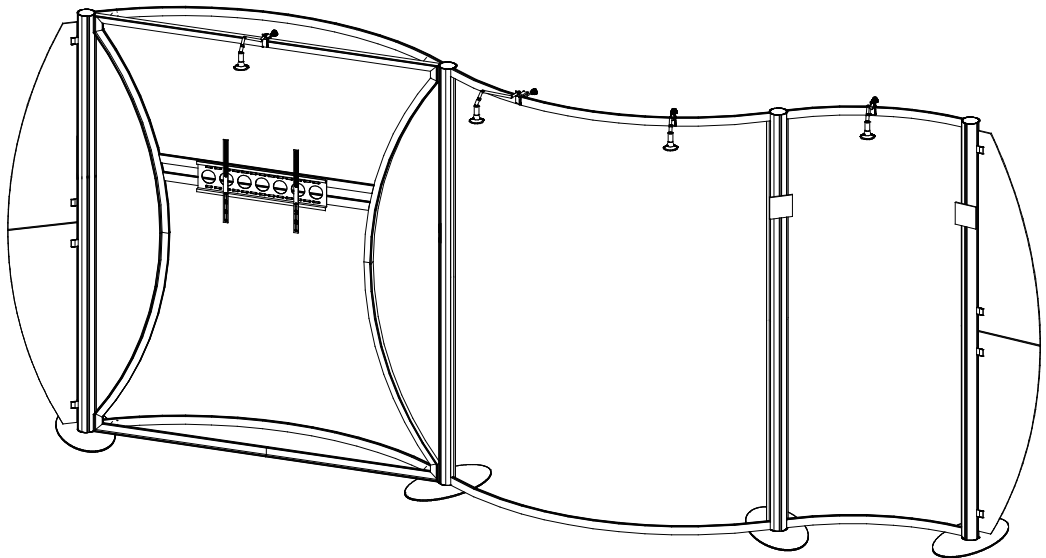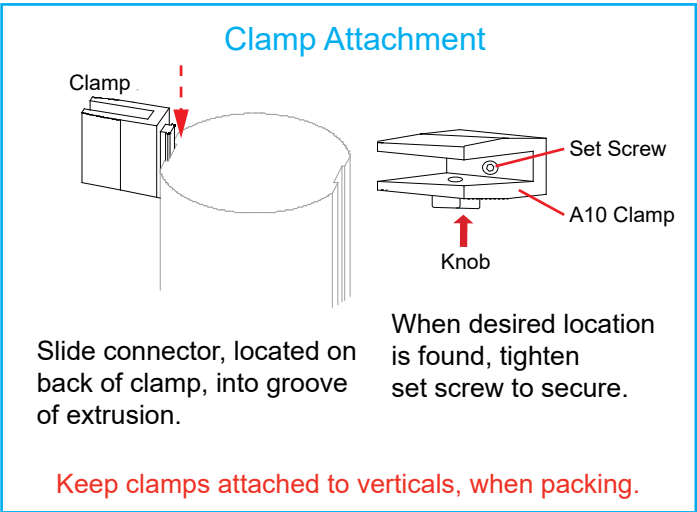

When assembled

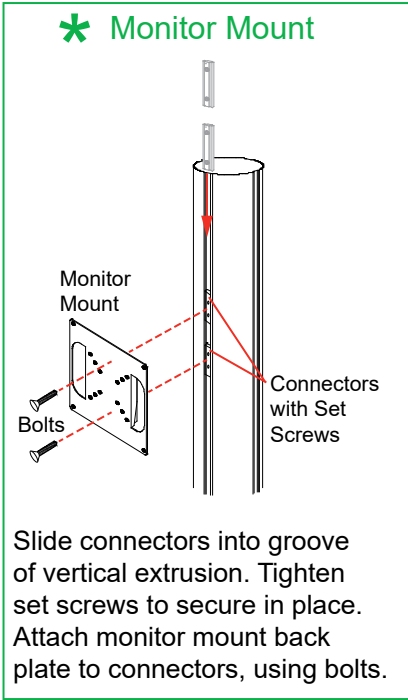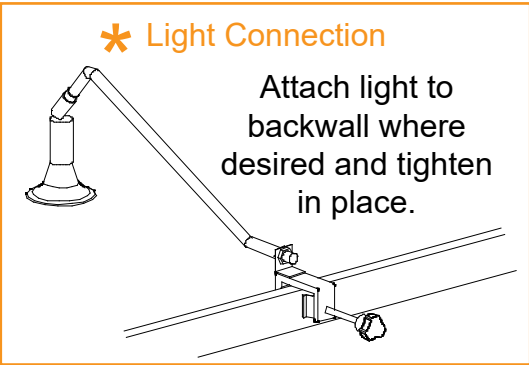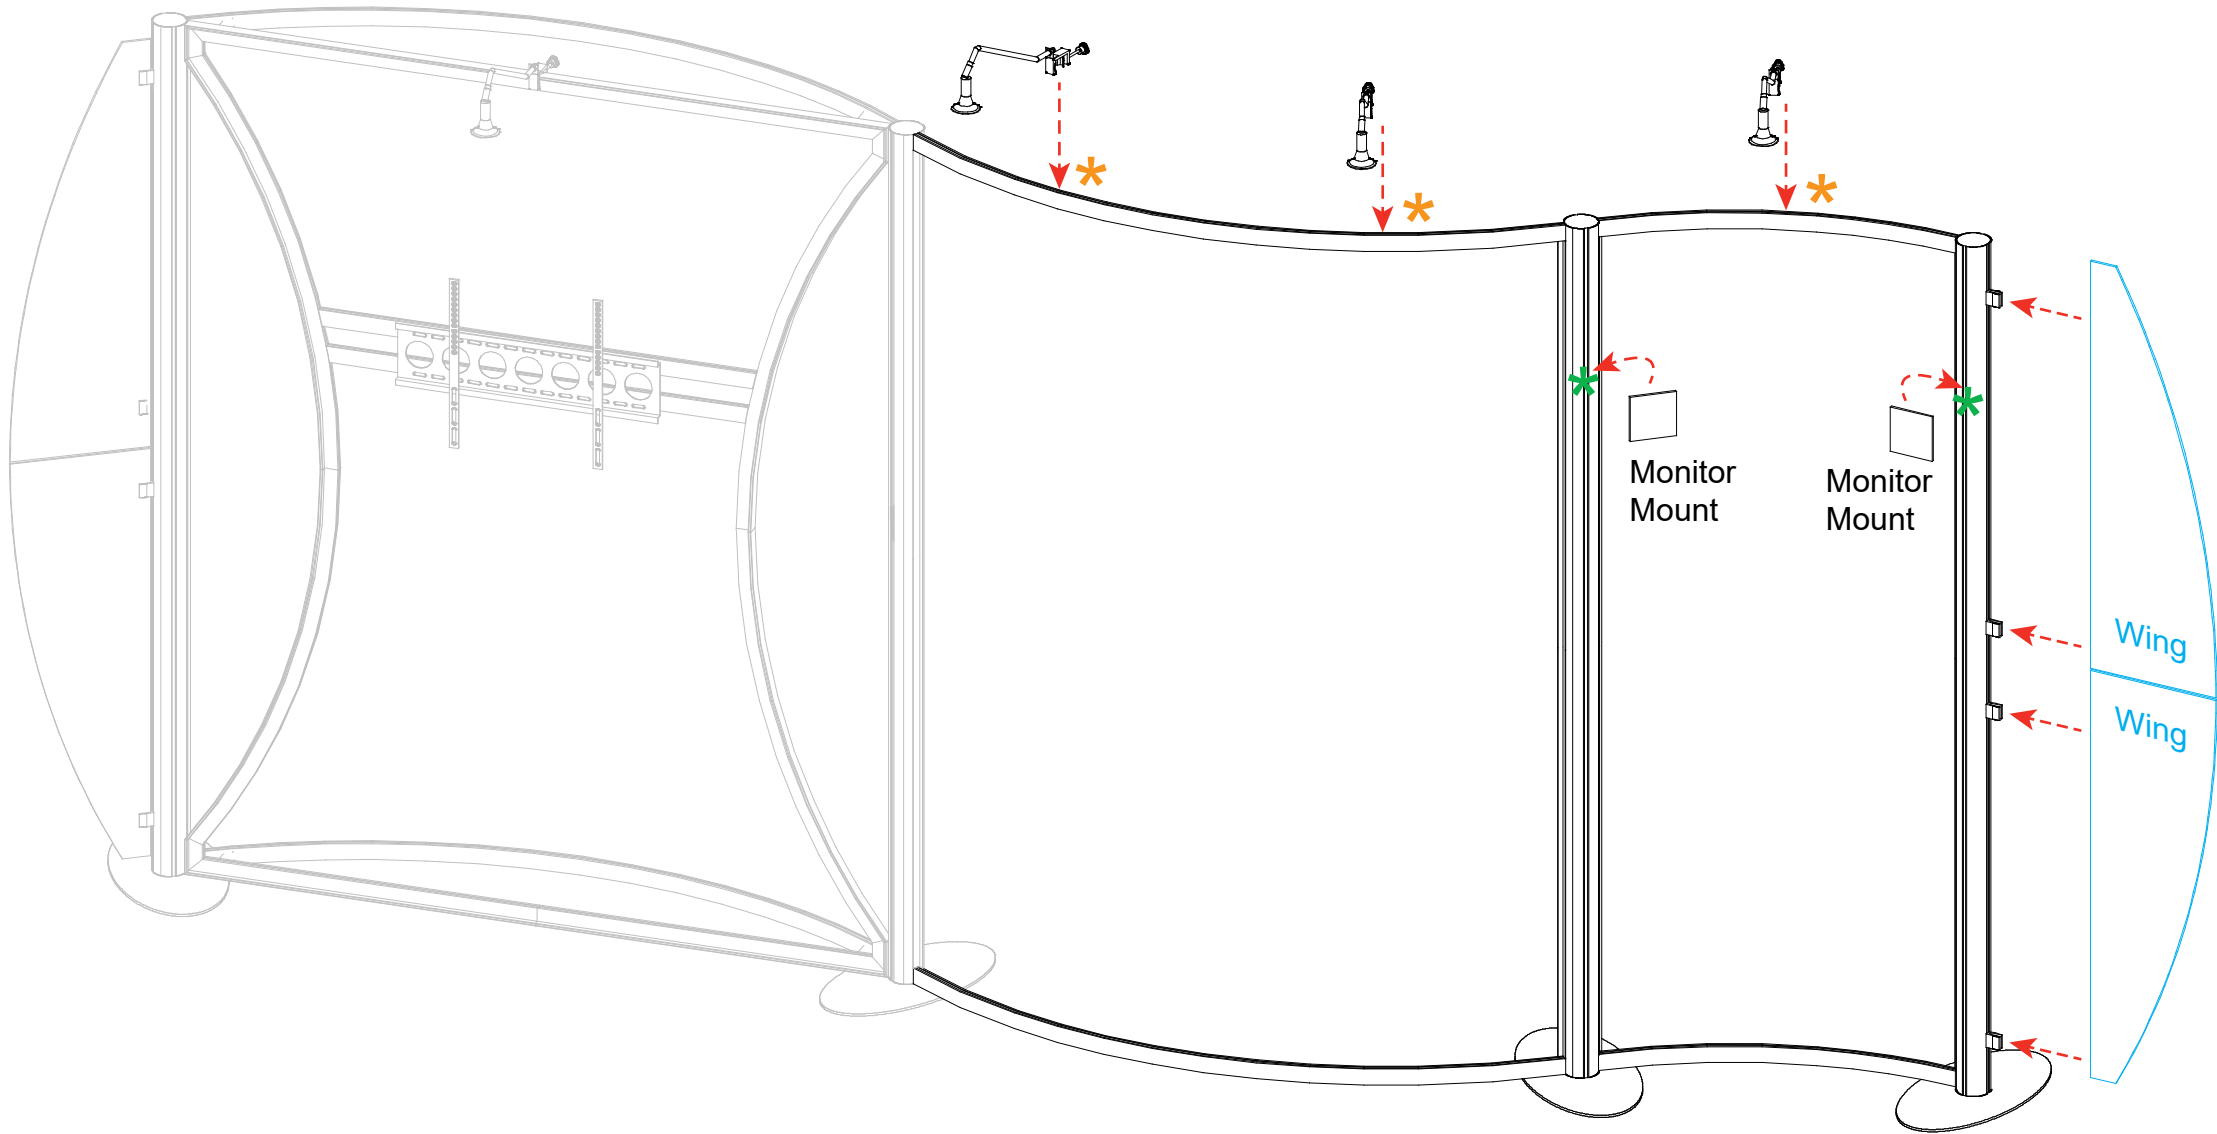

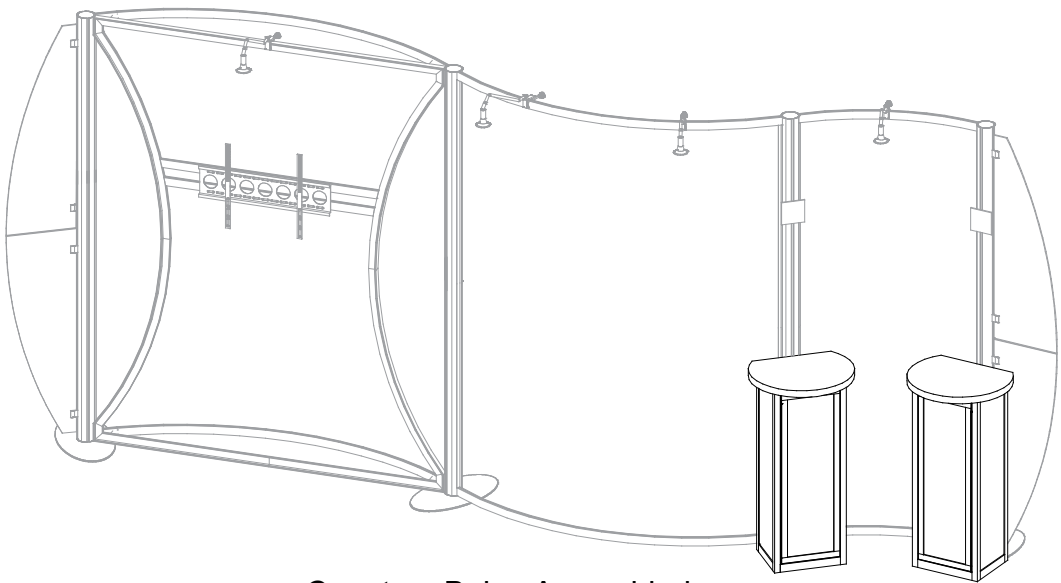

Counters Being Assembled are Highlighted in BLACK

Item	Qty.	Description
21	2	42" h Corner Vertical Extrusion
22	2	42" h Corner Vertical Extrusion
23	2	42" h Corner Vertical Extrusion
24	2	42" h Corner Vertical Extrusion
25/25A	8	13" w Horizontal Extrusion
26/26A	8	10" w Horizontal Extrusion

- Steps:
- 1) Attach lower horizontals [25] and [26] between verticals [21] [22] [23] and [24].
 - 2) Connect door to vertical [24]. See [Door Connection](#) detail.
 - 3) Slide infills between verticals [21] [23], [21] [22], and [22] [24], making sure Velcro is facing inward.
 - 4) Attach upper horizontals [25A] and [26A] between verticals [21] [22] [23] and [24], to secure infills.
 - 5) Connect shelf supports to Velcro.
 - 6) Place shelf on top of shelf supports.
 - 7) Lock counter to horizontals [26A]. See [Counter Lock](#) detail.

