



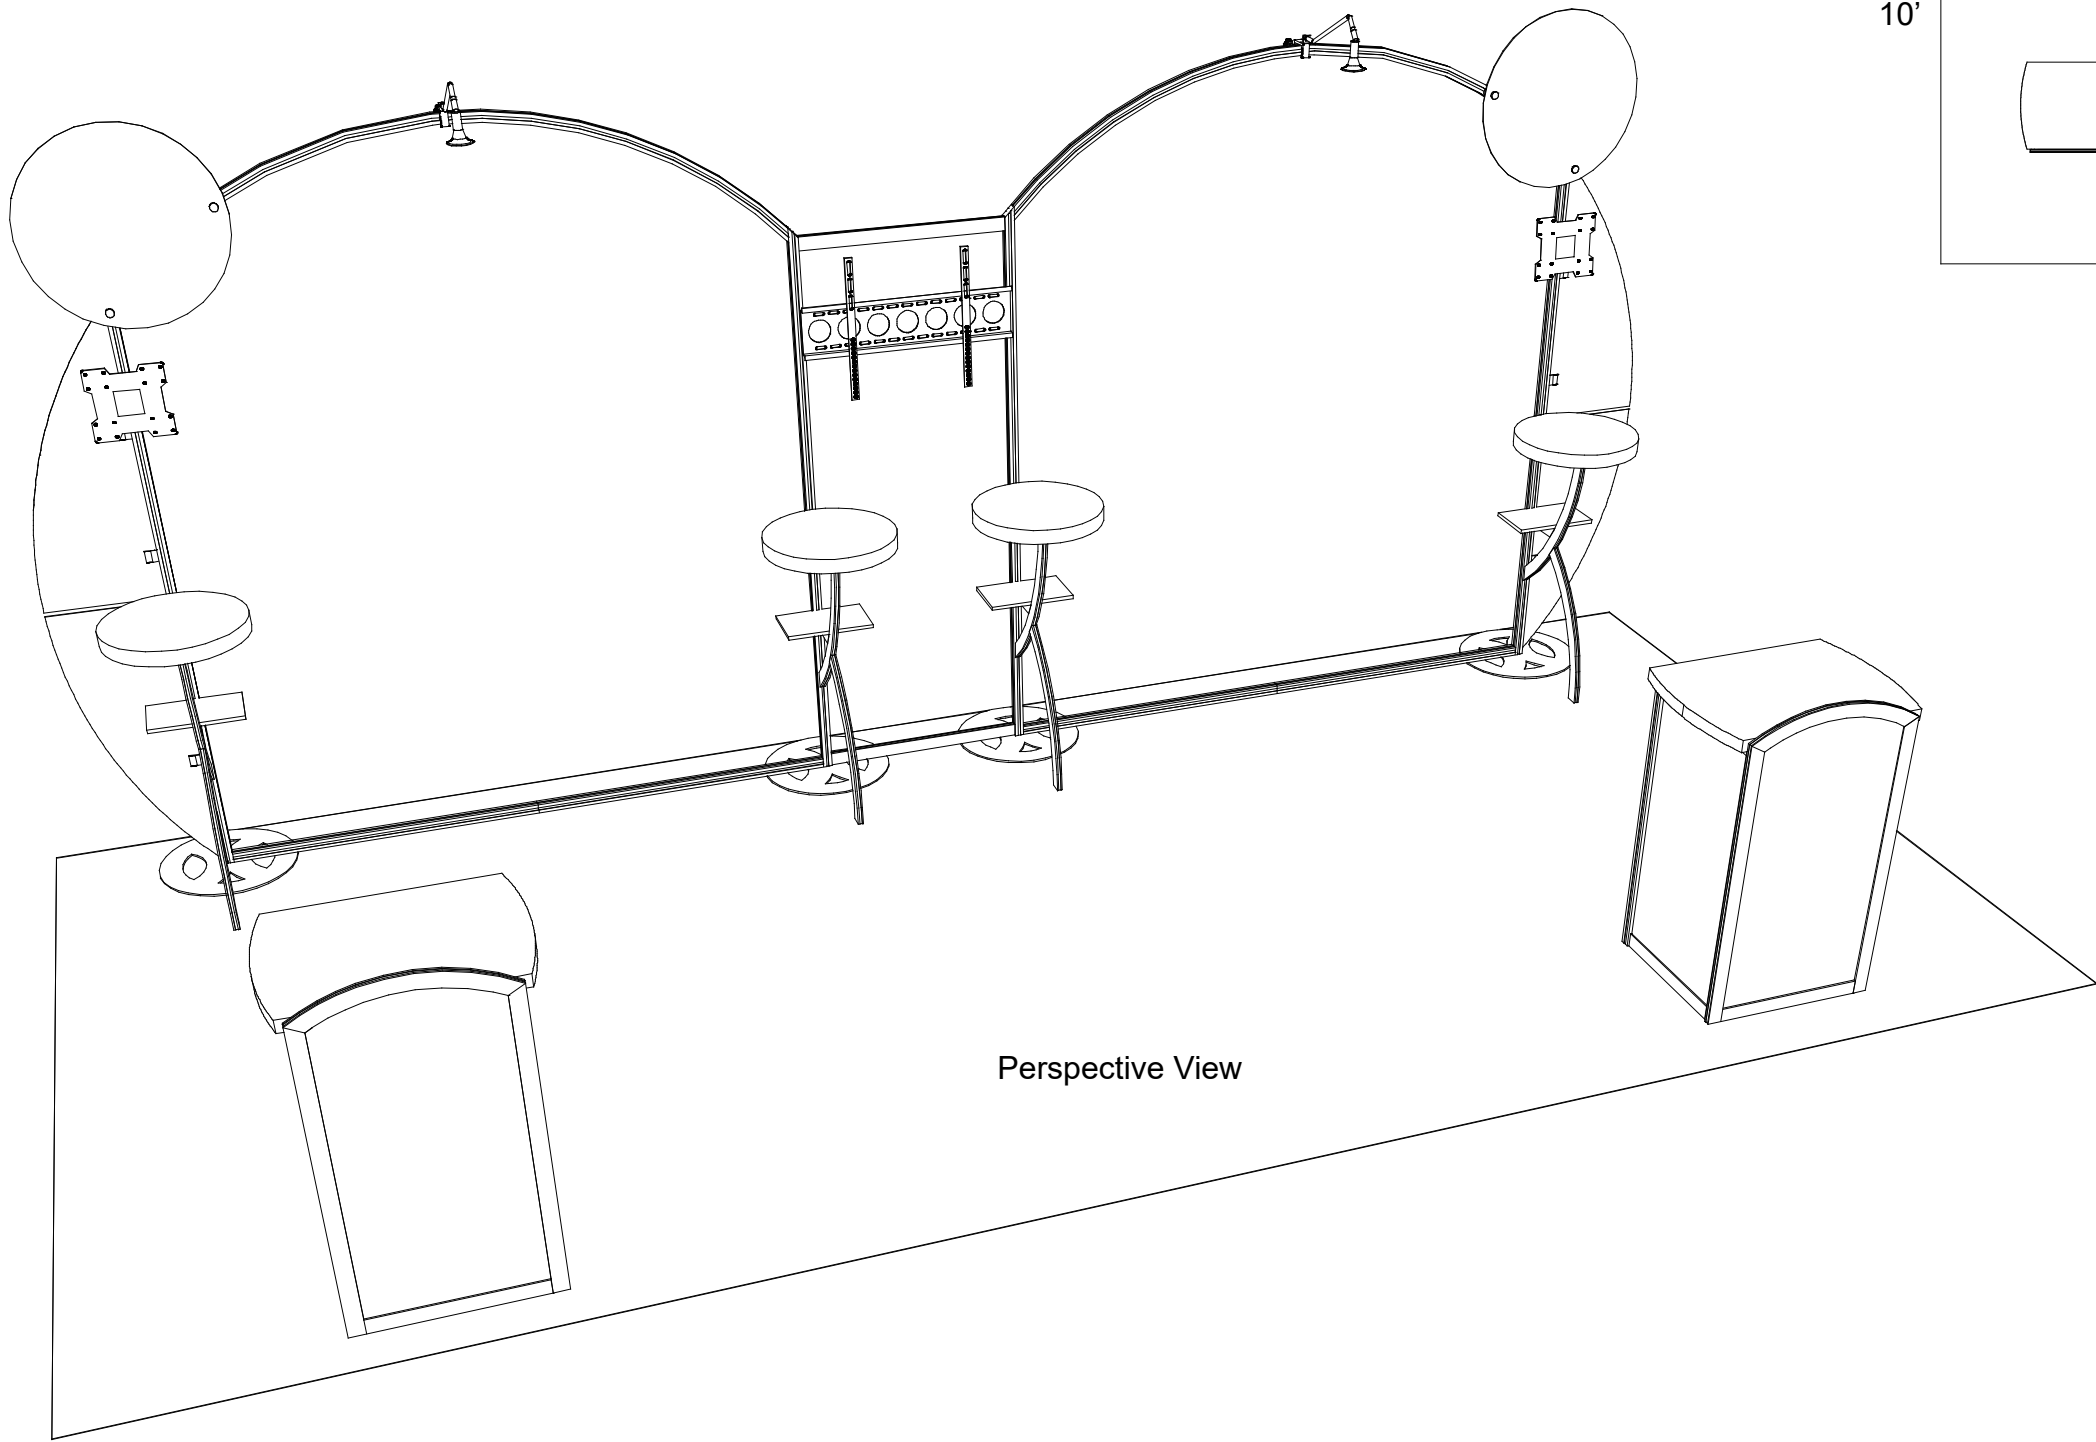


Perspective View

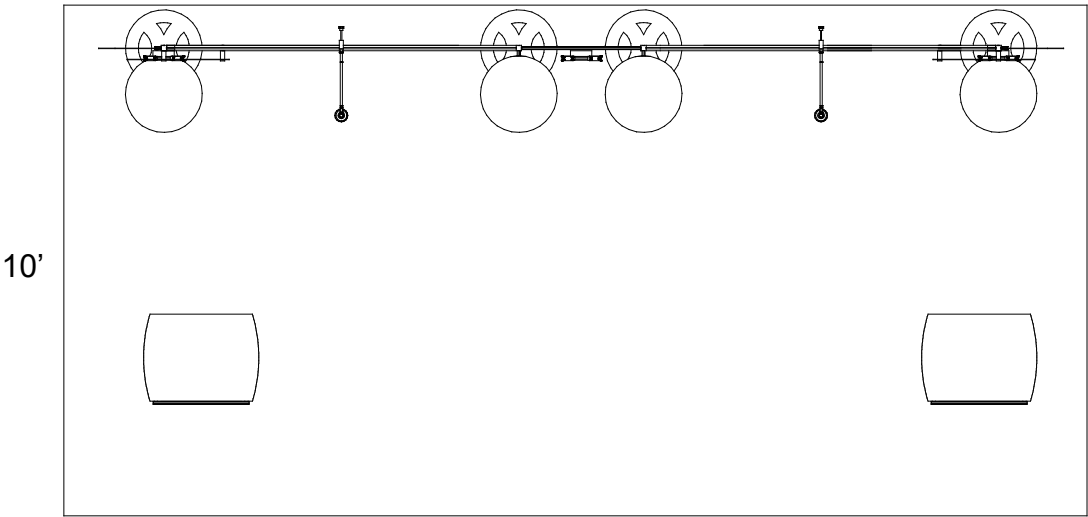

20' Plan View


SETUP INSTRUCTIONS

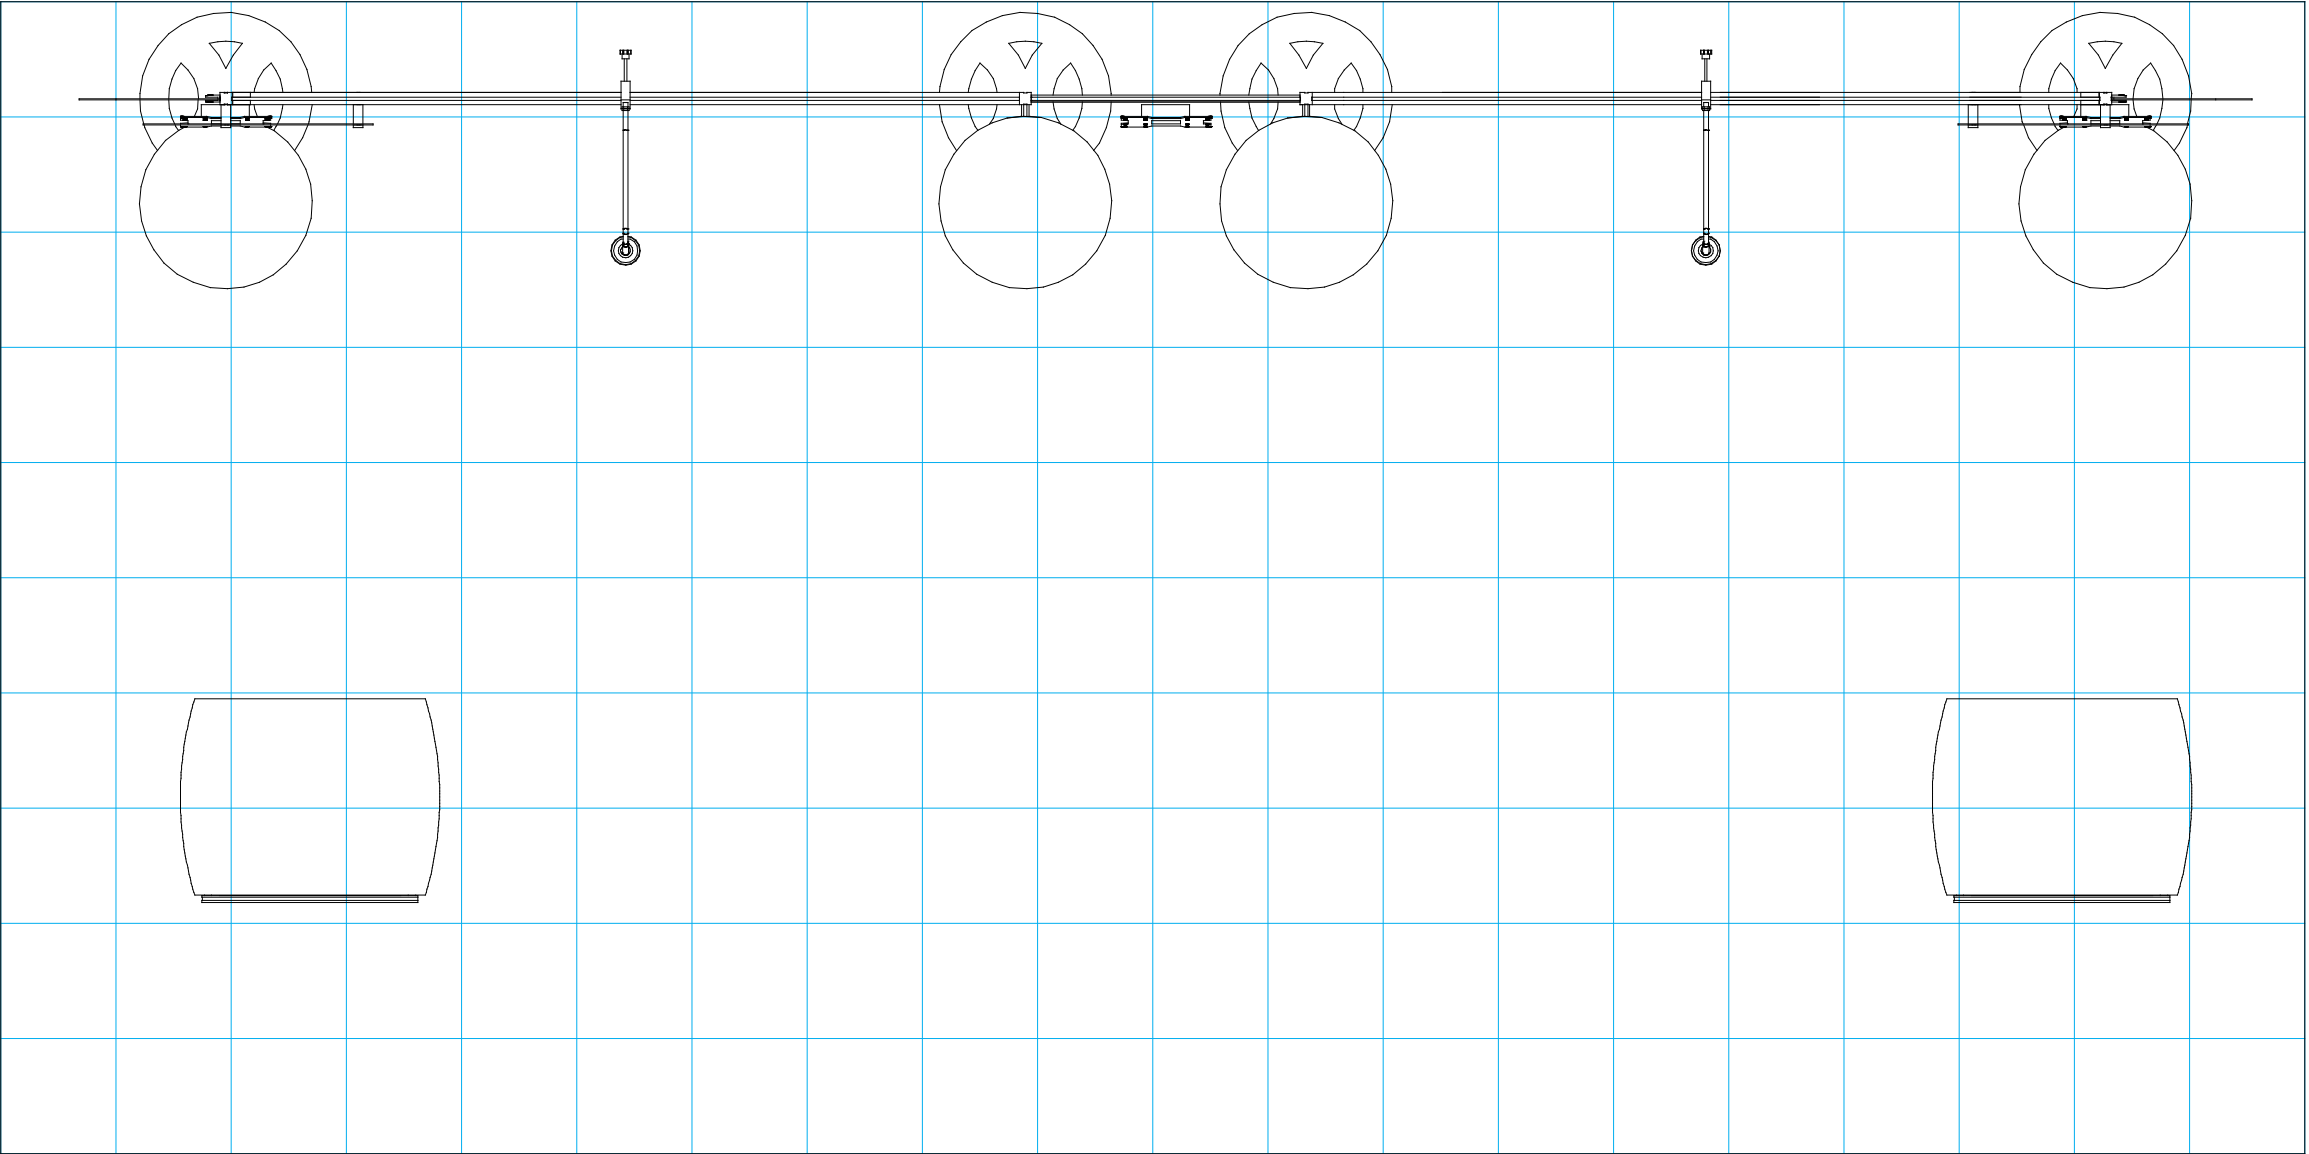


= 1 sq foot

General Setup Instructions

- Read entire setup instruction manual prior to unpacking parts and pieces.
- The setup instructions are created specifically for this configuration.
- Setup instructions are laid out sequentially in steps, including exploded views with detailed explanation for assembly.

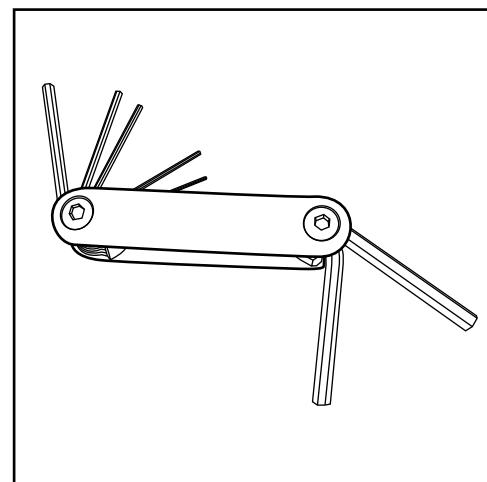

Hex Tool - Essential for Assembly

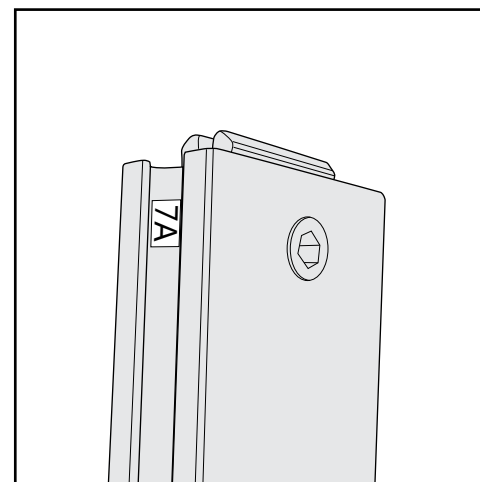

Part Identification - Numbering




WARNING

Cleaning & Packing


- For Cleaning Metal, Plex, & Laminate Parts:
Use a **MILD NON-ABRASIVE** cleanser and soft cloth/paper towel to clean all surfaces.
- Keep exhibit components away from heat and prolonged sun exposure.
Heat and UV exposure will warp and fade components.
- Retain all provided Packing Materials.
All provided packing materials are for ease of repacking & component protection.

Disassembly


- For loss prevention, tighten all set screws and locks during disassembly.

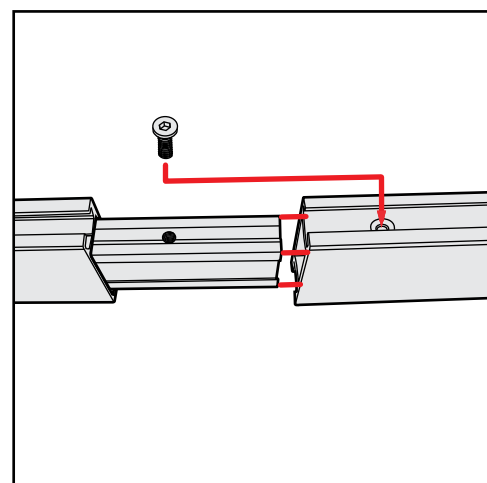

Spline Connection

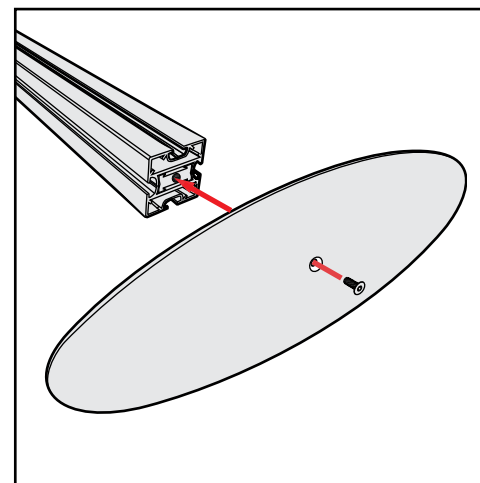


Base Plate & Extrusion Connection

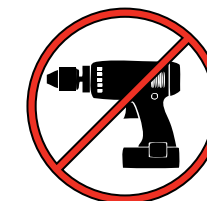


DO NOT USE POWER TOOLS



LADDERS OR LIFTS
MAY BE REQUIRED

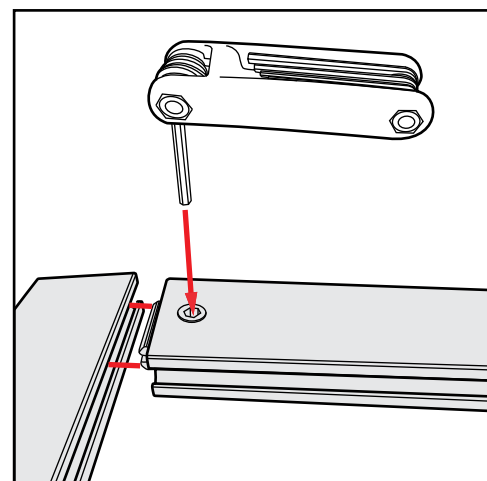

Extrusion & Lock Connection

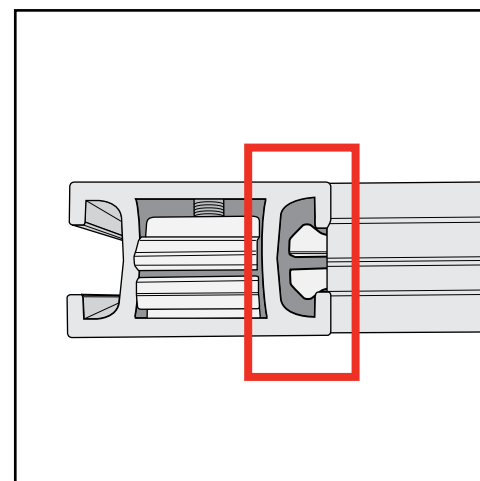


Engaged Lock




ALL CONNECTIONS MUST
BE TIGHTLY SECURED

Item	Qty.	Description
1A	4	Base Plates
2/2a	1/1	39" Vertical extrusion
3/3a	1/1	39" Vertical extrusion top left outside cut
4/4a	1/1	39" Vertical extrusion
5/5a	1/1	39" Vertical extrusion top right outside cut
6/6a	1/1	41" Horizontal extrusion
7/7a	1/1	41" Horizontal extrusion
8/8a	1/1	41" Top left curved extrusion
9/9a	1/1	41" Top right curved extrusion
10/10a	1/1	28" Horizontal extrusion
11	1	28" Horizontal extrusion

- Steps:
- 1) Attach base plates [1A] to lower verticals [2,2a,4 & 4a].
 - 2) Connect upper verticals [3,3a,5 & 5a] with connection bars [b] to lower verticals.
 - 3) Connect horizontals [6 & 7] [6a & 7a] with connection bar [a].
 - 4) Connect horizontals [10,10a & 11] between verticals.
 - 5) Connect curved extrusions [8 & 9] [8a & 9a] with connectors [a].
 - 6) Connect curved assemblies [8/9] [8a/9a] between verticals.
 - 7) Attach Velcro Graphic to back of frame as shown.

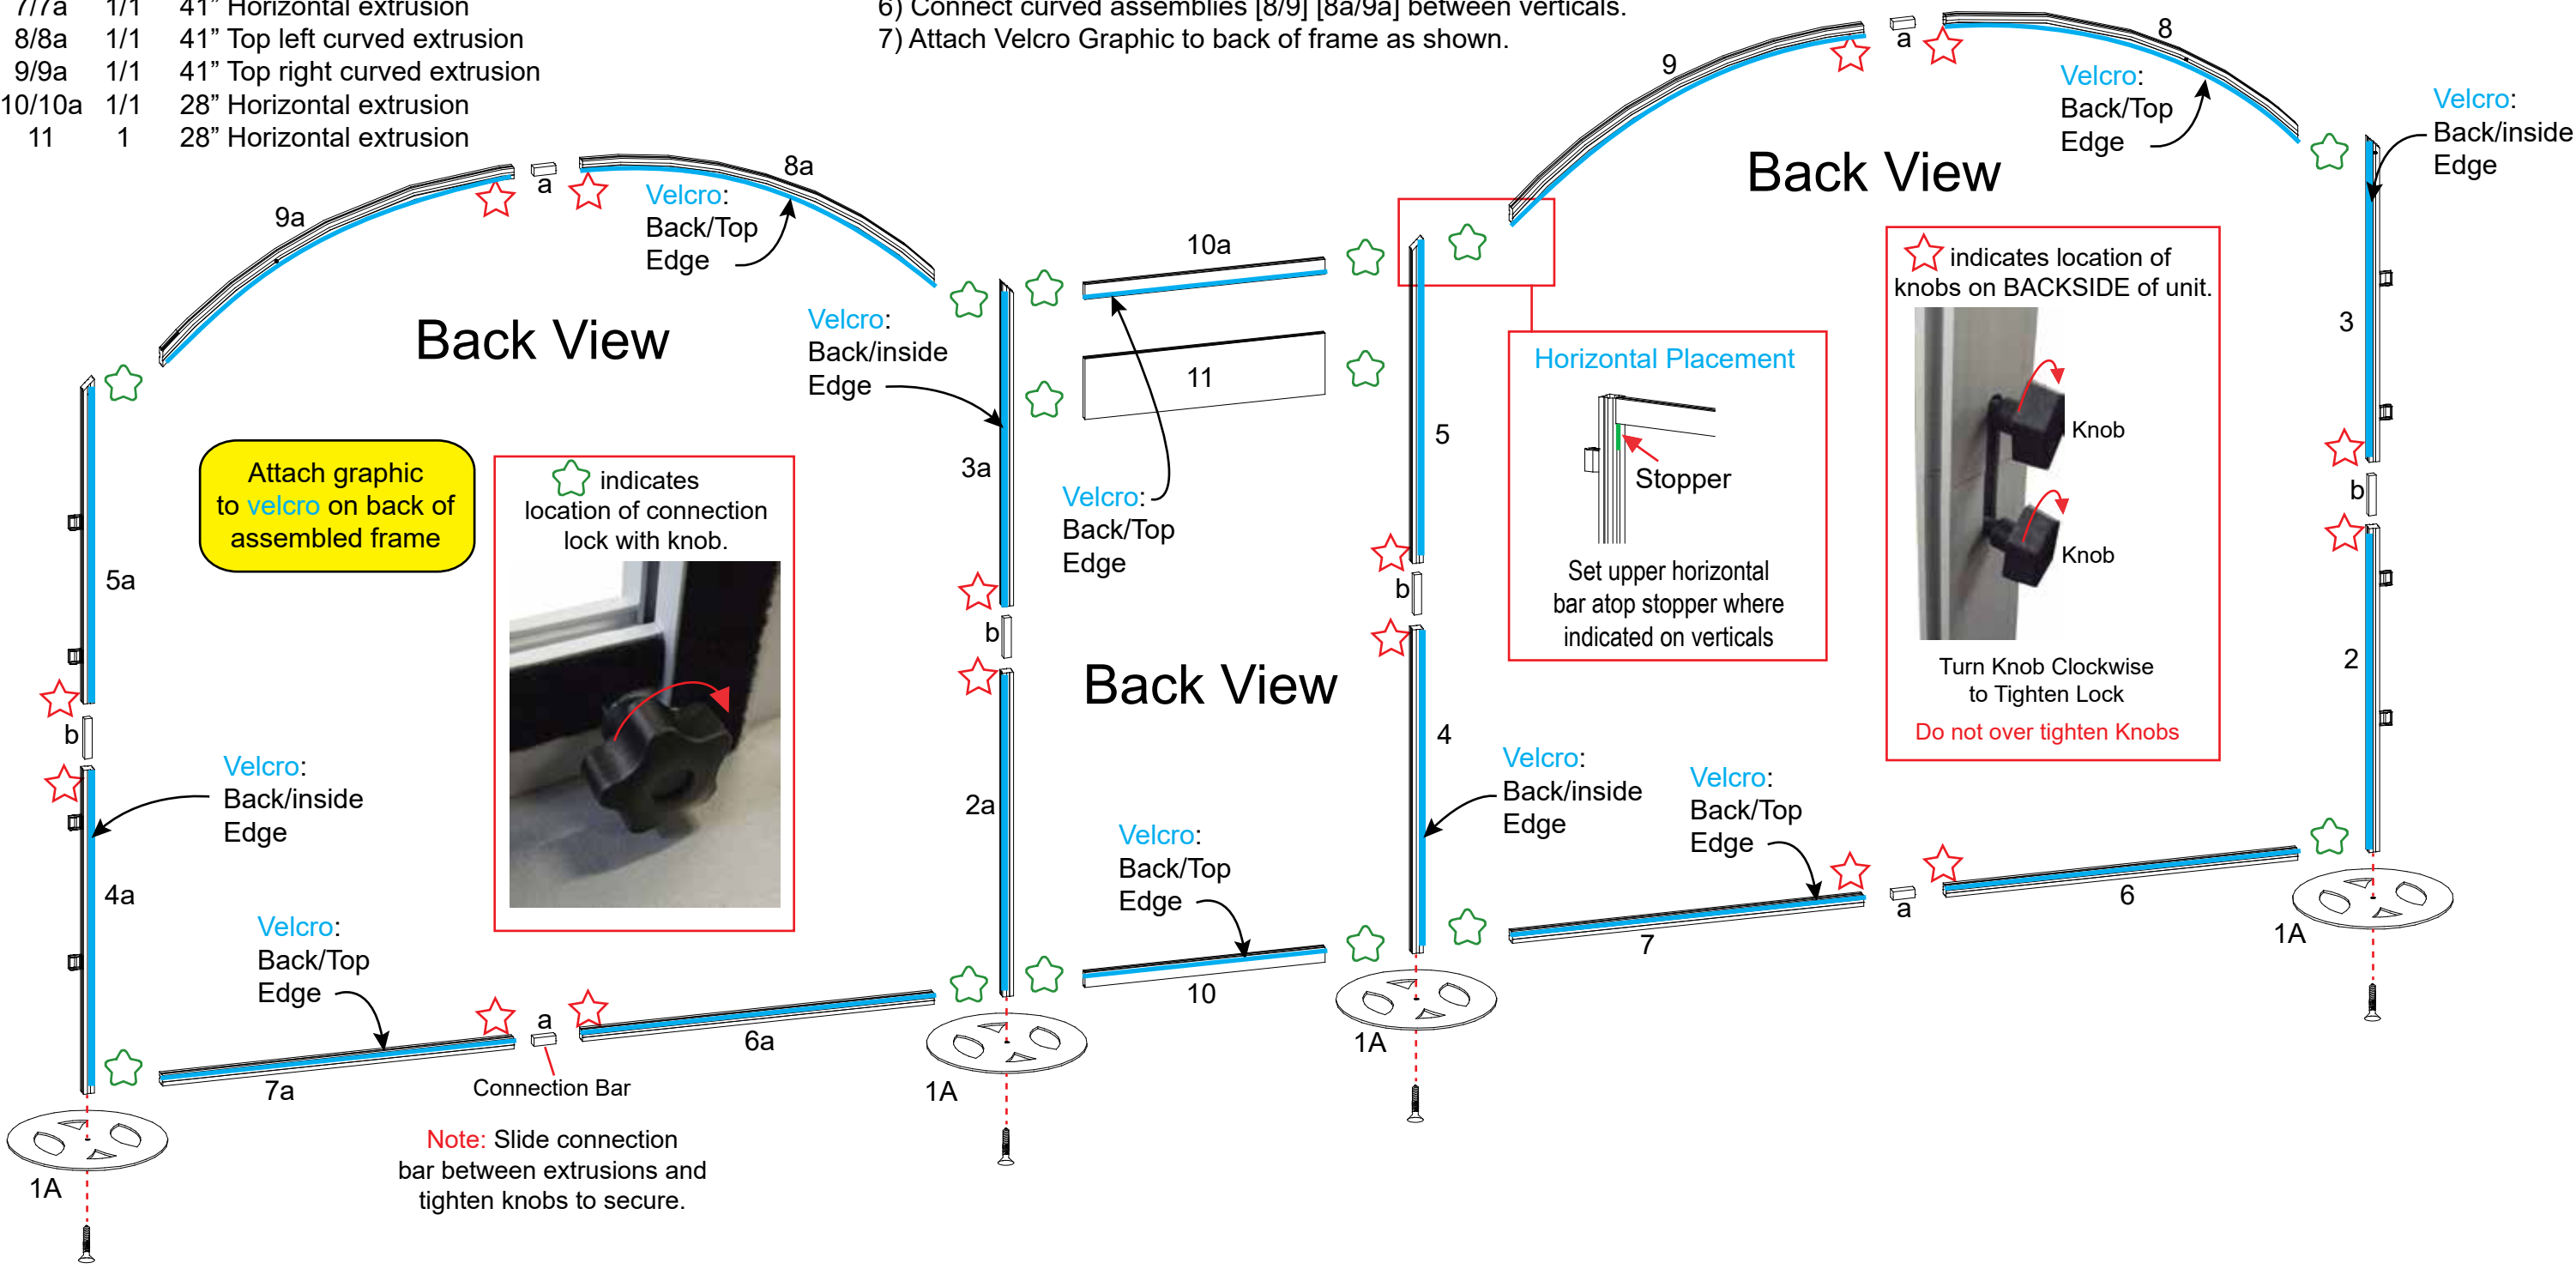

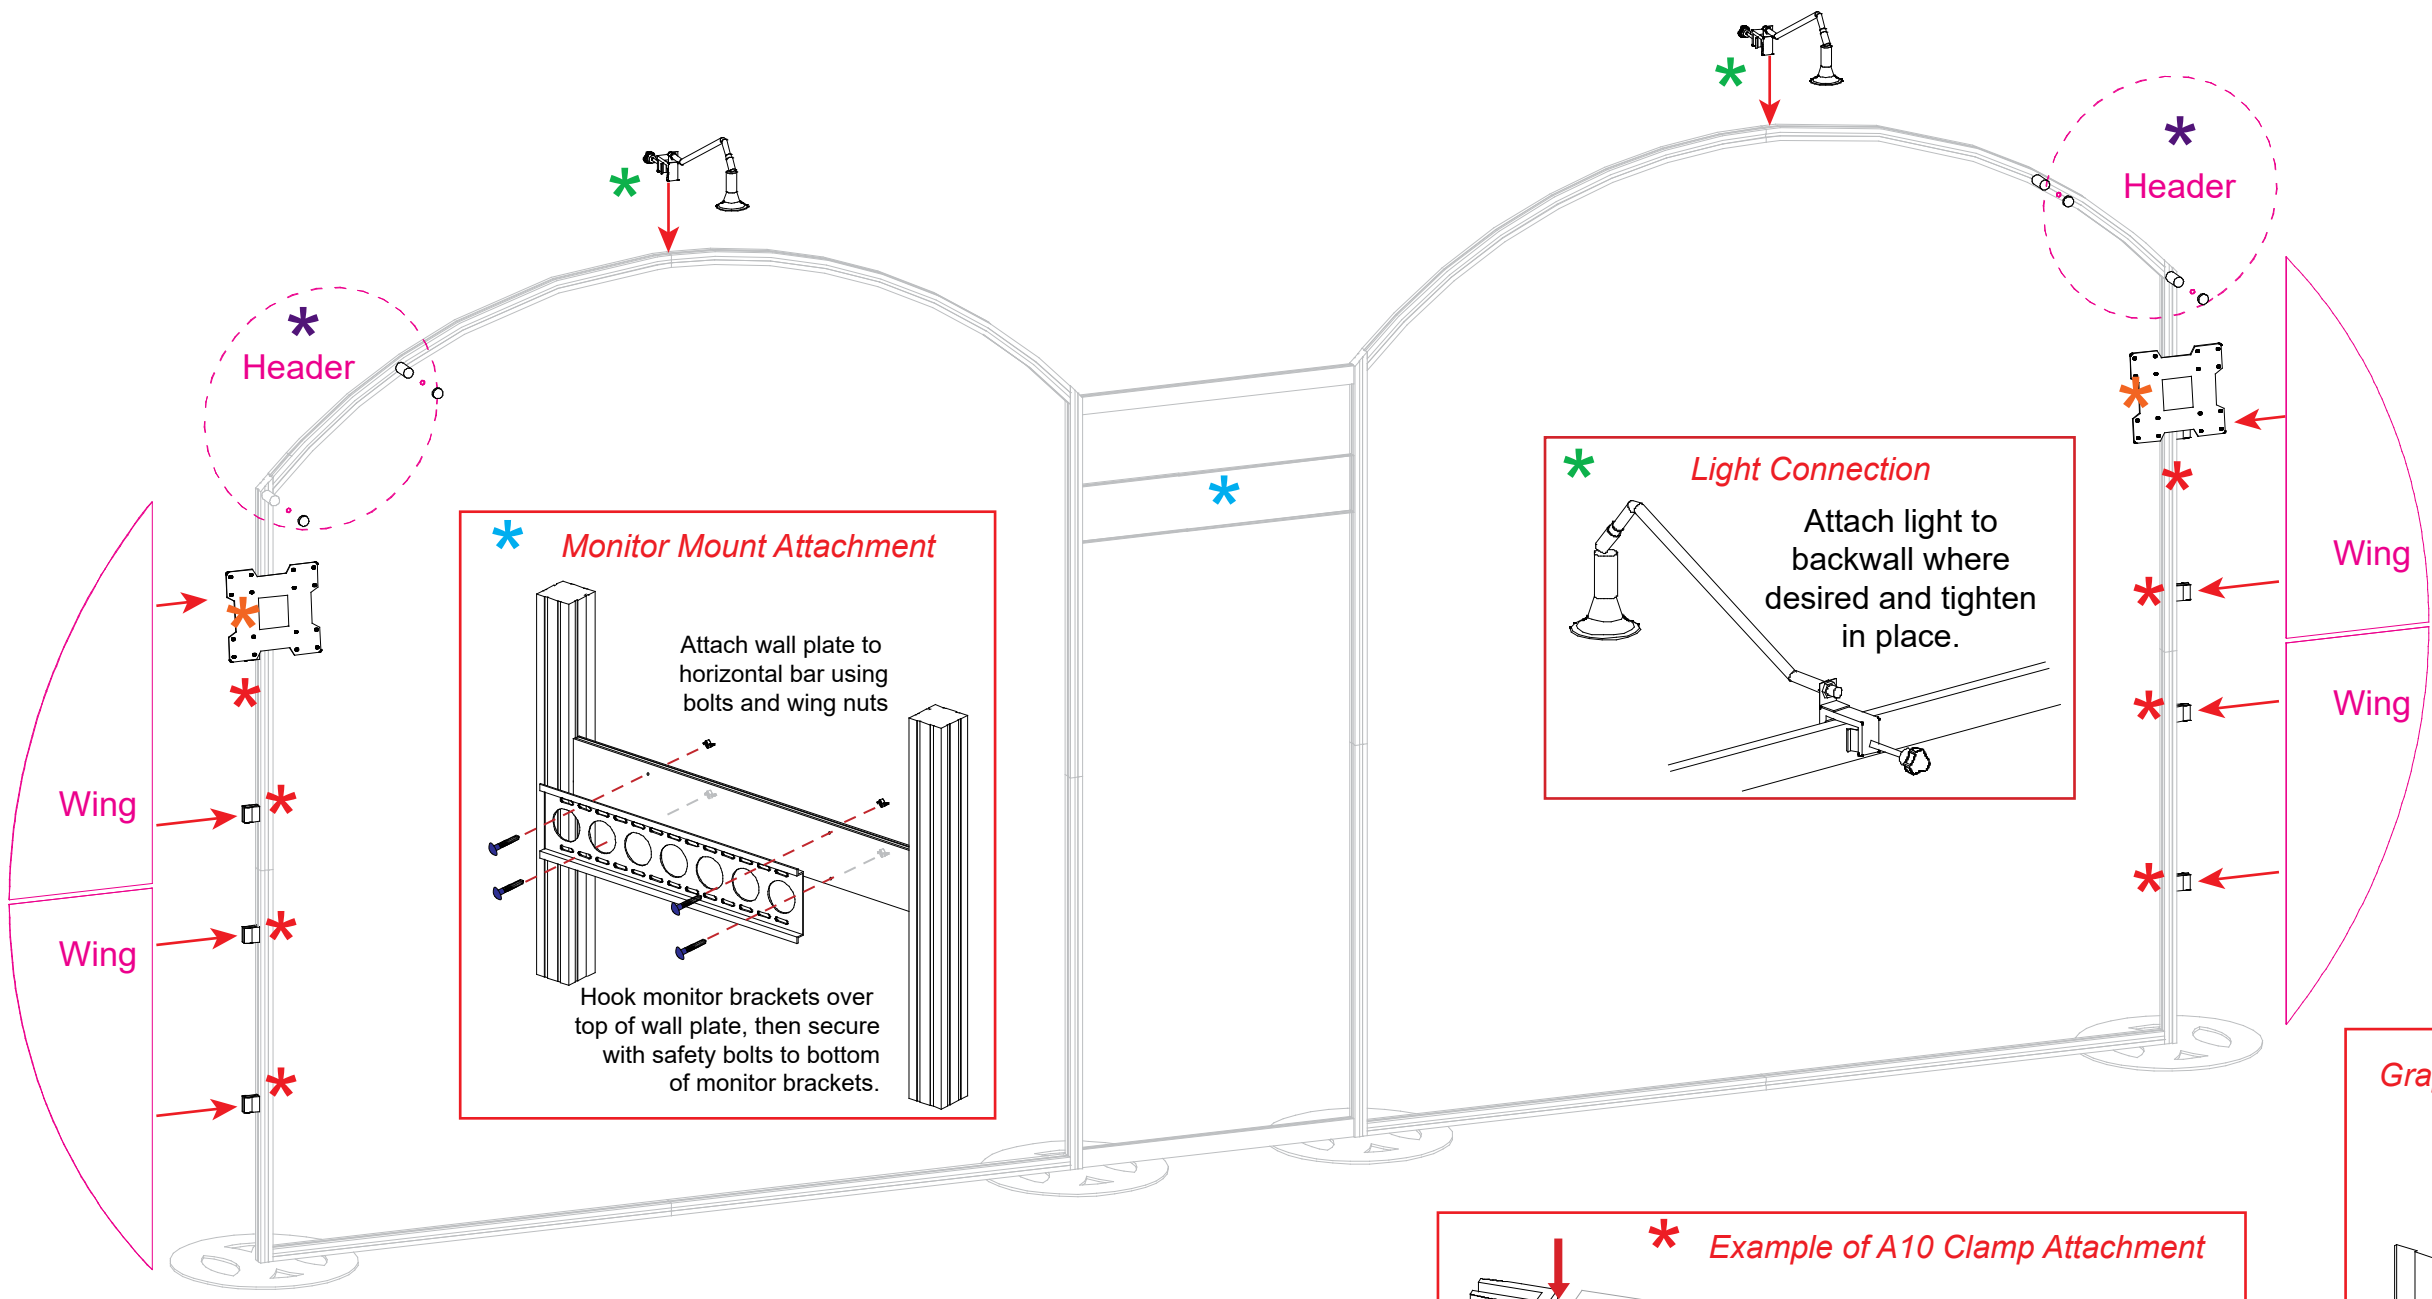

*** Monitor Mount Attachment**

Attach wall plate to horizontal bar using bolts and wing nuts

Hook monitor brackets over top of wall plate, then secure with safety bolts to bottom of monitor brackets.

*** Light Connection**

Attach light to backwall where desired and tighten in place.

*** Monitor Mount Attachment**

Attach monitor mount back plate to connectors using setscrews provided.

*** Example of A10 Clamp Attachment**

Slide connector on back of A10 clamp into groove of extrusion.



When desired location is found, tighten set screw to secure.

Tighten knob to secure shelf/wing in place.

*** Graphic Attachment**

Slide connector on back of standoff barrels into groove of extrusion and twist to secure in place. Secure graphic to standoffs using screw caps.

- Steps:
- 1) Attach Wings to A10's as shown in **Example of A10 Clamp Attachment** detail.
 - 2) Attach header graphic as shown in **Graphic Attachment** detail.
 - 3) Connect lights as shown in **Light Connection** detail.
 - 4) Connect monitors as shown in **Monitor Mount Attachment** details.

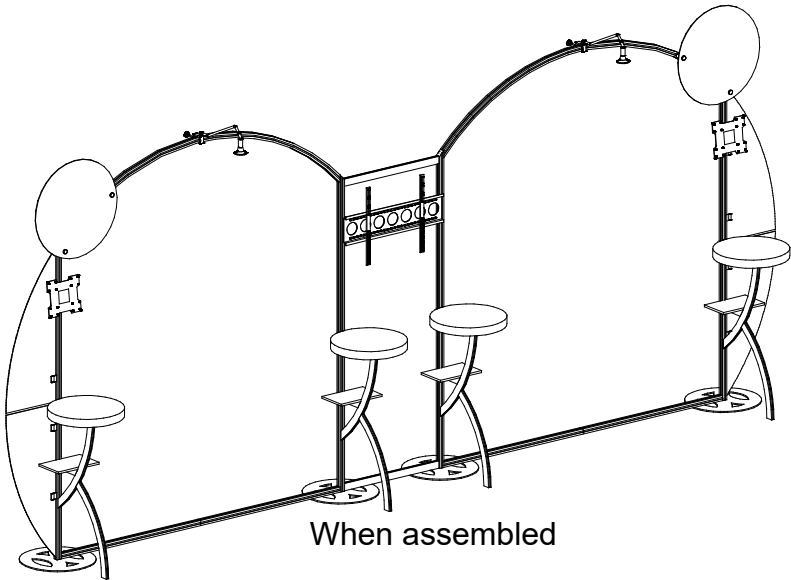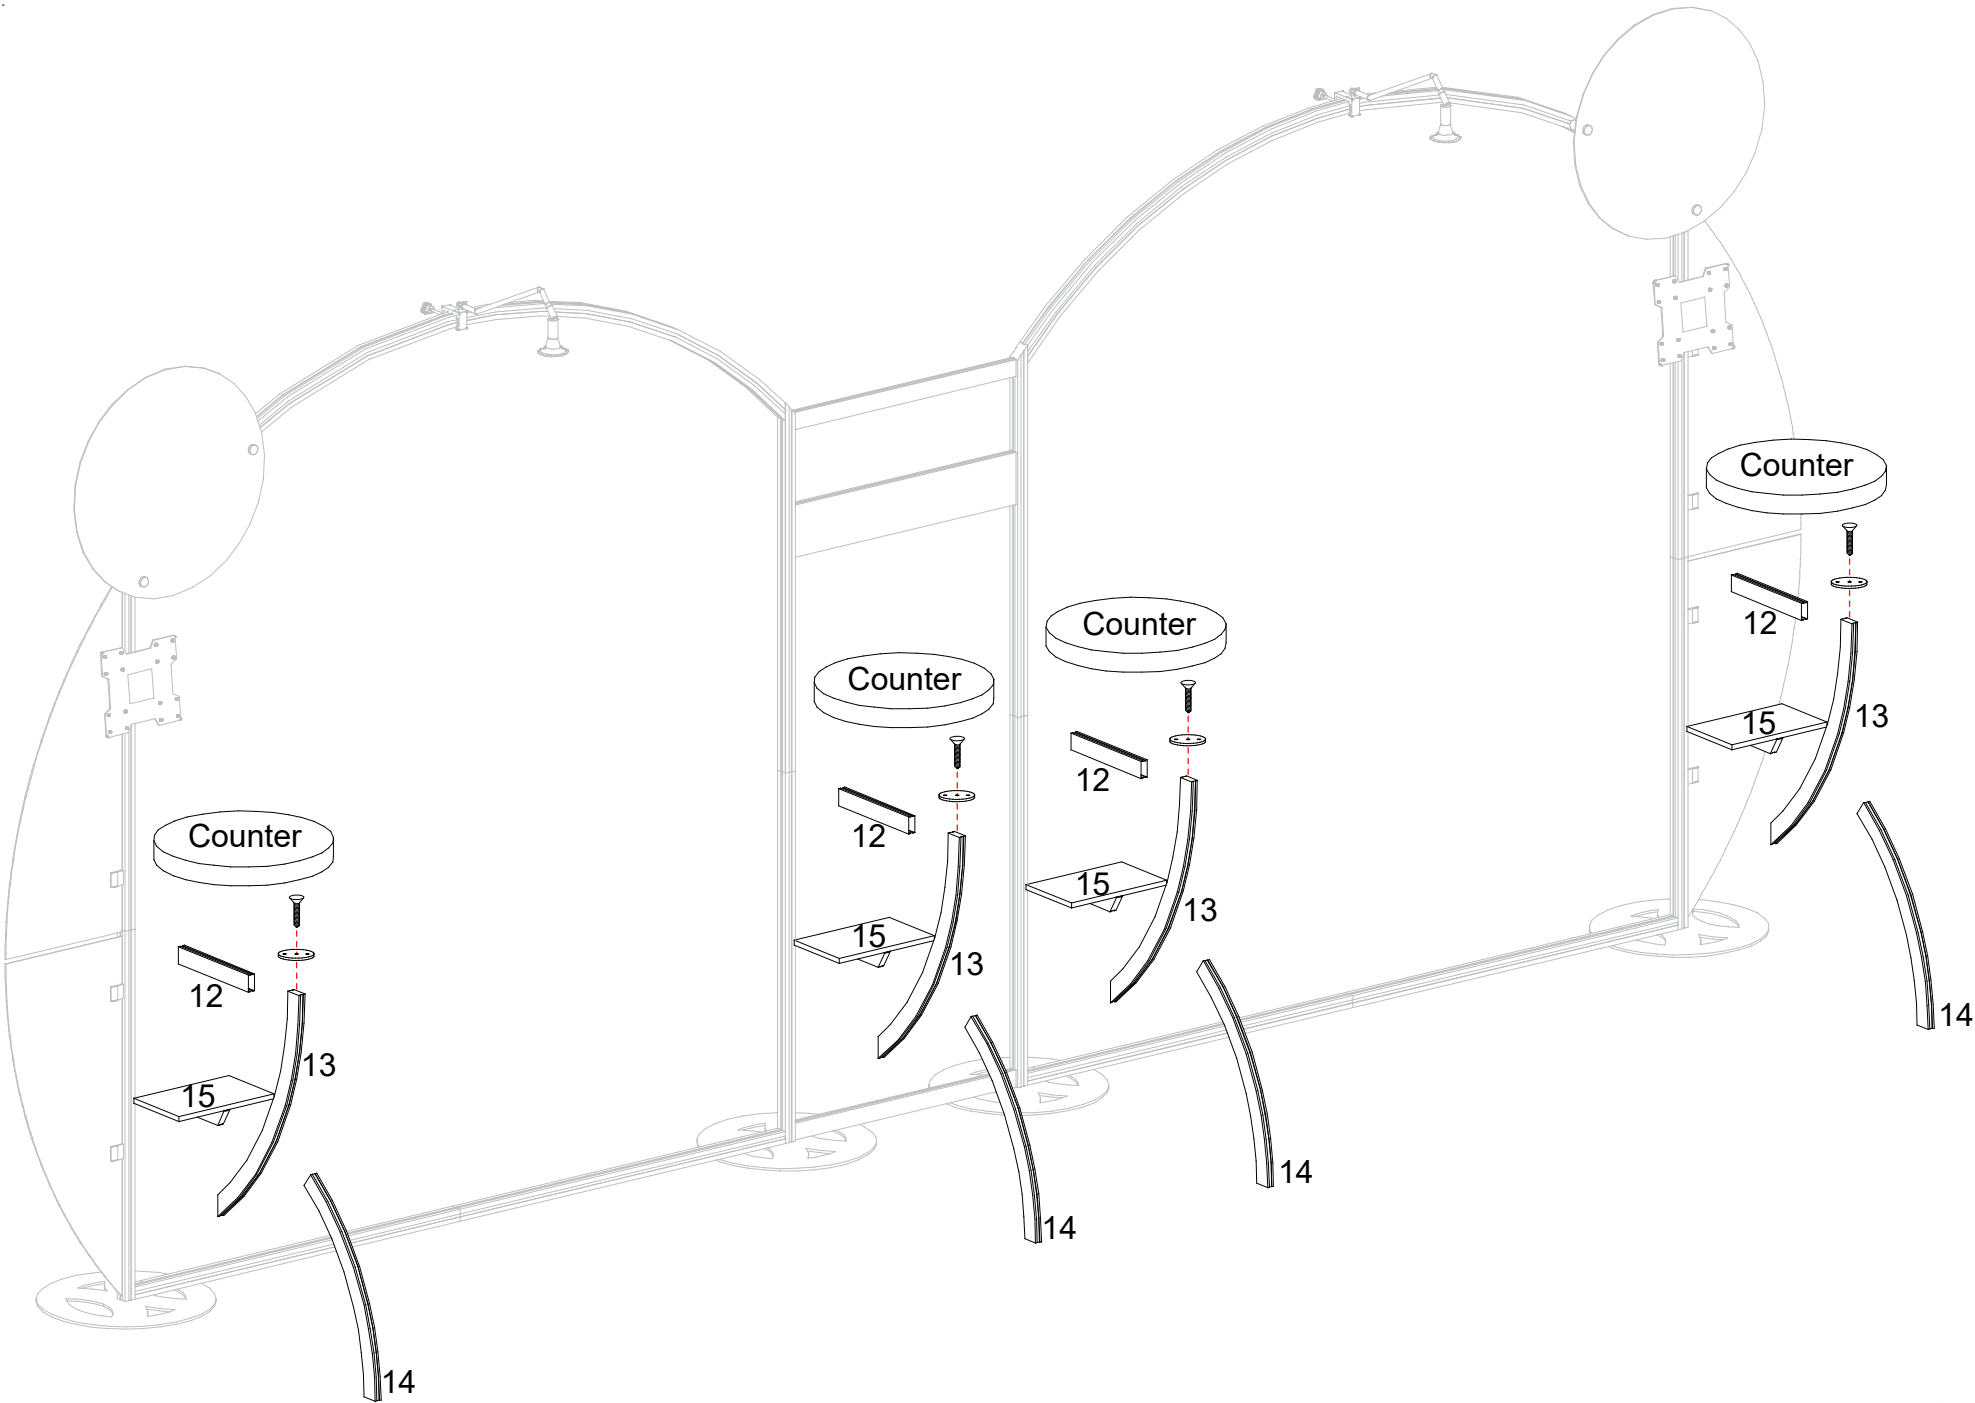


Item	Qty.	Description
12	4	11.5" Horizontal Extrusion
13	4	26.75" Curved Extrusion
14	4	20.3" Curved Extrusion
15	4	Hostess shelves

- Steps:
- 1) Attach Curved extrusions [13,14].
 - 2) Attach horizontal extrusion [12] to [13/14].
 - 3) Connect [12/13/14] to vertical extrusion as shown.
 - 4) Attach hostess shelves [15] between backwall vertical and curved vertical [13].
 - 5) Screw in top plate to curved extrusion [13] as shown.
 - 6) Connect counter top as shown in detail below.
 - 7) Attach monitor mounts as shown in detail.

Note: Curved extrusion [13] and horizontal [14] stay assembled for shipping and packing.

Counter Top Attachment

Insert screws located on underside of counter into holes on flange plate and secure with wing nuts.

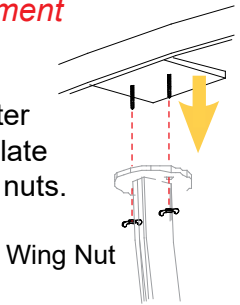

Wing Nut

Item	Qty.	Description
1-2	1ea.	38" Vertical Extrusion w/ cut
3-4	1ea.	38" Vertical Extrusion
5	1	18.9" Horizontal Extrusion
6-7	1ea.	18" Horizontal Extrusion
8	1	20" Horizontal Extrusion
9	1	22.5" Curved Extrusion
10-11	1ea.	18" Horizontal Extrusion
12	1	20" Horizontal Extrusion

- Steps:
- 1) Attach lower horizontals [5,6,7,8] between verticals [1,2,3,4] as shown.
 - 2) Attach door using pins as shown in *Door Attachment* detail.
 - 3) Insert infills as shown.
 - 4) Insert [9,10,11,12] between verticals.
 - 5) Place counter on top.

