



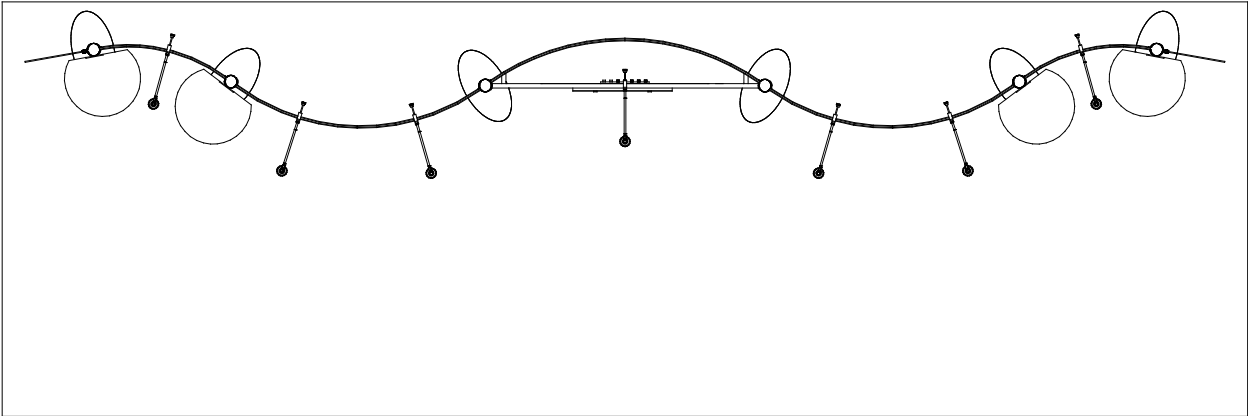

10'


Plan View 30'

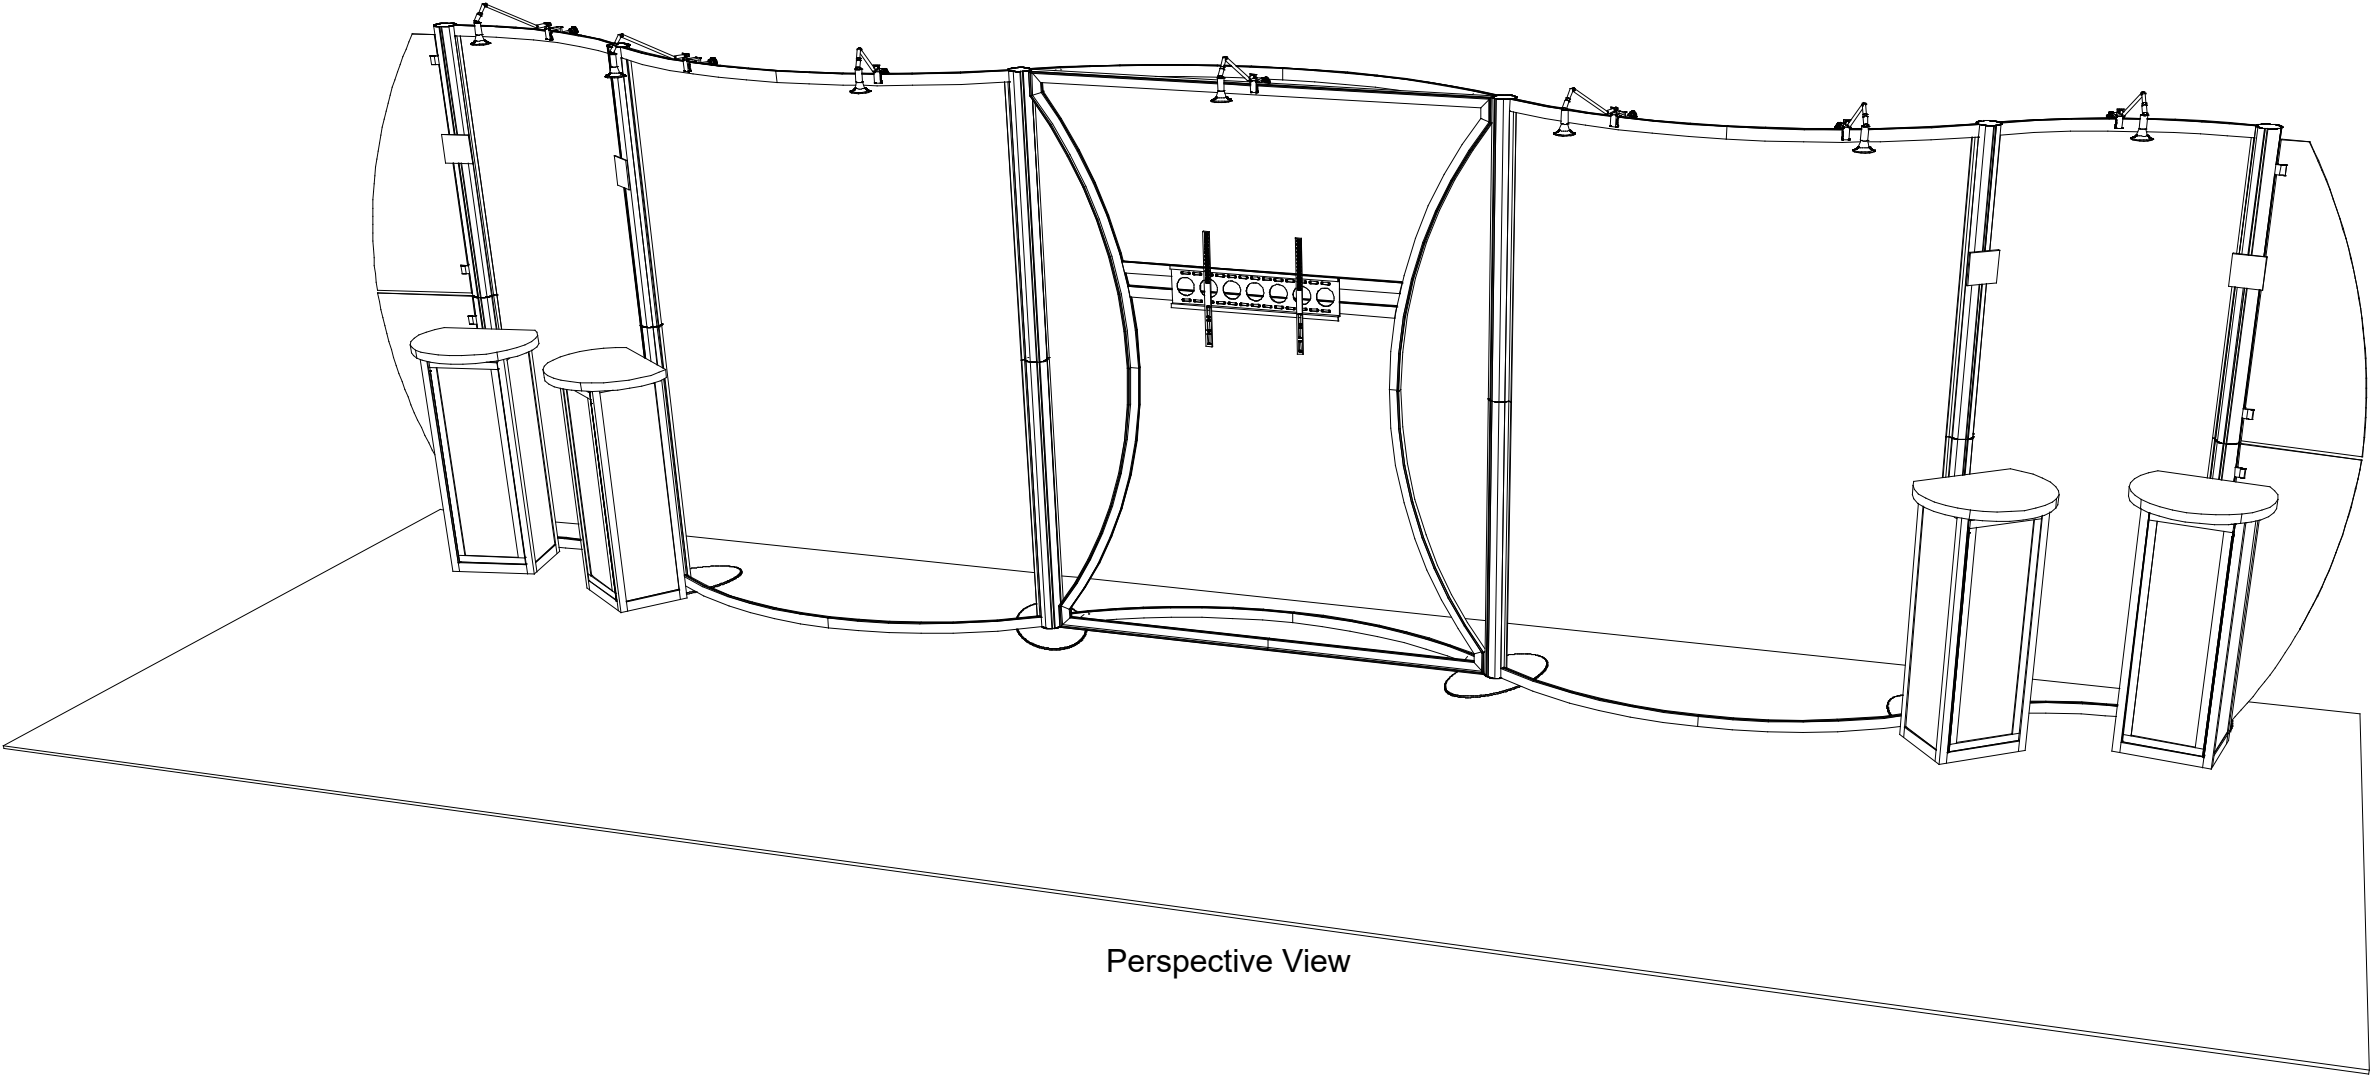

Perspective View

SETUP INSTRUCTIONS

 = 1 sq foot

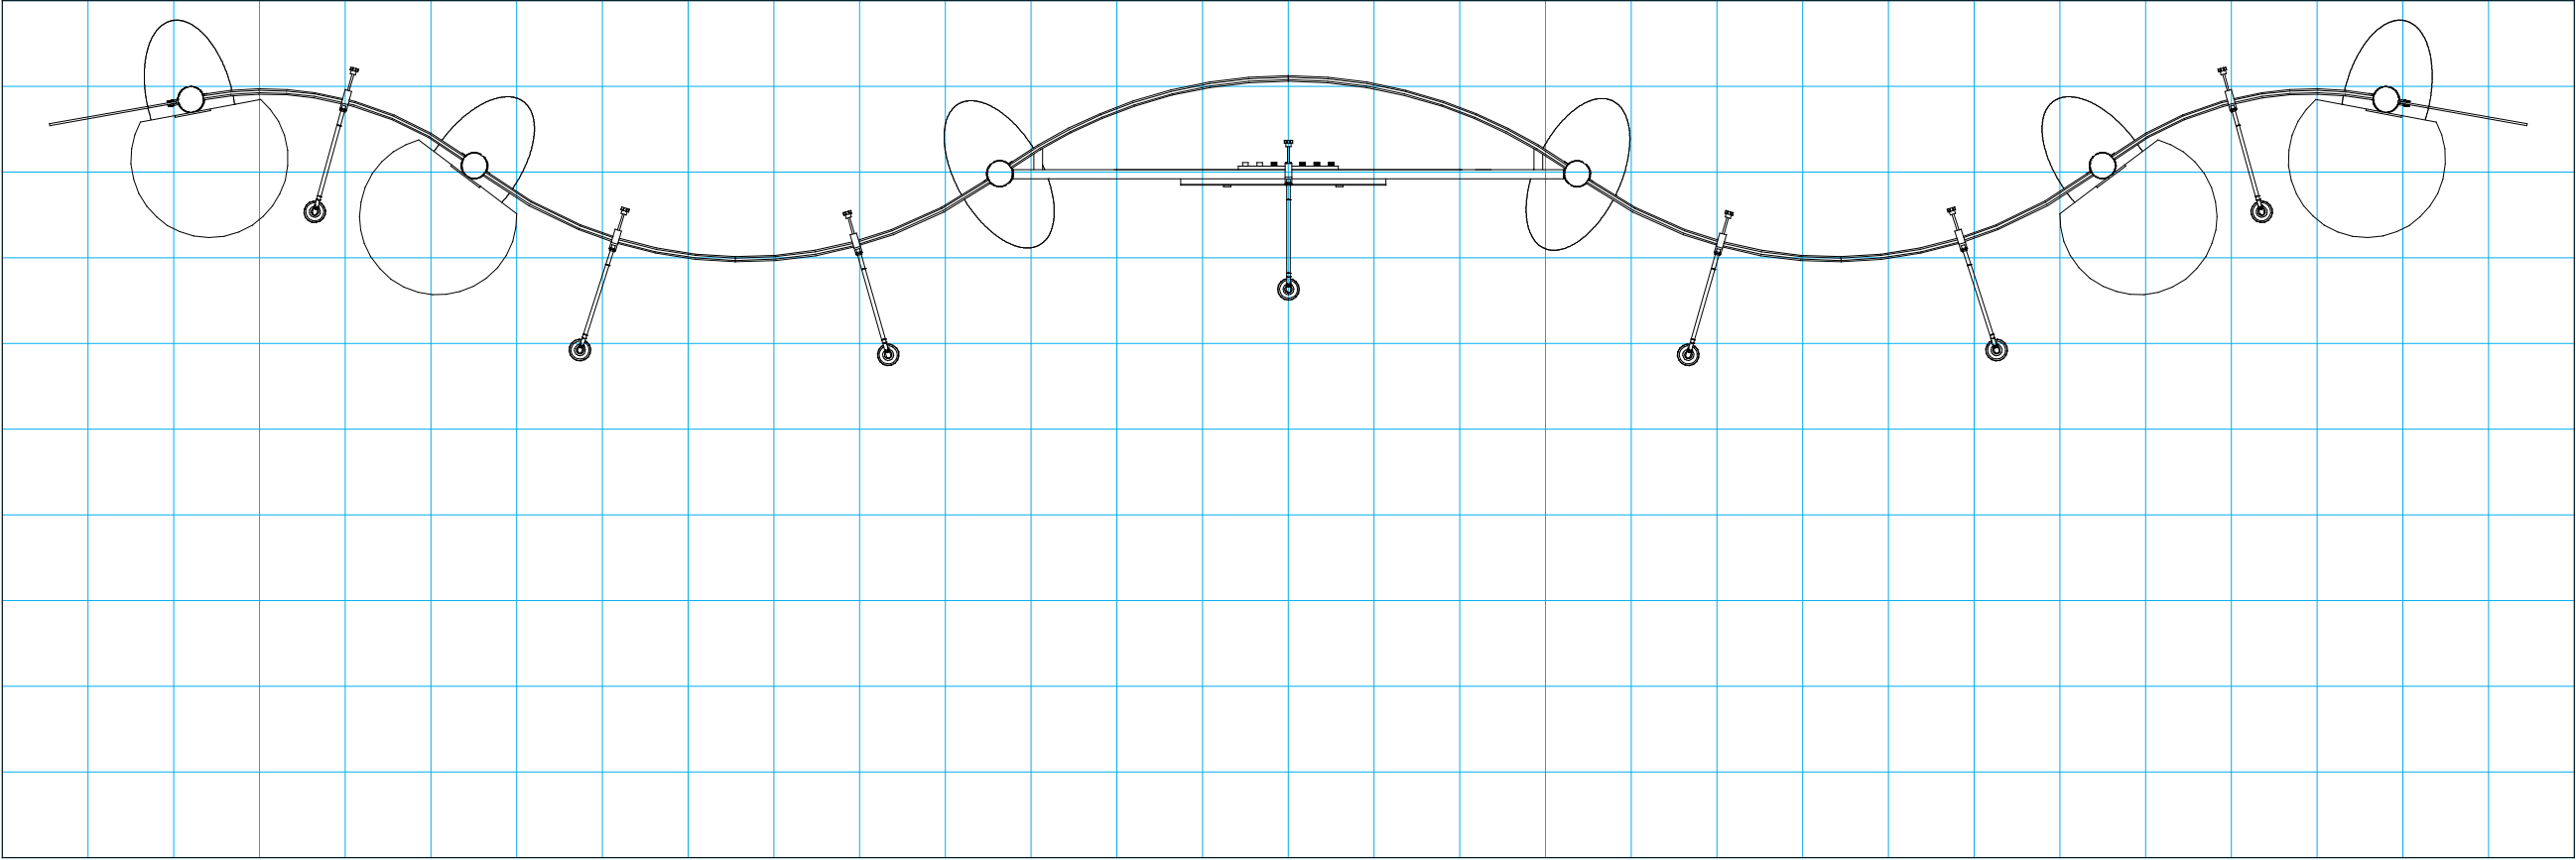

General Setup Instructions


- Read entire setup instruction manual prior to unpacking parts and pieces.
- The setup instructions are created specifically for this configuration.
- Setup instructions are laid out sequentially in steps, including exploded views with detailed explanation for assembly.

Cleaning & Packing


- For Cleaning Metal, Plex, & Laminate Parts:
Use a **MILD NON-ABRASIVE** cleanser and soft cloth/paper towel to clean all surfaces.
- Keep exhibit components away from heat and prolonged sun exposure.
Heat and UV exposure will warp and fade components.
- Retain all provided Packing Materials.
All provided packing materials are for ease of repacking & component protection.

Disassembly


- For loss prevention, tighten all set screws and locks during disassembly.

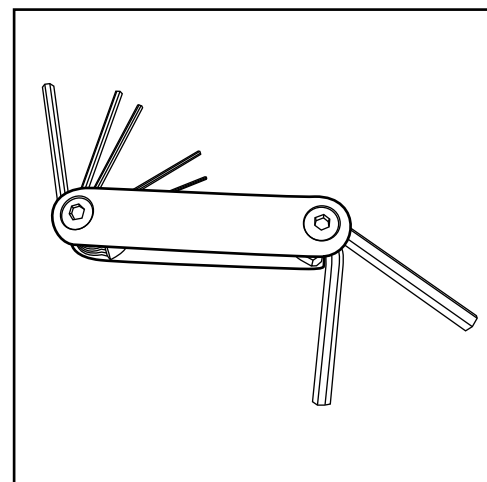


Hex Tool - Essential for Assembly

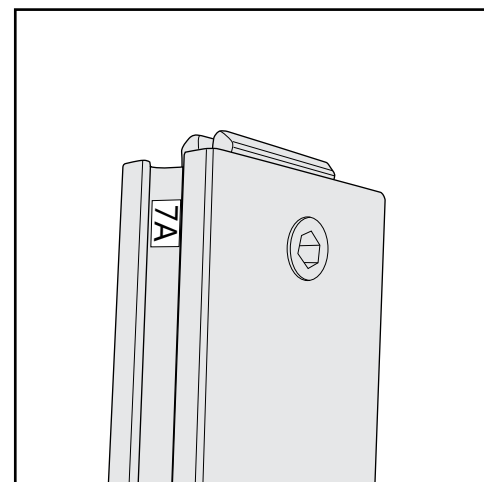


Part Identification - Numbering

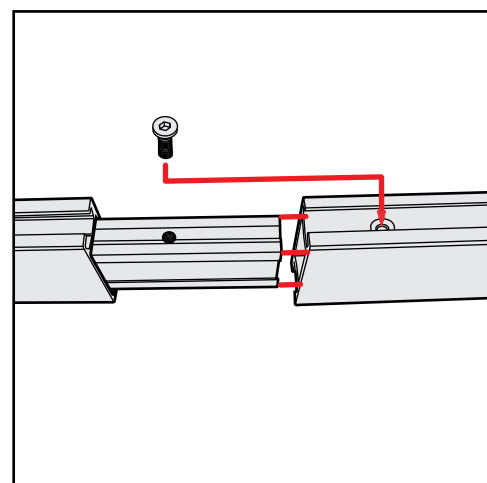


Spline Connection

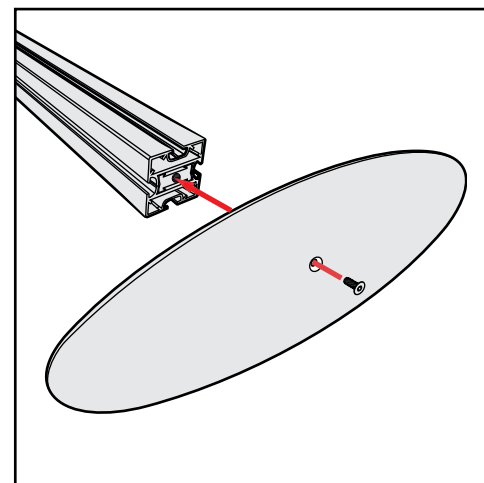

Base Plate & Extrusion Connection

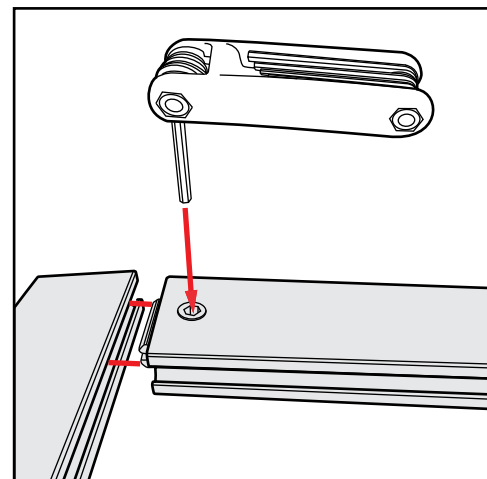

Extrusion & Lock Connection

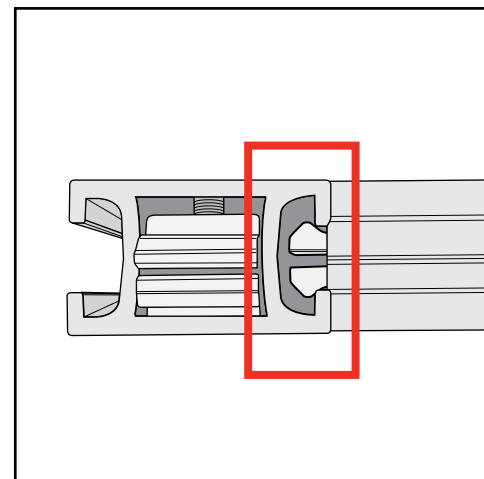

Engaged Lock



WARNING



DO NOT USE POWER TOOLS



LADDERS OR LIFTS
MAY BE REQUIRED




ALL CONNECTIONS MUST
BE TIGHTLY SECURED


SEG Graphic Installation *in 3 Steps*

The Perfect Fit


STEP 1: Attach Corners

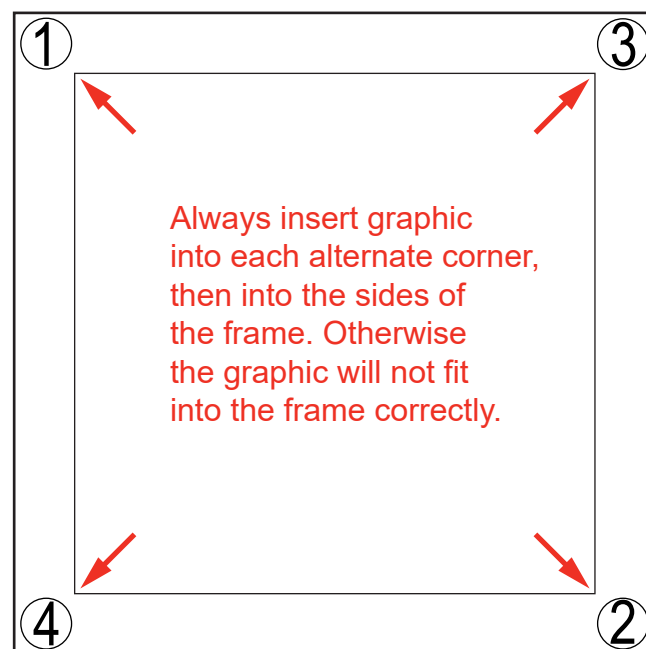

STEP 2: Attach Middle

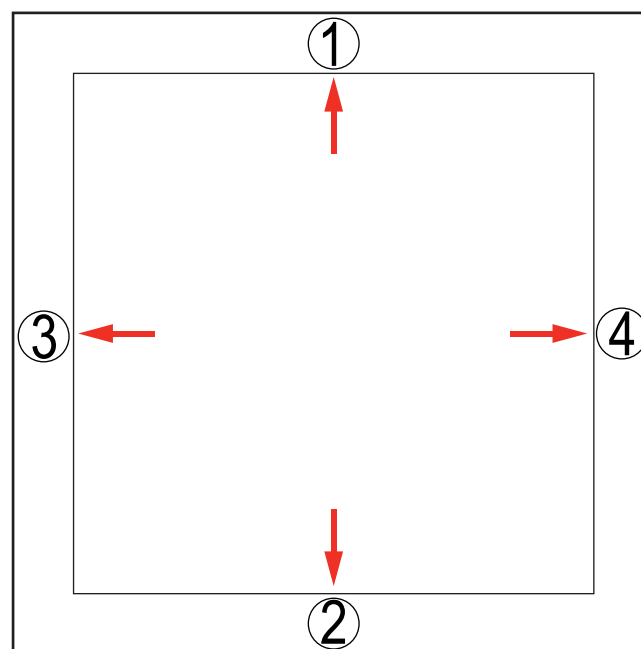

STEP 3: Attach Sides

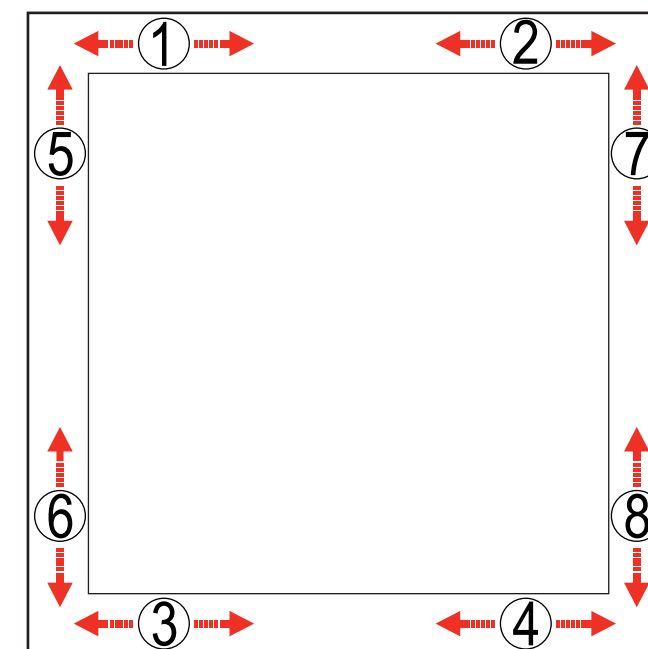

Insert narrow side of silicone welt into the channel at corner 1, with fabric to the outside.

Repeat for opposite corner 2, then corner 3, then corner 4.

Once corners are attached, press the middle of edge 1 into the channel. Then press middle of edge 2 into the channel on opposite side.

Repeat with edge 3 & 4.

Once the middle of sides are attached, fully press the silicone welt into the channel, between center and corner at location 1. Repeat the process between center and corner at location 2.

Do the same for welt on opposite side, at locations 3 & 4. Then repeat for locations 5 & 6 and 7 & 8.

Once the welt is fully inserted on all sides, smooth out edges as needed for a perfect fit.



To remove the graphic from the frame, locate the fabric **pull tab**. Gently pull on the tab to remove the graphic.

Install video:






© 2026

Order #XXXXX Crate Packing

CRATE PACKING


Item	Qty.	Description
12a/12b	1/1	38.5”w Horizontal Extrusion
13a/13b	1/1	38.5”w Horizontal Extrusion
14a/14b	1/1	44.6” Curved Extrusion
15a/15b	1/1	44.6” Curved Extrusion
16	1	48”w Horizontal Extrusion
17	1	46.2573”w Horizontal Extrusion

- Steps:
- 1) Attach vertical extrusions [14a,14b] & [15a,15b] together.
 - 2) Connect horizontal extrusions [12a,12b] & [13a,13b] together.
 - 3) Connect horizontals between assembled verticals.

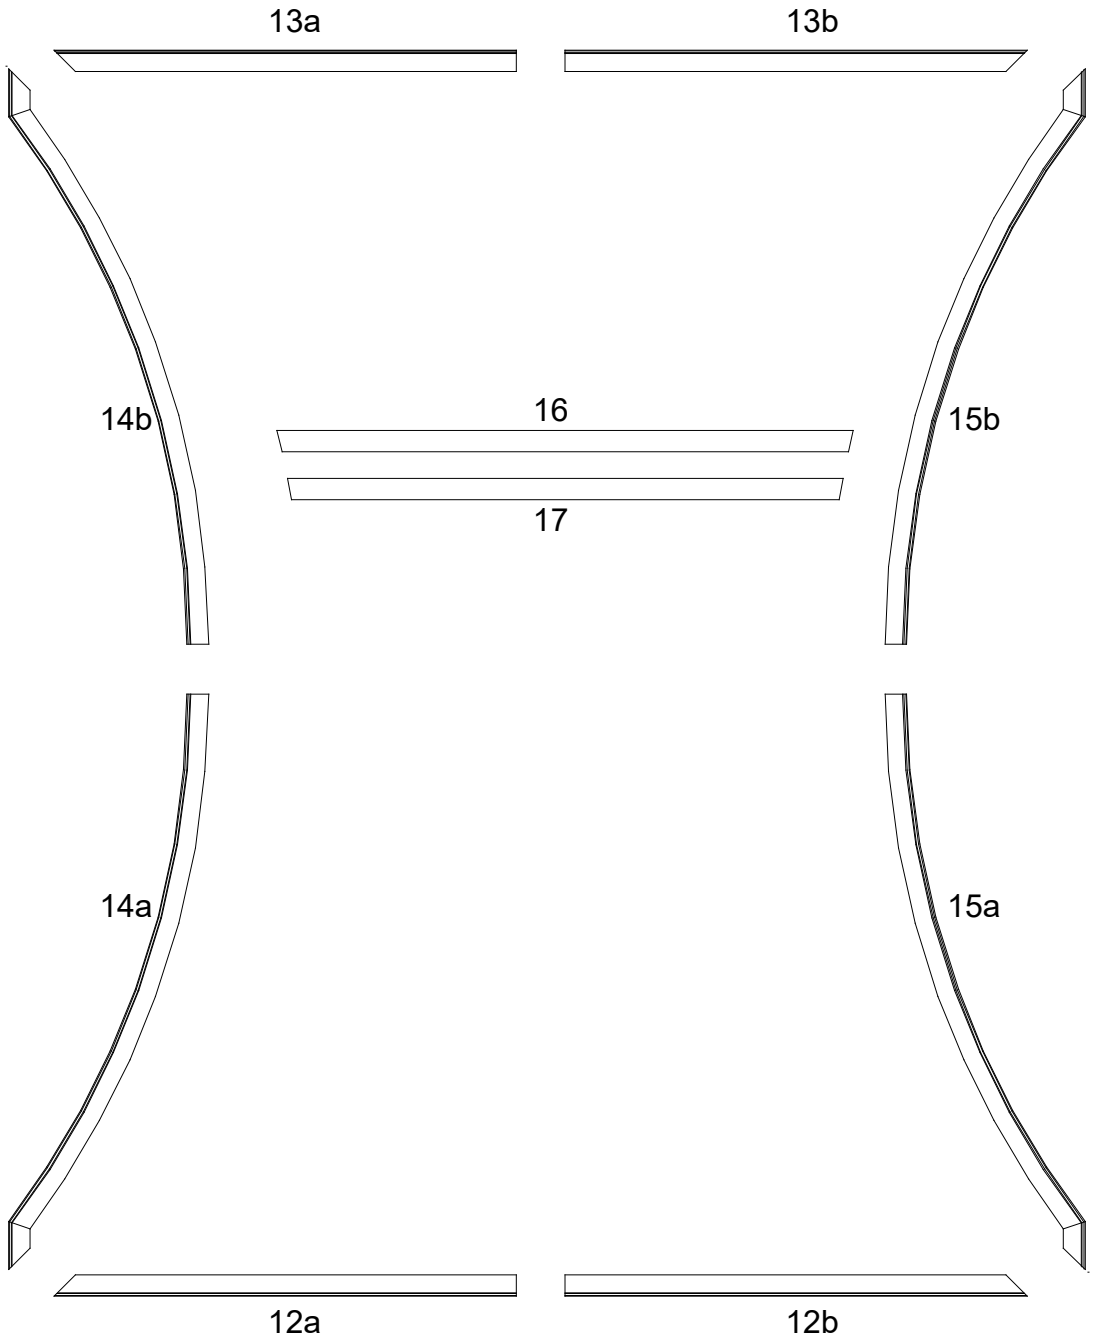

Wing Attachment

Slide A10 Clamp into groove of square extrusion.

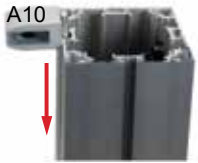


When desired location is found, tighten set screw to secure.




Tighten black plastic set screw to secure Wing in place.



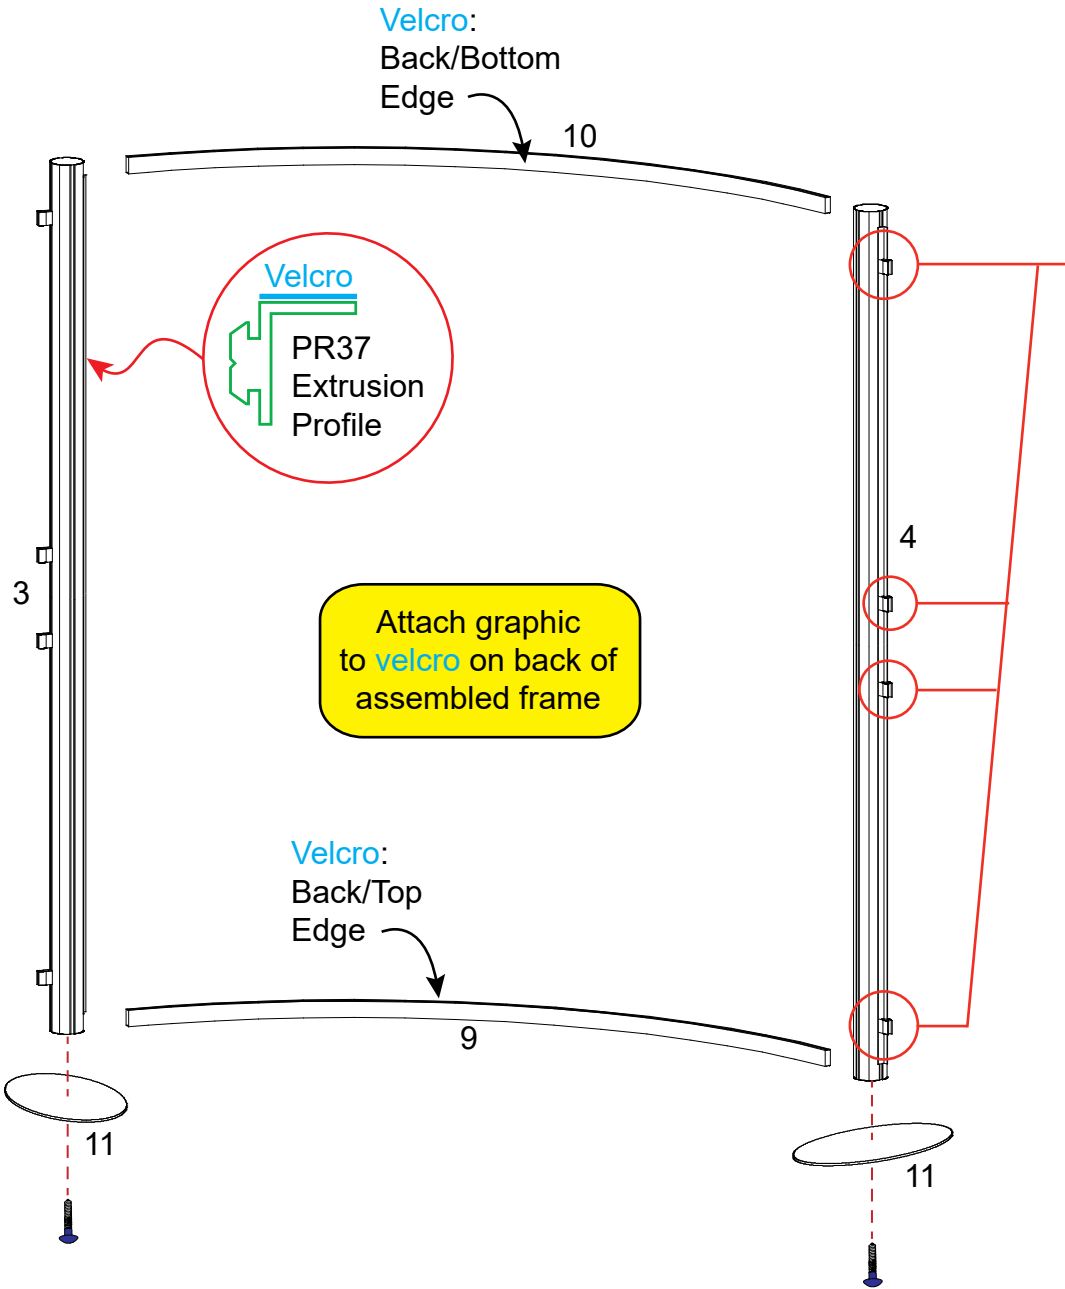



Remove A10's for 10x20 & 10x30 Configuration

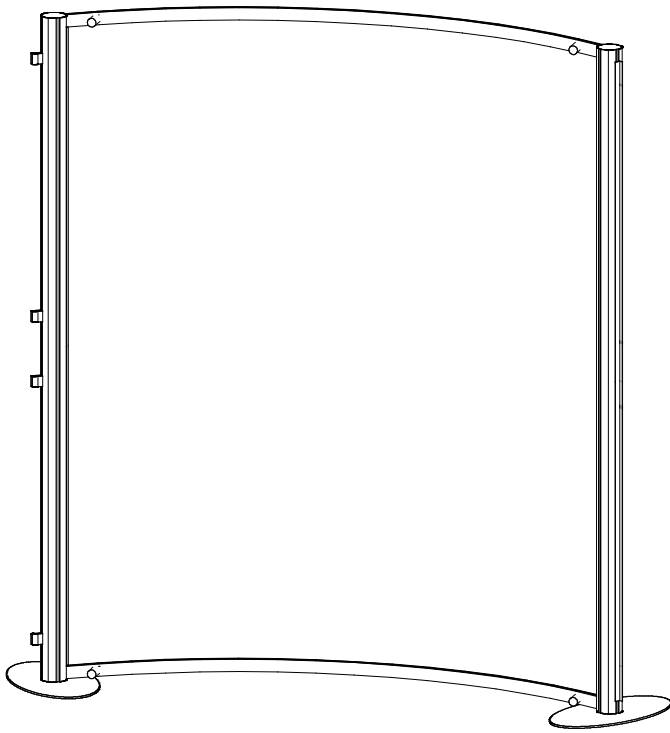

When assembled

Item	Qty.	Description
3	1	48"h Round Vertical Extrusion
4	1	48"h Round Vertical Extrusion
9	1	41.7083" Curved Horizontal Extrusion
10	1	41.7083" Curved Horizontal Extrusion
11	1	Oval Base Plate



- Steps:
- 1) Attach base plates to lower verticals using bolts as shown.
 - 2) Attach upper verticals to lower verticals.
 - 3) Connect curved horizontals together.
 - 4) Attach curved horizontal assemblies between verticals.

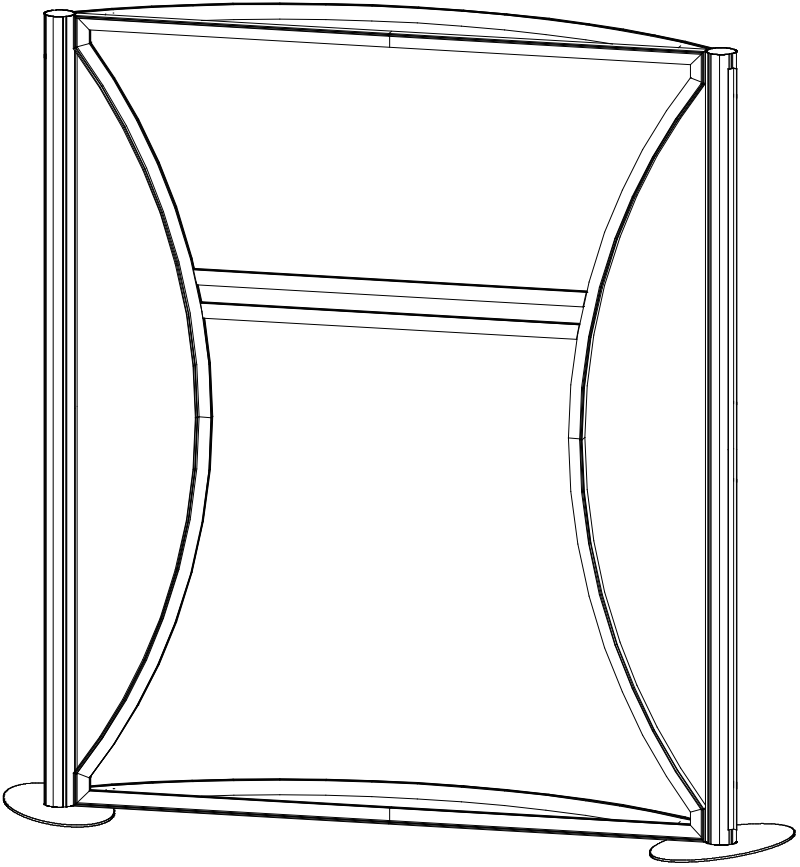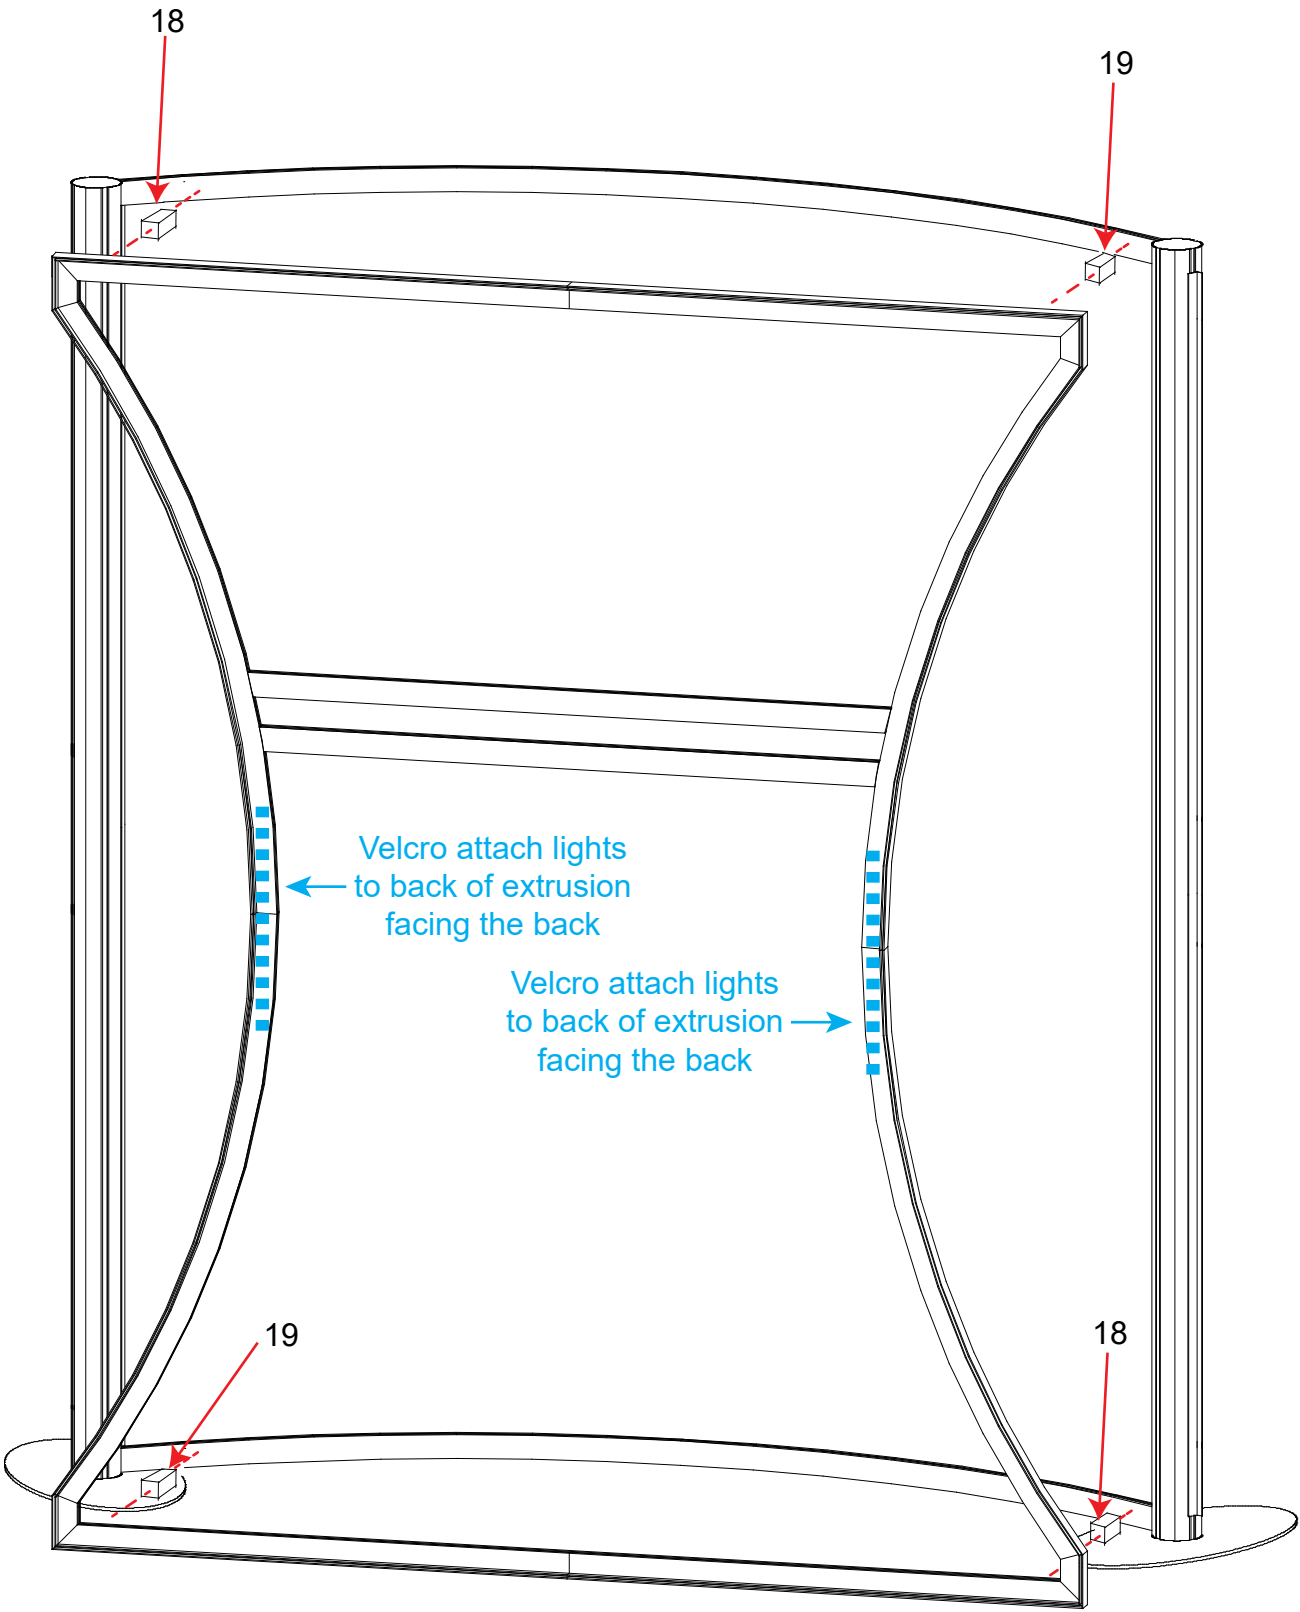

When assembled

- Steps:
- 1) Attach assembled SEG frame to backwall using connectors [F] as show.
 - 2) Velcro attach lights to back of SEG frame.


Steps:
1) See details and attachments this sheet.

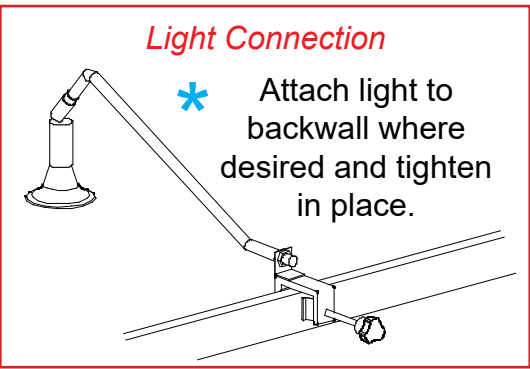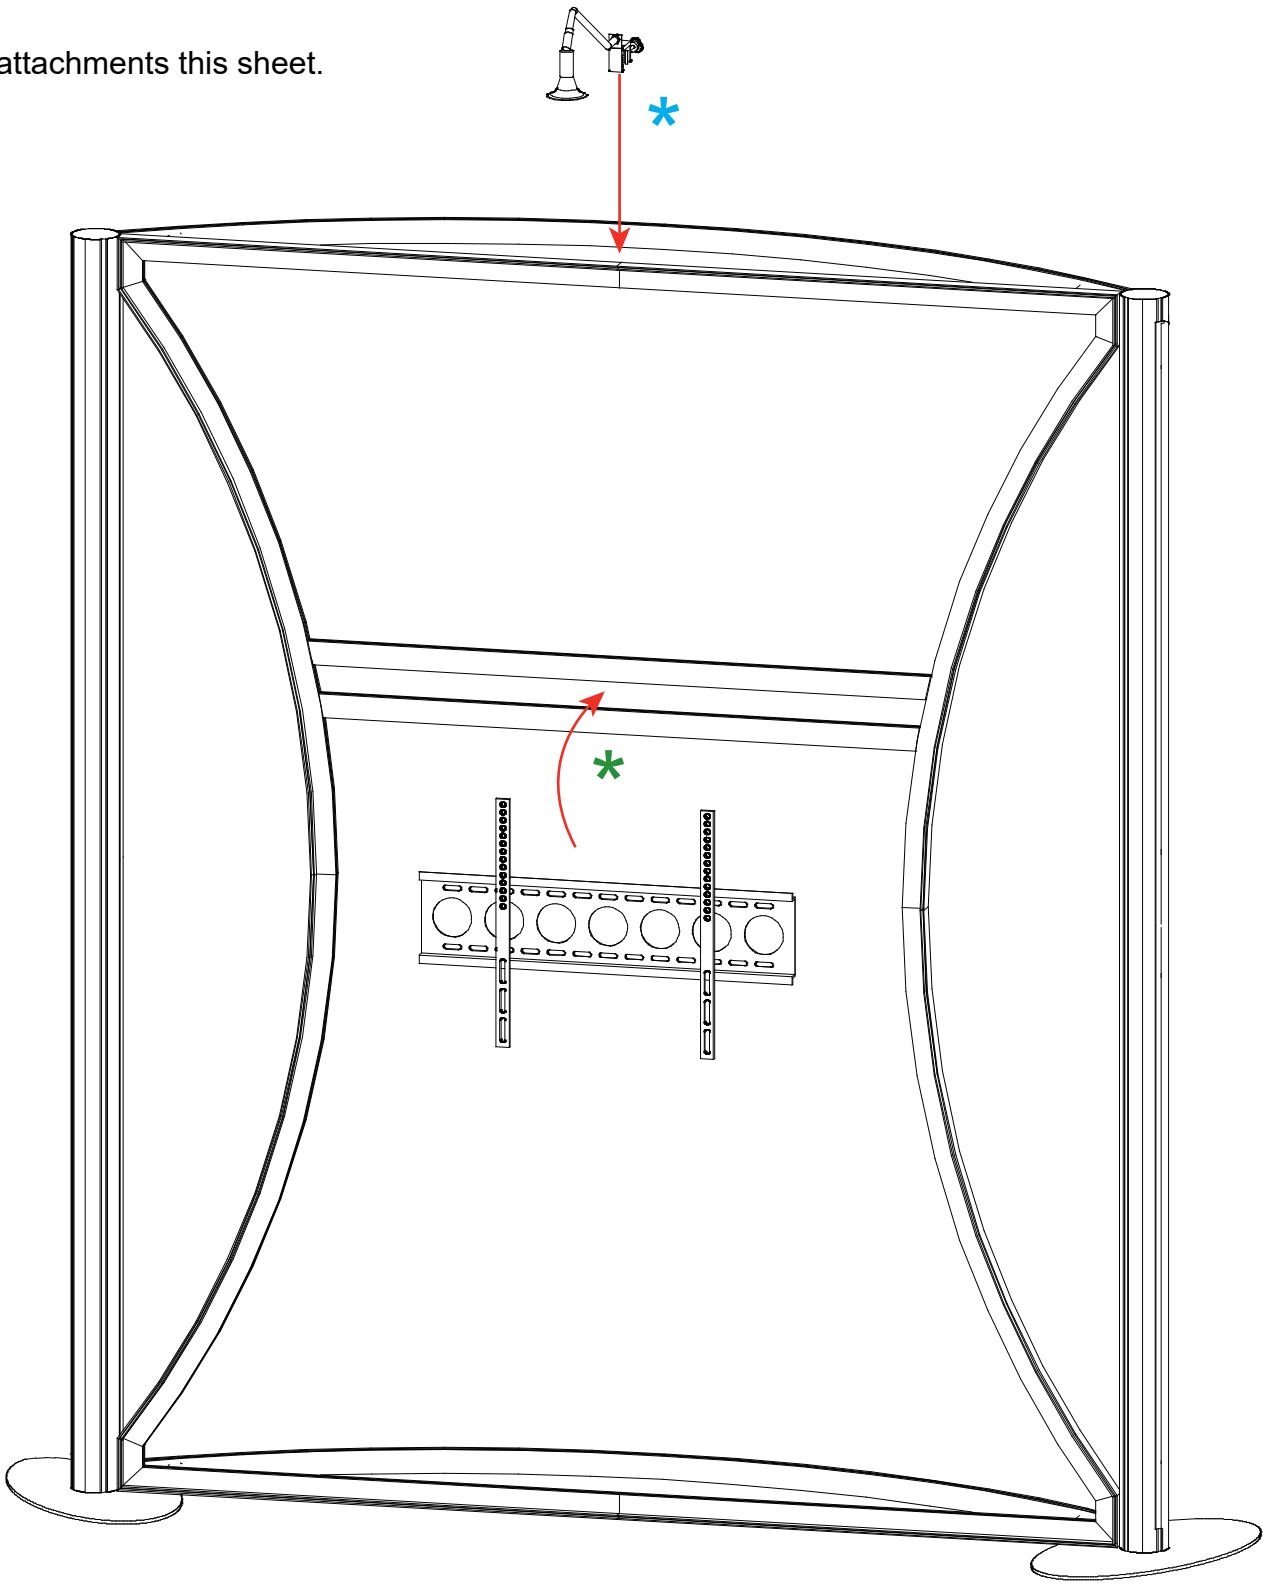


Apply graphics before monitor mount attachment.

*** Monitor Mount Attachment**

Attach wall plate to horizontal bars using standoff bolts and wing nuts

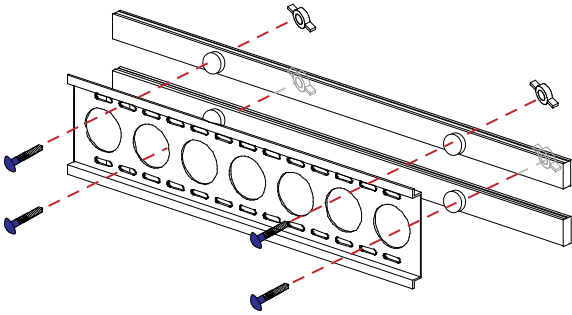


Hook monitor brackets over top of wall plate, then secure with safety bolts to bottom of monitor brackets.

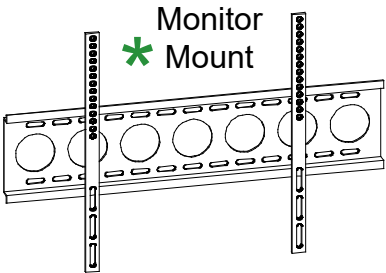




Item	Qty.	Description
1	1	96"h Round Vertical Extrusion
2	1	96"h Round Vertical Extrusion
3	1	96"h Round Vertical Extrusion
7	2	38"w Curved Horizontal Extrusion
8	2	76"w Curved Horizontal Extrusion
11	2	Oval Base Plate

- Steps:
- 1) Attach base plates to lower verticals using bolts as shown.
 - 2) Attach upper verticals to lower verticals.
 - 3) Connect curved horizontals together.
 - 4) Attach curved horizontal assemblies between verticals.


Light Connection

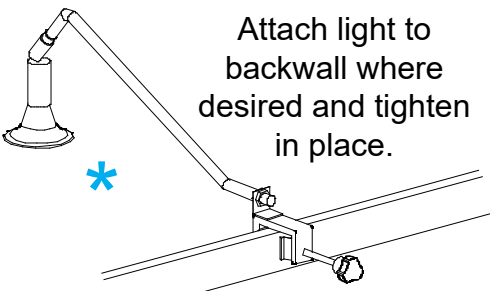


Monitor Mount Attachment

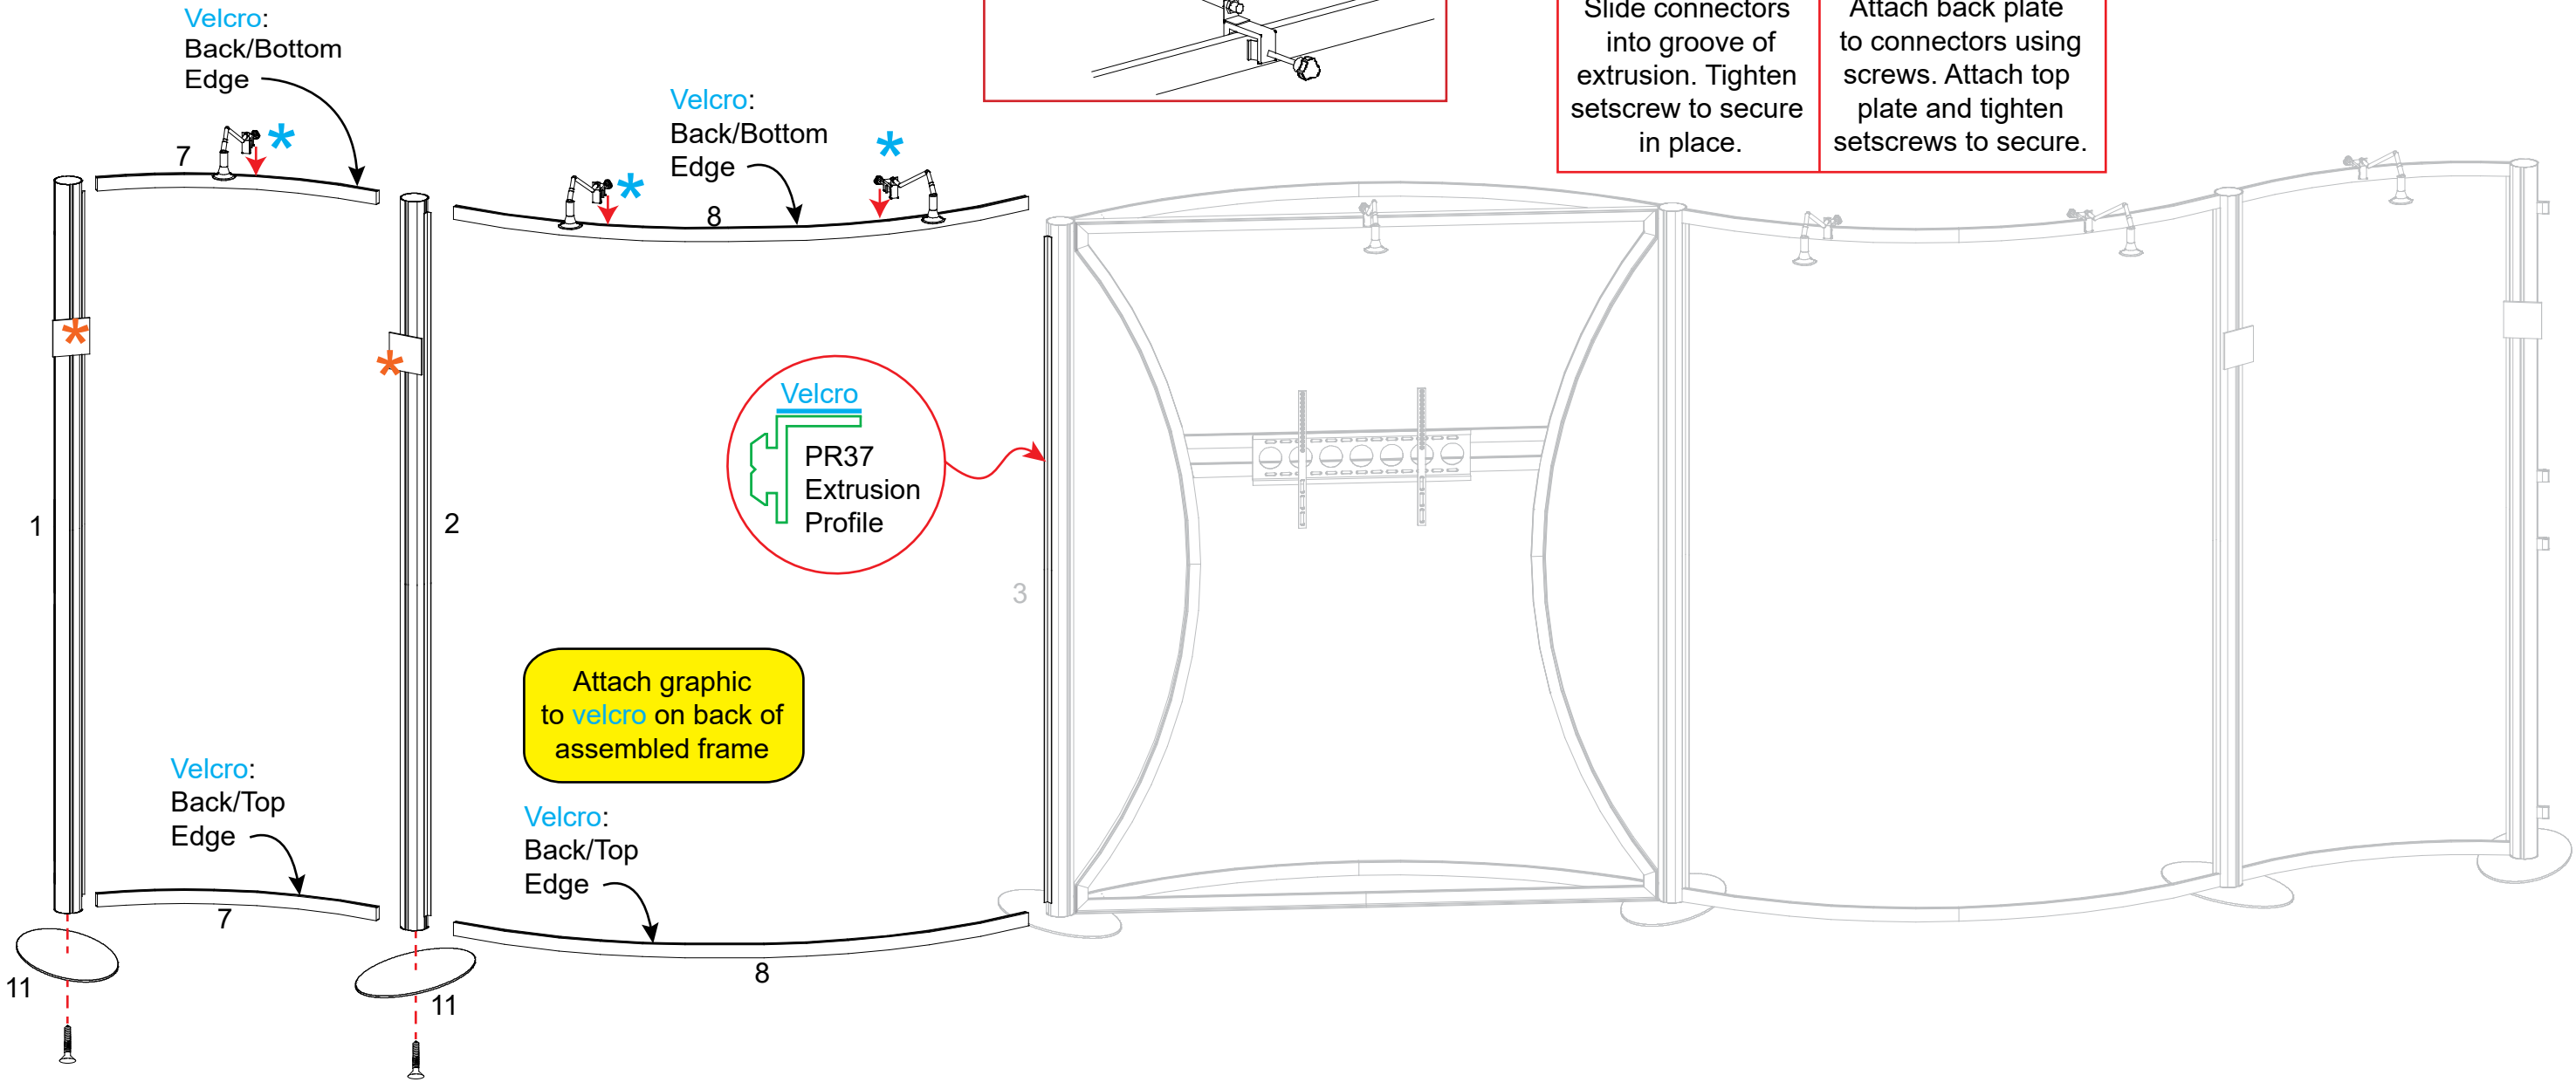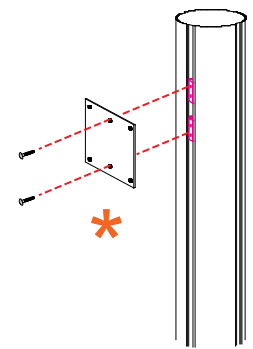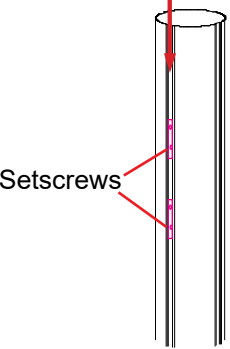






- Steps:
- 1) Attach base plates to lower verticals using bolts as shown.
 - 2) Attach upper verticals to lower verticals.
 - 3) Connect curved horizontals together.
 - 4) Attach curved horizontal assemblies between verticals.

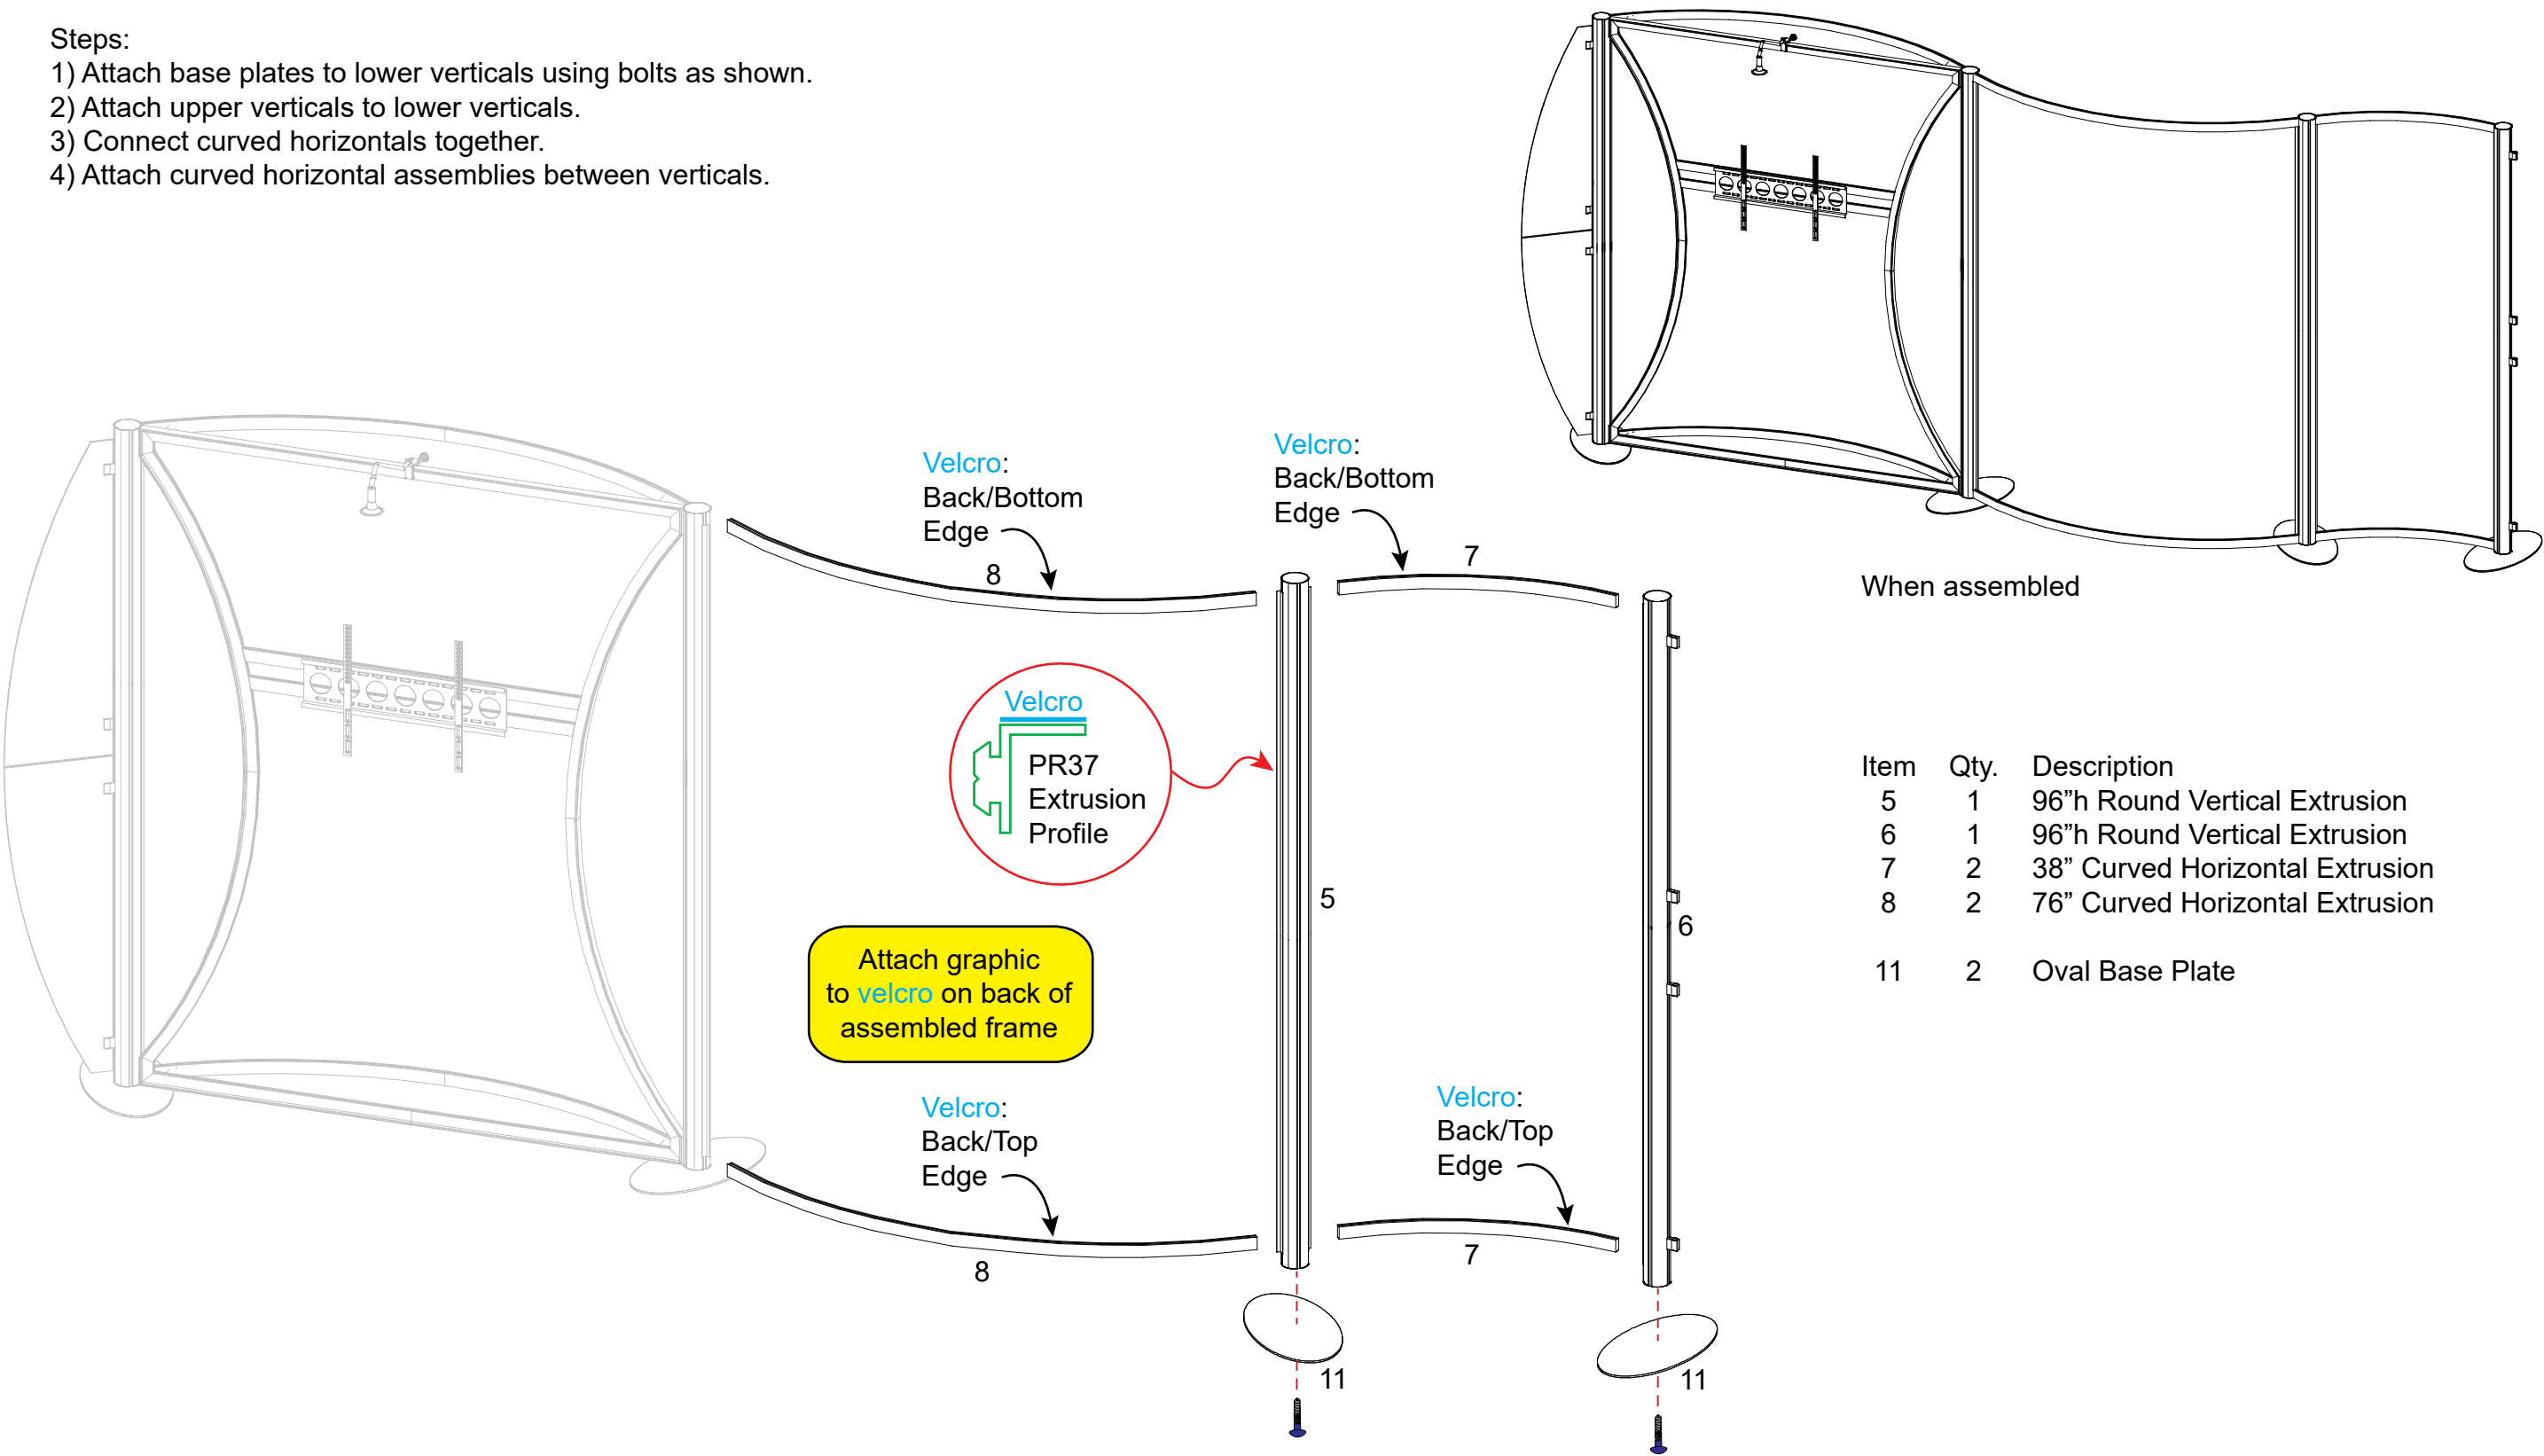

Item	Qty.	Description	Item	Qty.	Description
20	2	42" h Corner Vertical Extrusion	20	2	42" h Corner Vertical Extrusion
21	2	42" h Corner Vertical Extrusion	21	2	42" h Corner Vertical Extrusion
22	2	42" h Corner Vertical Extrusion	22	2	42" h Corner Vertical Extrusion
23	2	42" h Corner Vertical Extrusion	23	2	42" h Corner Vertical Extrusion
24	8	13" w Horizontal Extrusion	24	8	13" w Horizontal Extrusion
25	8	10" w Horizontal Extrusion	25	8	10" w Horizontal Extrusion

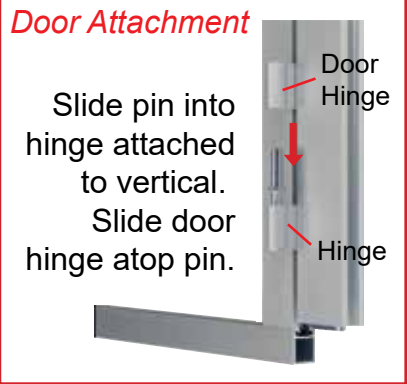

- Steps:
- 1) Attach lower horizontals between verticals.
 - 2) Attach door to vertical [23]. Refer to *Door Attachment* detail.
 - 3) Slide infills between verticals as shown.
 - 4) Attach upper horizontals between verticals.
 - 5) Velcro attach shelf supports to inside of assembled pedestal.
 - 6) Place shelf atop shelf supports.
 - 7) Place counter atop assembled pedestal.

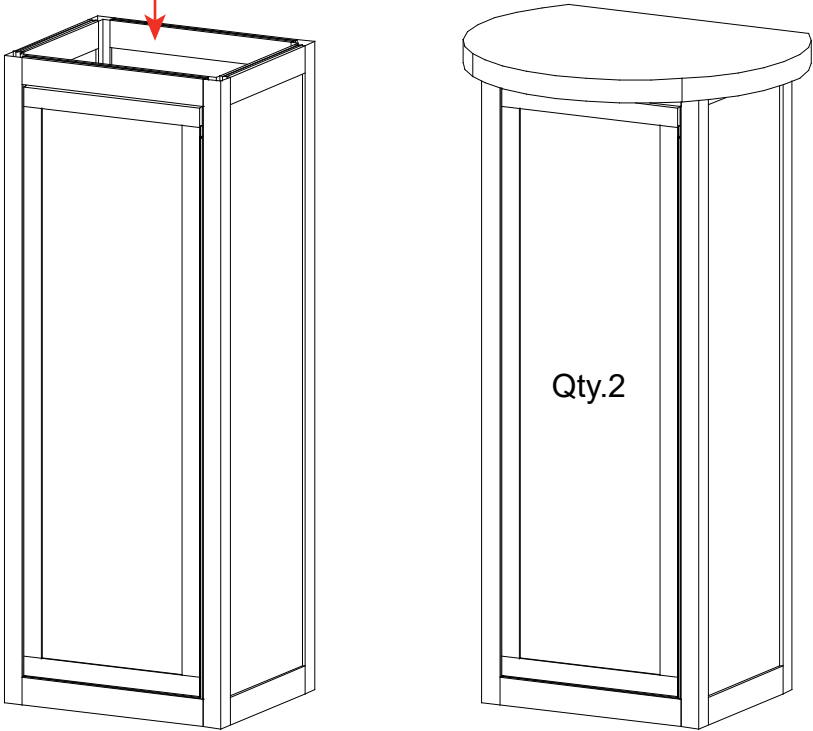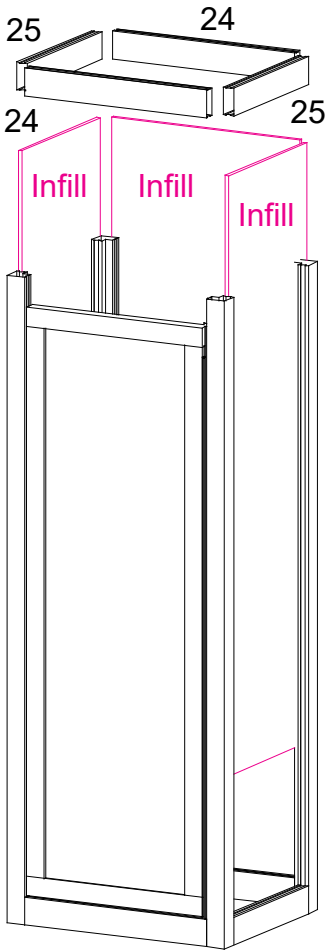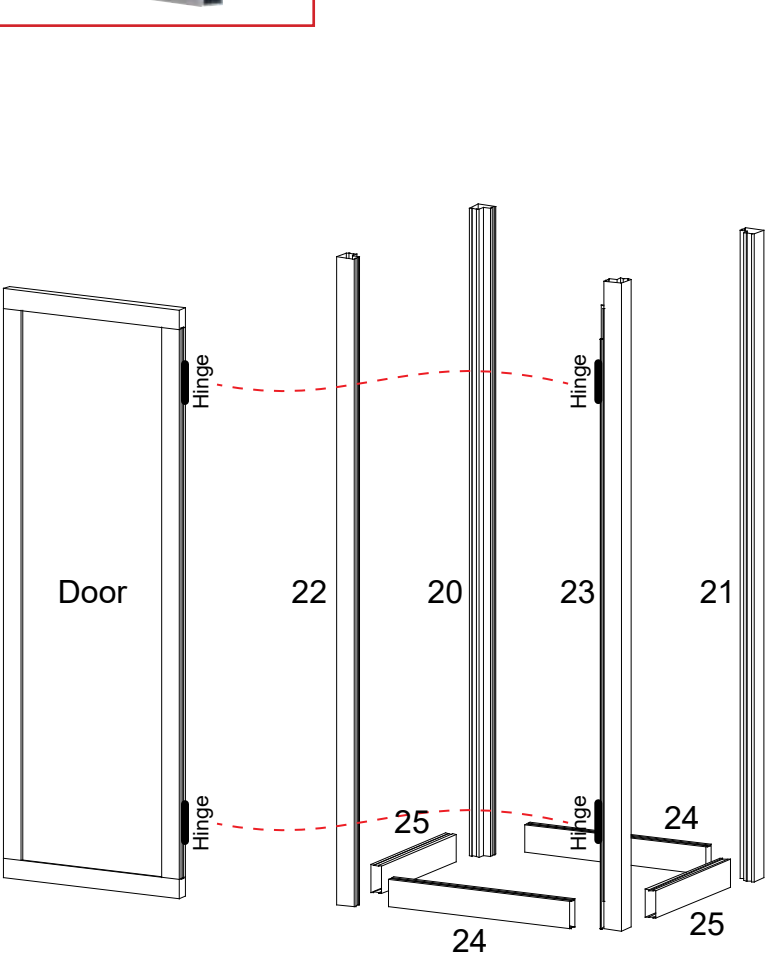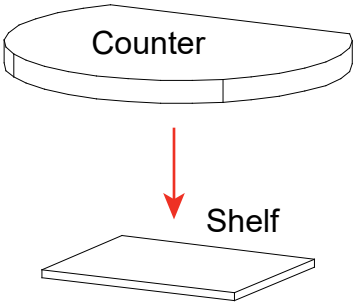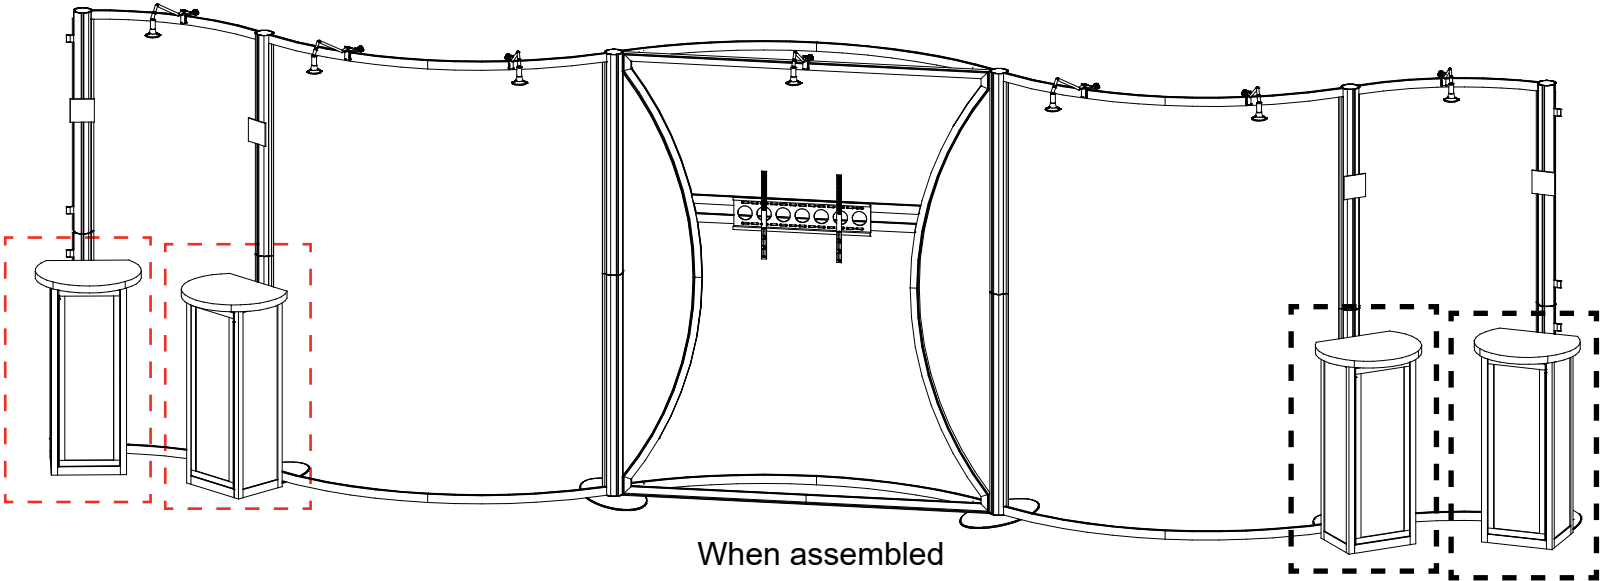

Steps:
1) Attach graphics with A10 clips as shwon in *Example of A10 Clamp Attachment* detail.

