



Item	Qty.	Description
1	1	Base Plate
2	1	42.639"h Z31 Curved Vertical Extrusion
3	1	4"w Z32 Horizontal Extrusion
4	1	44.417"h RSG510 Round Vertical Extrusion
5	1	iPad Swivel Stop Mount
6	1	iPad Clamshell Case.

Steps:

- 1) Connect vertical extrusions [2] & [4] together using horizontal extrusion [3].
- 2) Attach base plate using provided bolts. See detail.
- 3) Connect iPad Swivel Stop Mount to vertical extrusion [4].
- 4) Attach iPad Clamshell using provided hex nuts. See detail.
- 5) Connect Graphic Infill.

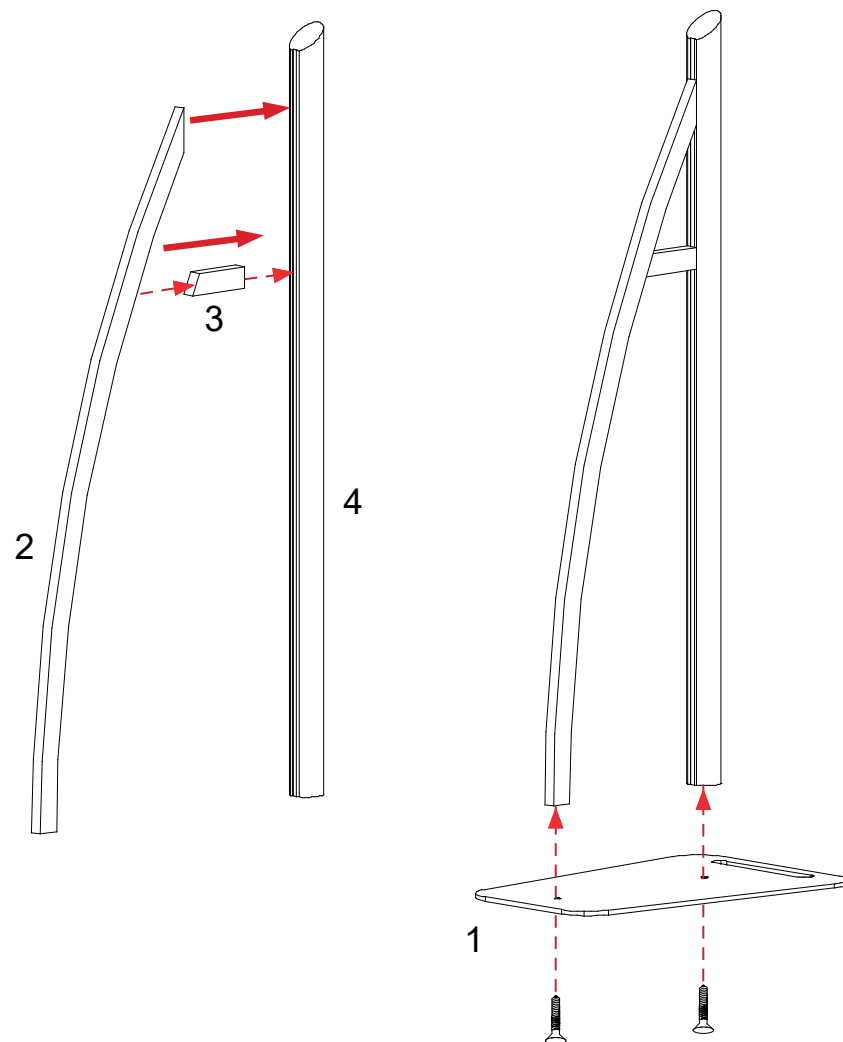


* Swivel iPad
Clamshell Attachment

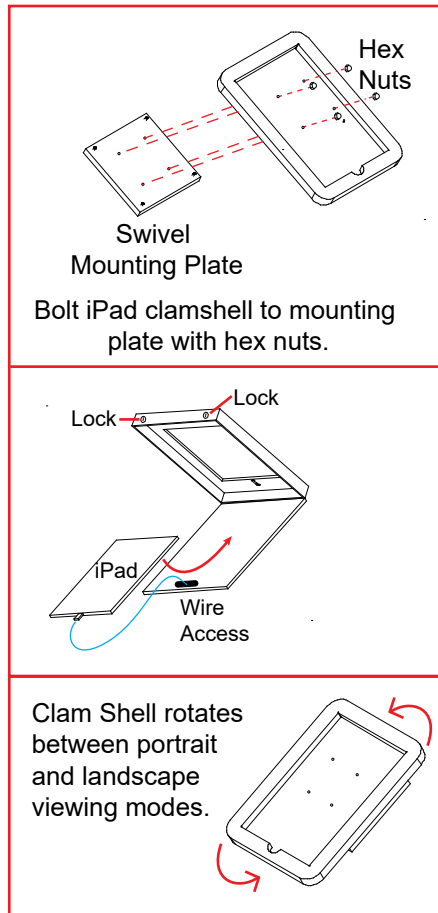

Wire Management for iPad



Feed iPad charging cord through holes from top to bottom of post as shown.

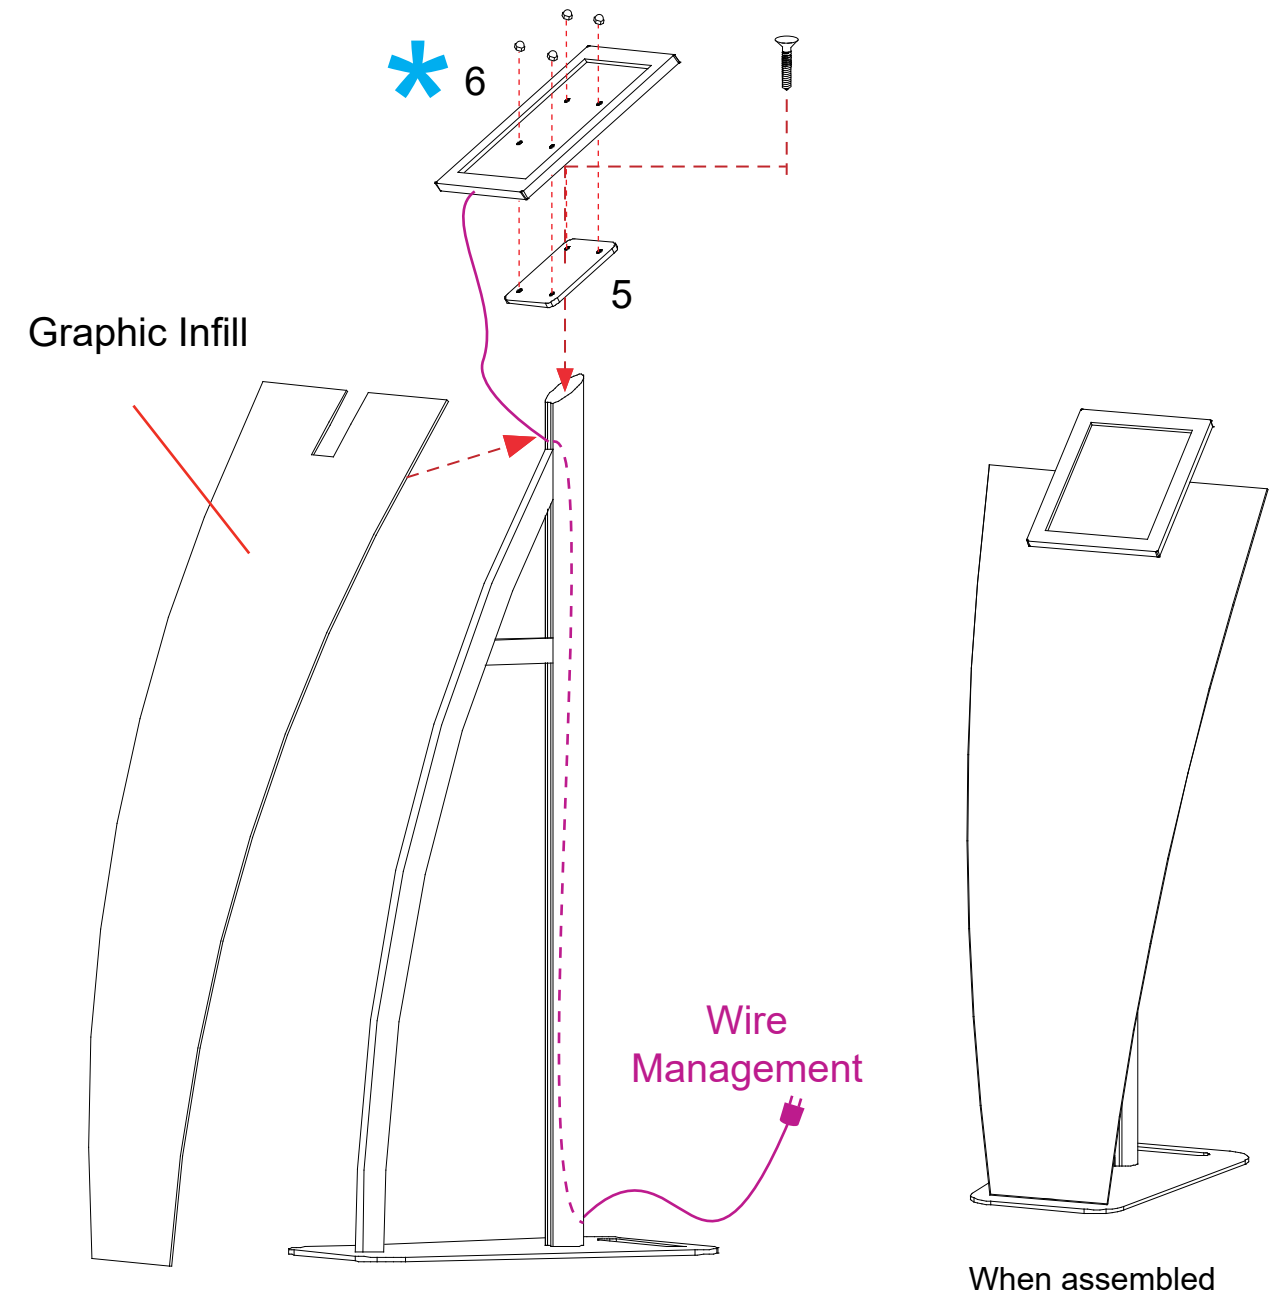

SETUP INSTRUCTIONS

General Setup Instructions


- Read entire setup instruction manual prior to unpacking parts and pieces.
- The setup instructions are created specifically for this configuration.
- Setup instructions are laid out sequentially in steps, including exploded views with detailed explanation for assembly.

Cleaning & Packing


- For Cleaning Metal, Plex, & Laminate Parts: Use a **MILD NON-ABRASIVE** cleanser and soft cloth/paper towel to clean all surfaces.
- Keep exhibit components away from heat and prolonged sun exposure.
Heat and UV exposure will warp and fade components.
- Retain all provided Packing Materials. All provided packing materials are for ease of repacking & component protection.

Disassembly


- For loss prevention, tighten all set screws and locks during disassembly.

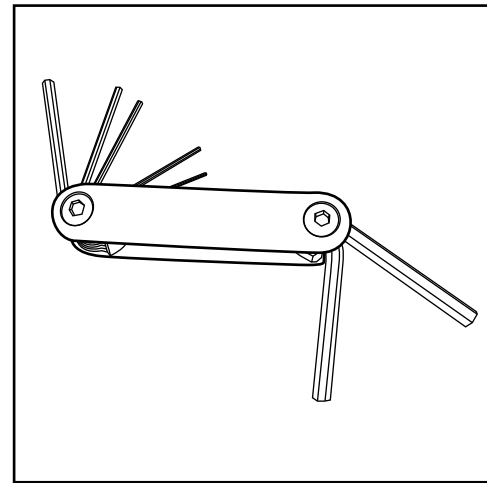


Hex Tool - Essential for Assembly

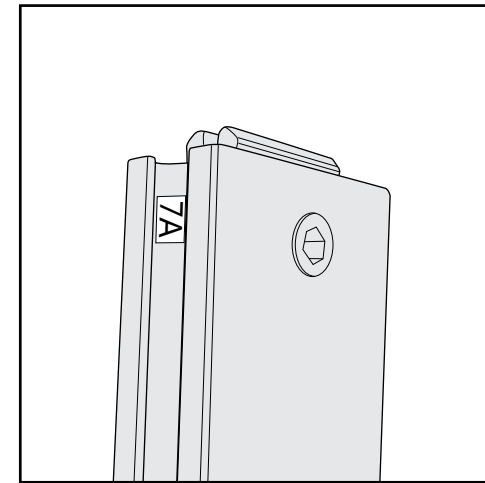


Part Identification - Numbering

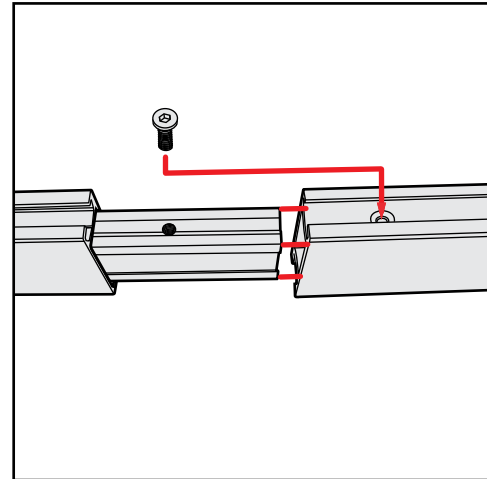


Spline Connection

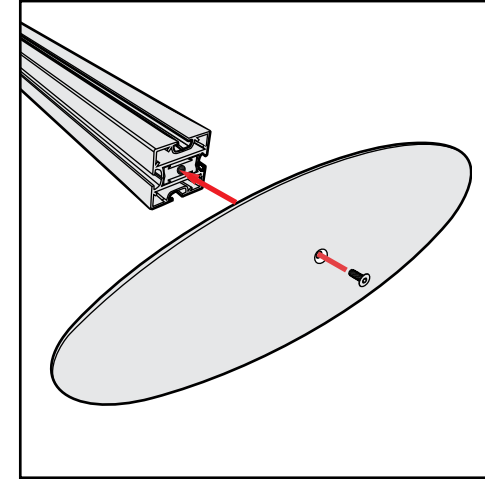

Base Plate & Extrusion Connection

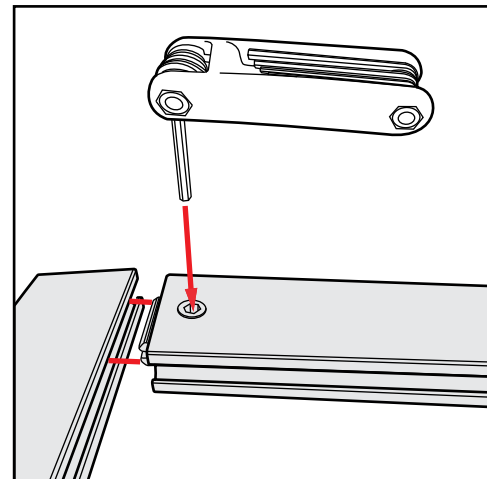

Extrusion & Lock Connection

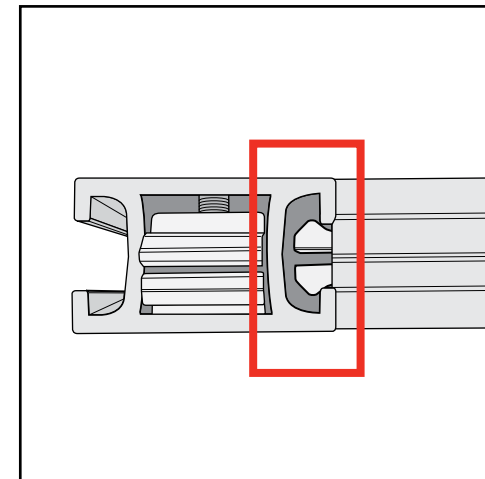


Engaged Lock



WARNING



DO NOT USE POWER TOOLS

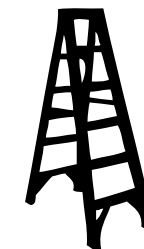

LADDERS OR LIFTS
MAY BE REQUIRED



ALL CONNECTIONS MUST
BE TIGHTLY SECURED