
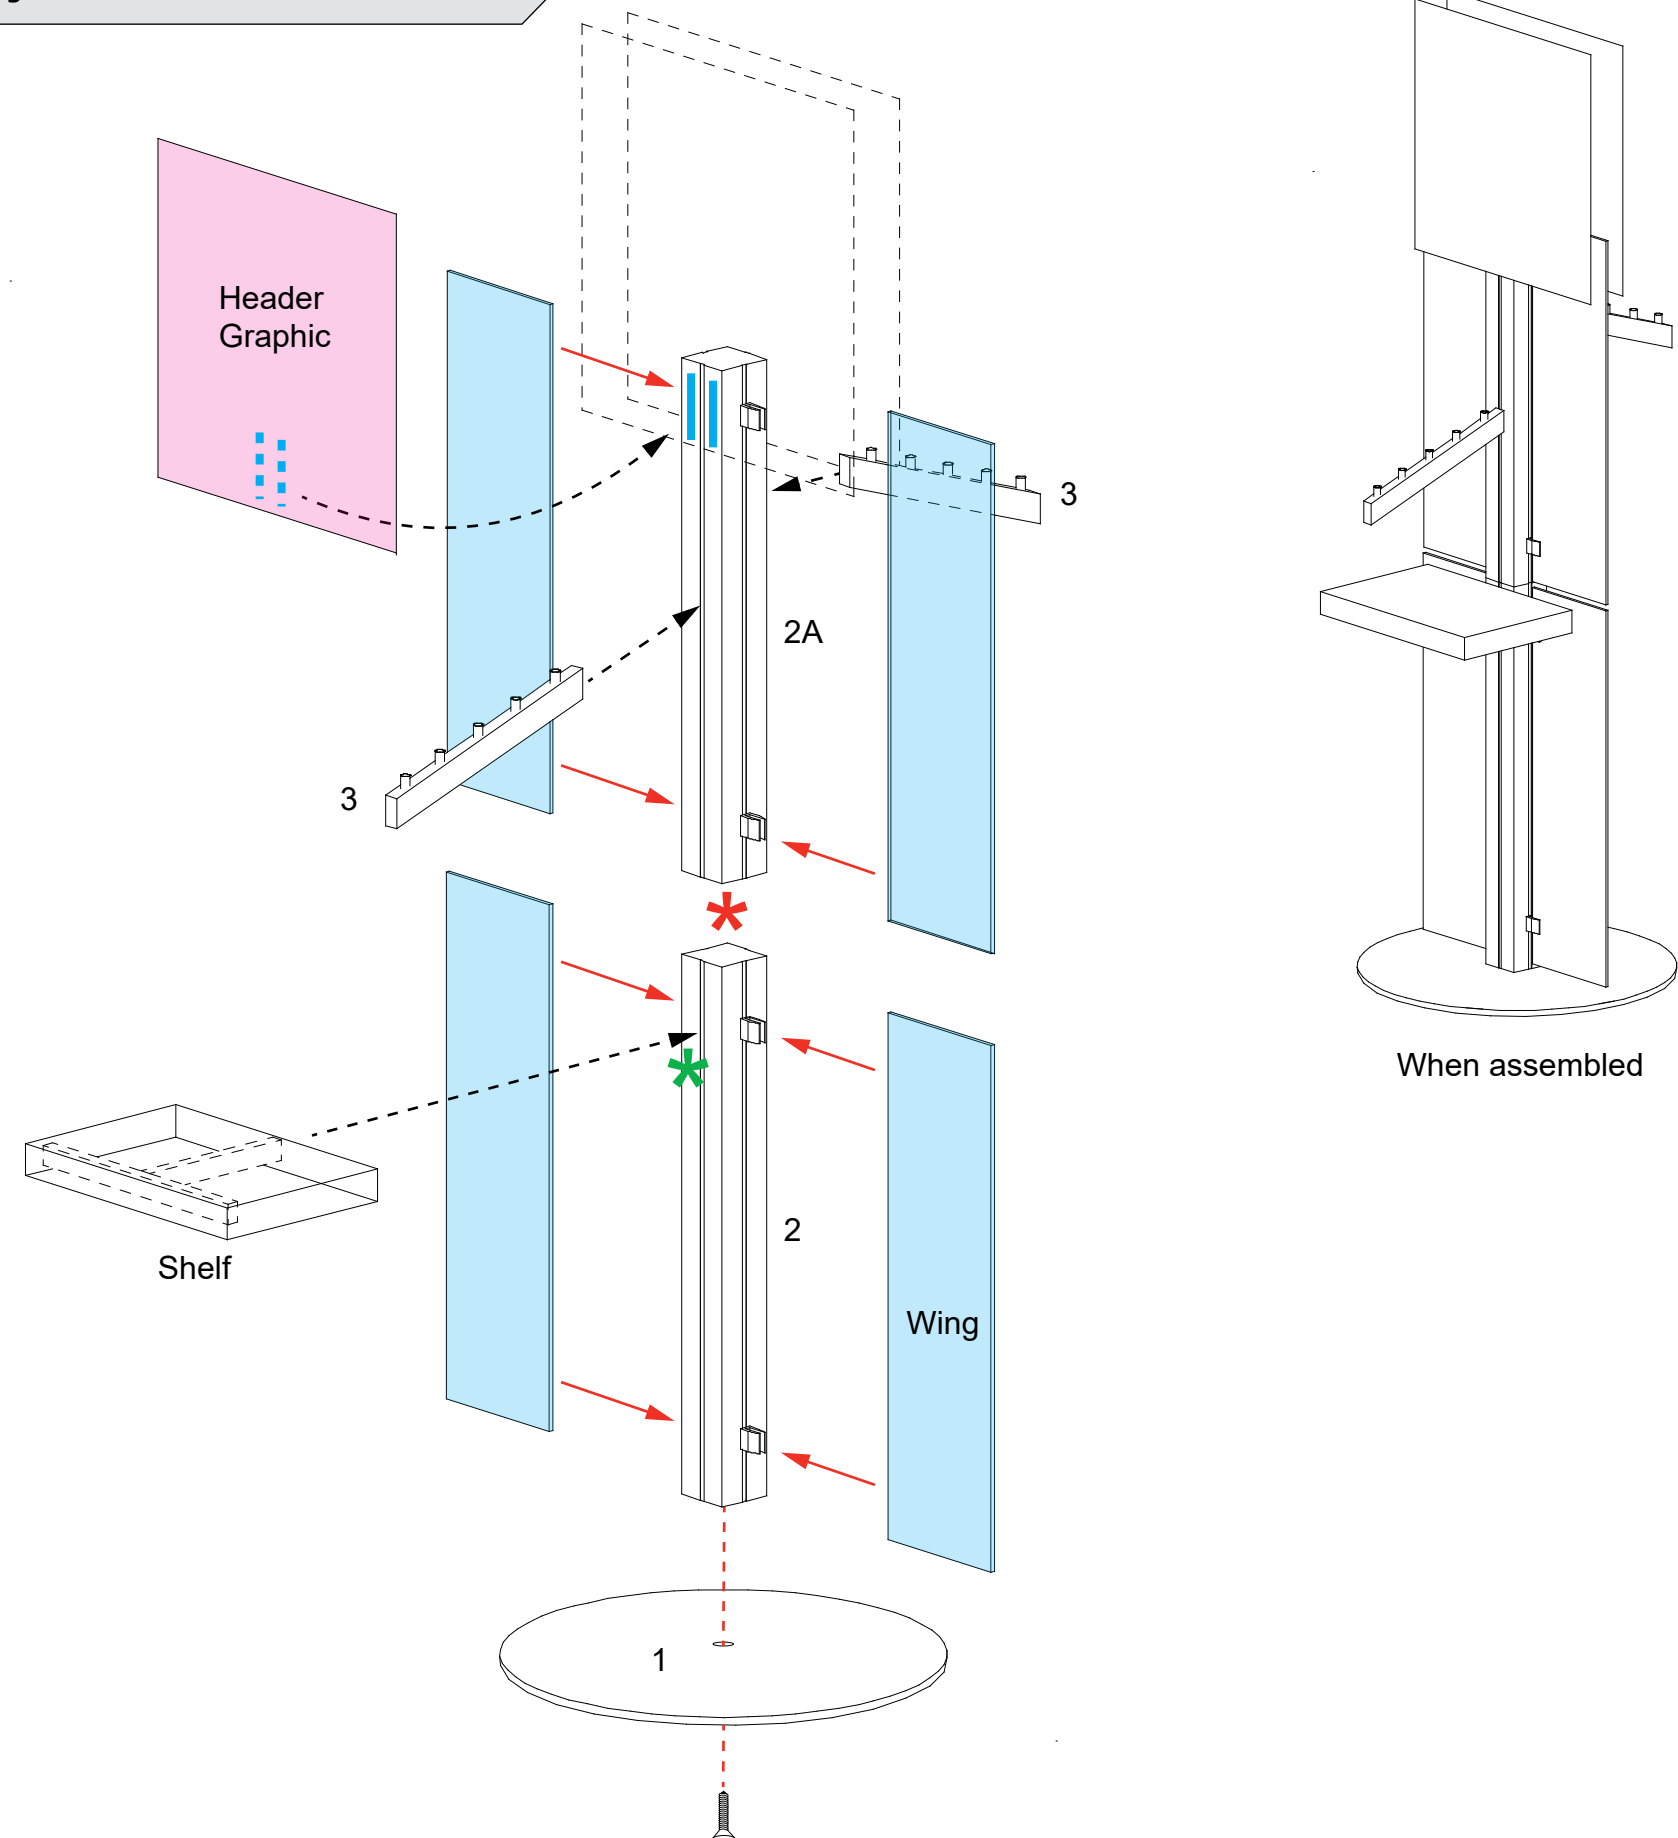
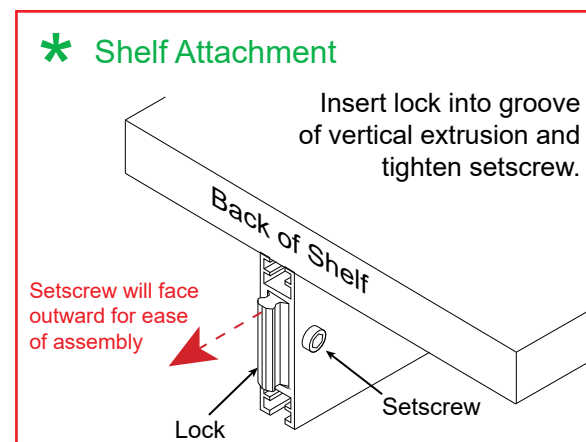
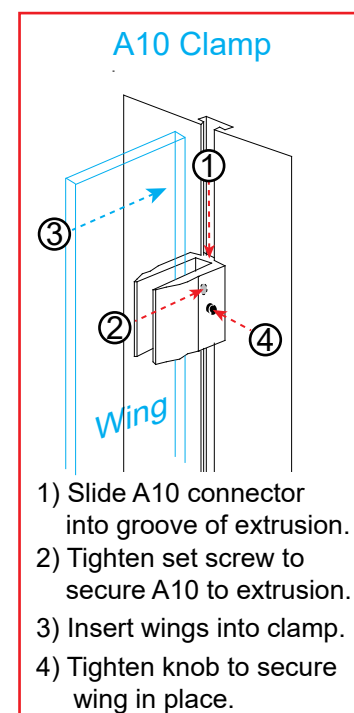


Item	Qty.	Description
1	1	Base Plate
2/2A	1/1	33" Q914 Vertical Extrusion
3	2	14" Z32 Waterfall Bracket

Steps:

- 1) Assemble verticals [2] & [2A]. See **Q914 Connector** detail.
- 2) Install Base Plate to vertical [2/2A].
- 3) Connect A10 Clamps to left and right sides of vertical [2/2A]; insert wings. See **A10 Clamp** detail.
- 4) Install Waterfall Brackets [3] to front and back of vertical [2/2A].
- 5) Attach Laptop Shelf to front of vertical [2/2A]. See **Shelf Attachment** detail.
- 6) Affix Header Graphics to front and back using Velcro, as shown.

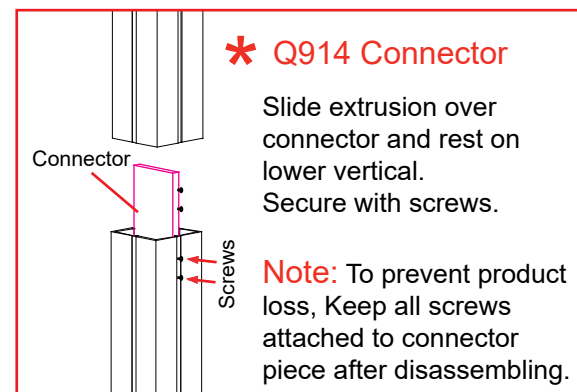

SETUP INSTRUCTIONS

General Setup Instructions


- Read entire setup instruction manual prior to unpacking parts and pieces.
- The setup instructions are created specifically for this configuration.
- Setup instructions are laid out sequentially in steps, including exploded views with detailed explanation for assembly.

Cleaning & Packing


- For Cleaning Metal, Plex, & Laminate Parts: Use a **MILD NON-ABRASIVE** cleanser and soft cloth/paper towel to clean all surfaces.
- Keep exhibit components away from heat and prolonged sun exposure.
Heat and UV exposure will warp and fade components.
- Retain all provided Packing Materials. All provided packing materials are for ease of repacking & component protection.

Disassembly


- For loss prevention, tighten all set screws and locks during disassembly.

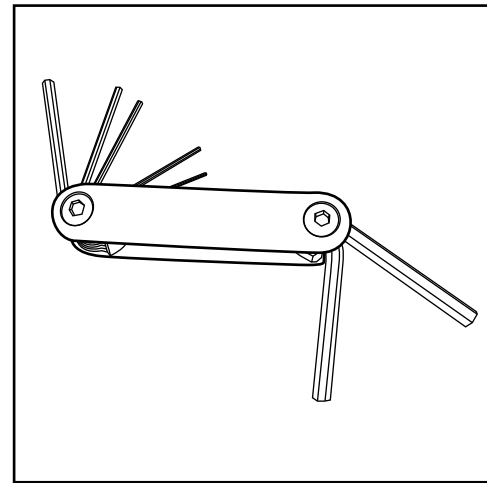


Hex Tool - Essential for Assembly

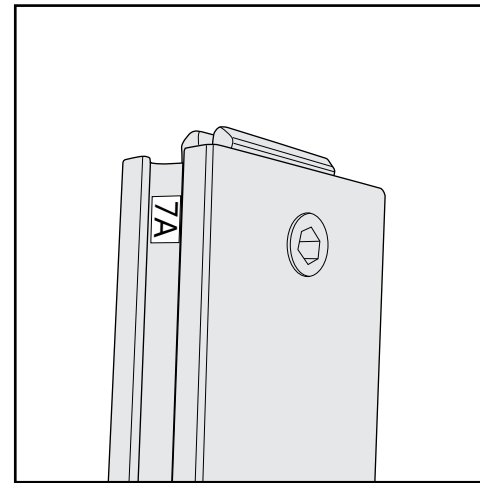


Part Identification - Numbering

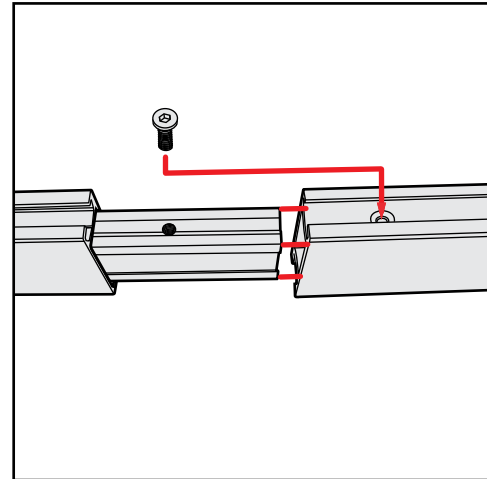


Spline Connection

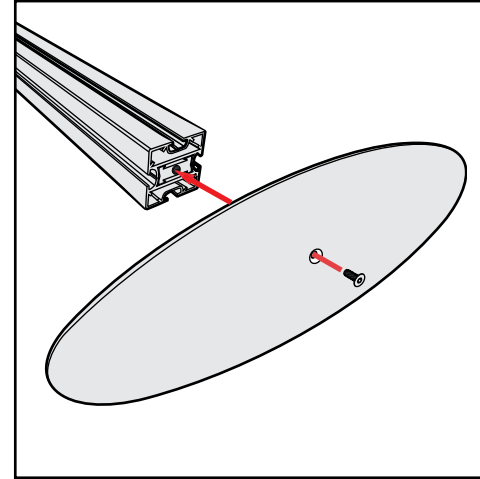

Base Plate & Extrusion Connection

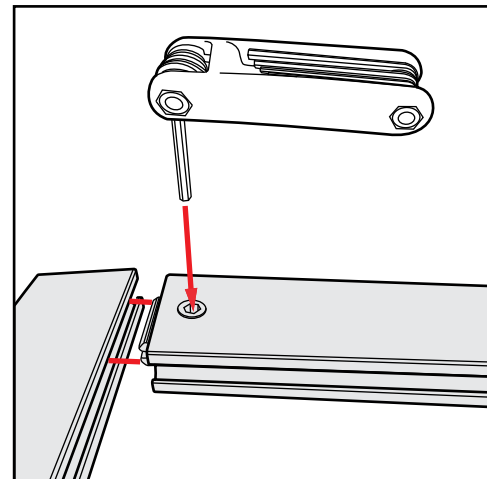

Extrusion & Lock Connection

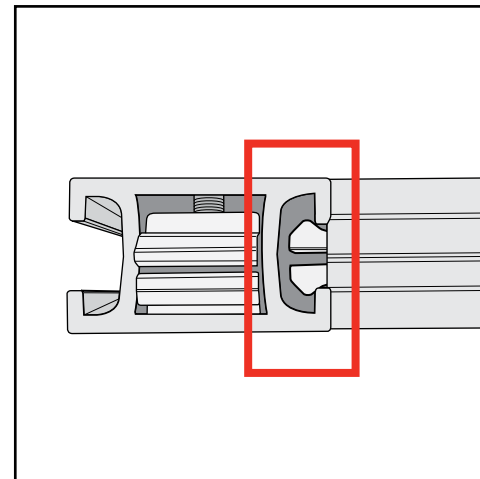


Engaged Lock



WARNING



DO NOT USE POWER TOOLS

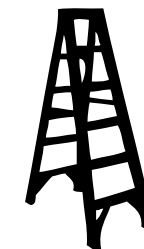


LADDERS OR LIFTS
MAY BE REQUIRED




ALL CONNECTIONS MUST
BE TIGHTLY SECURED


Top View of Each Level

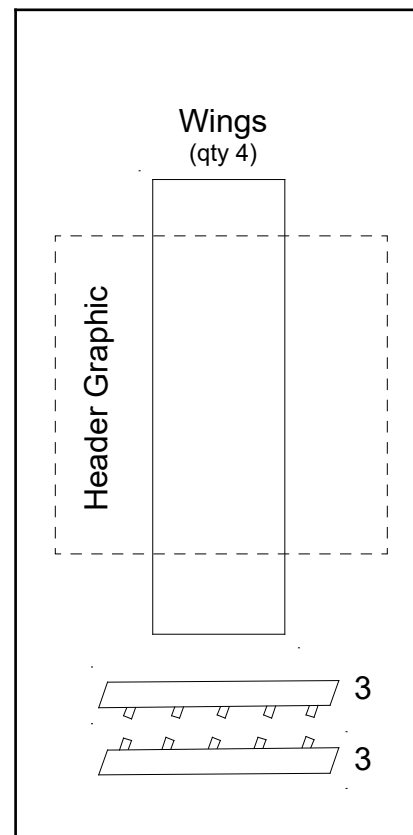

Level 1

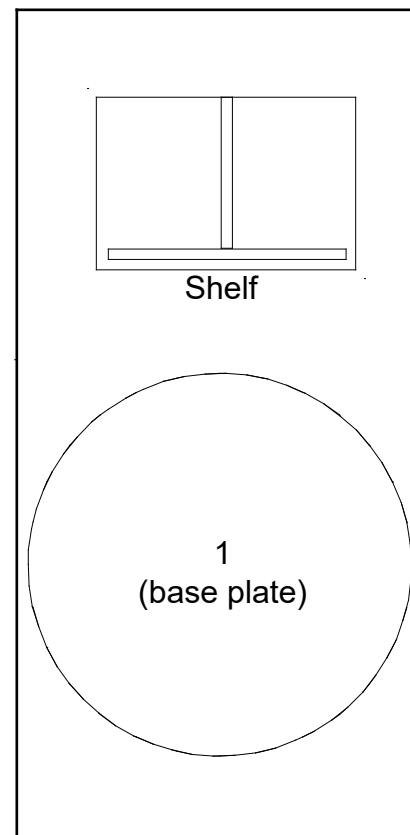

Level 2

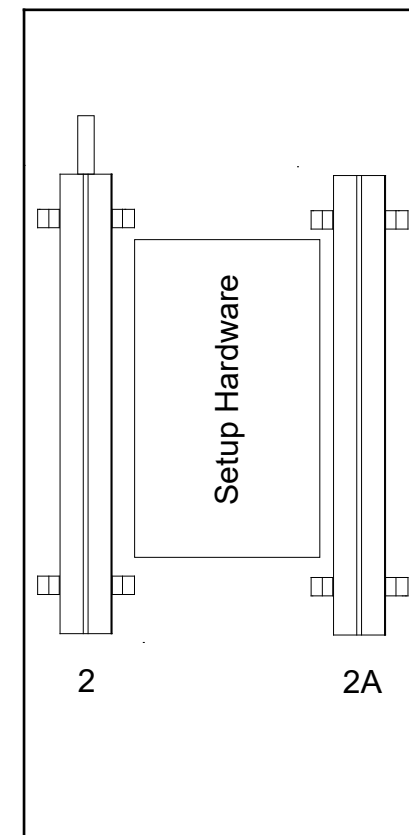

Level 3